



ASPIRE Gun LED Adapter Wire

The ASPIRE has a different connector layout for the LED gun lights. Adapter wires are required to make proper connection. The two connectors are located on the end of the board. The pins you should connect to are the two sets of pins closest to the Right speaker output. The positive red wire should connect to the top pin, the black ground should connect to the pin directly under it.

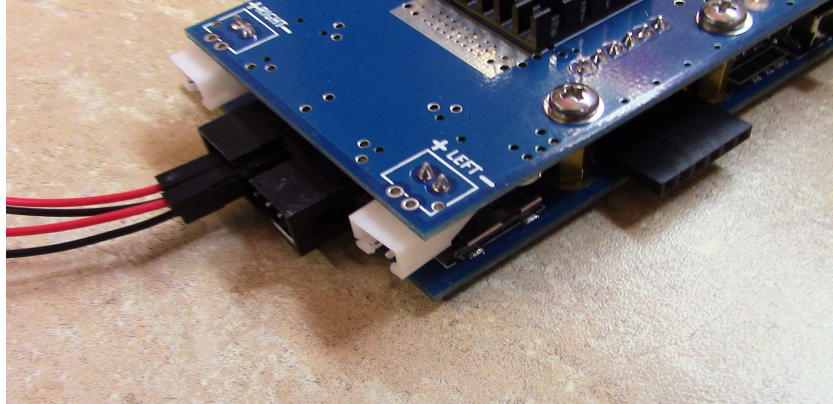

The other side of the wires connect to the red and black wires of the LED set.

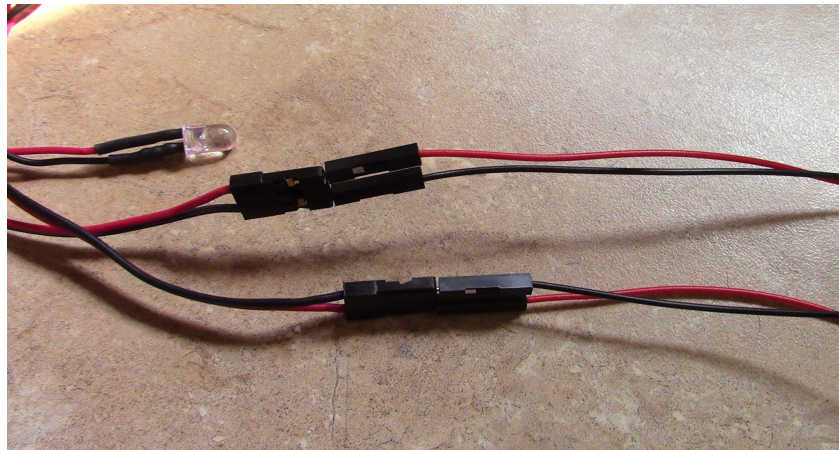

Your Gun LED set should now work properly and flash in sync with the gun fire sound.