



DIGI PILOT SIGN

TROUBLE SHOOTING

GUIDE

BY

TECHNO
SIGNZ




Table of Contents

<u>Digi Pilot Sign Part Names</u>	1
<u>Initial Troubleshooting Steps</u>	2
<u>Power Issues</u>	3
<u>Screen Issues</u>	4
<u>App Issues</u>	5
<u>Light Issues</u>	6
<u>Actuator Issues</u>	7
<u>Digi Pilot Sign Wiring</u>	8

**Thank you for purchasing the Digi Pilot Sign.
This document explains how to troubleshoot the Digi Pilot Sign.
For information about how to use the Digi Pilot Sign, please
refer to the Digi Pilot Sign User Manual supplied with your unit.**



Digi Pilot Sign Part Names

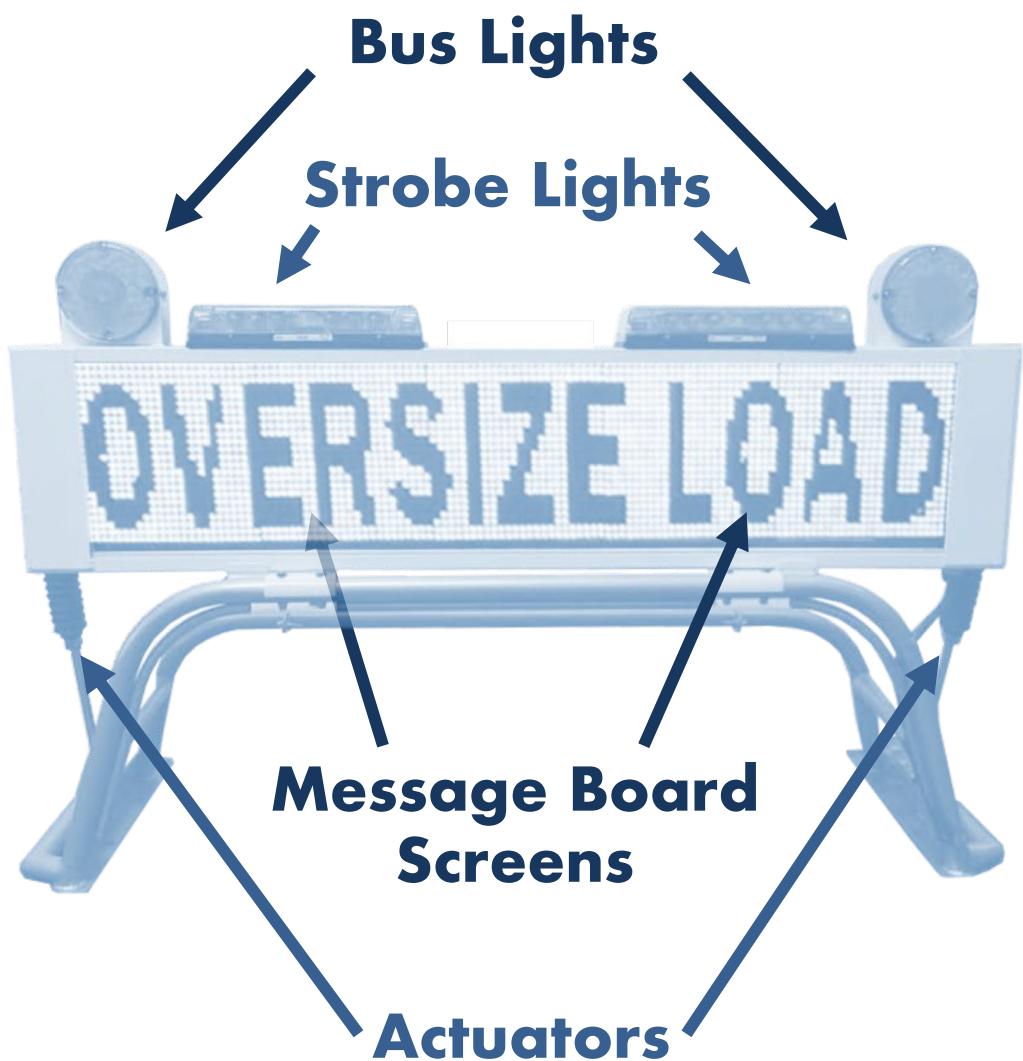



Initial Troubleshooting Steps

1st

Your first attempt at fixing any issues pertaining to your sign or app should be switching it off and then turning it back on, or deleting the app and then re-downloading it.

Turn sign on then off using the app. Then try turning sign on and off using the breaker located on the vehicle's 12V battery.

Hold your finger down on the app, and then slide the app to the trash or uninstall from the phone's settings menu, and download the app again from the Google Play Store.

If that doesn't work, continue on reading. Remember, to avoid voiding any warranty coverage, contact Techno Signz with the issue and do not open your sign without prior authorization.

2nd

Call or email Techno Signz Ltd at (780) 686-8604 or info@technosignz.ca to speak with a representative to get advice and authorization before opening the sign.



SIGN WON'T TURN ON

1st

Ensure vehicle is turned on & power cable is correctly attached.

12V vehicle battery may need extra power, so turn engine on ensure full battery capacity.

Follow power cable from sign to 12V battery to check for loose connections.

2nd

Ensure app is connected to the sign.

Ensure your Bluetooth & Wi-Fi settings are turned on, on your mobile device.

Go to your Wi-Fi connections, ensure your sign says connected.

Reset the sign's power breaker.

Open your vehicle's hood, locate your vehicle's battery, and there you will find the breaker.

3rd

Reset the power using the switch on the breaker.

Screen Issues

1st

**BLACK
SQUARES
APPEAR ON
SCREEN**

May be a
module failure.

Replace
module.

Usually it's a loose
connection or a
short in the input/output
connections.

Check
wires.

Check if
other
functions
work, like
lights or
actuators.

May be a
power failure.

Power supply problem,
may need replacing.

2nd
**ENTIRE
PORTION
OF SCREEN
GOES OUT**

3rd

**AN
INDIVIDUAL
LED GOES
OUT**

May be a
LED failure.

Check the light
bulb & tap on
bulb.

Entire module of LED's
may need replacing.

Check for
controller
beep when
you send it a
command.

When it is not from a
communication issue, it
may be a controller issue.

4th
**ENTIRE
SCREEN
GOES
BLANK**

Controller may
need replacing.



APP WON'T CONNECT

1st

May be a communication failure.

Make sure Bluetooth/Wi-Fi settings are on.

Try to connect using another phone to see if it's a phone issue.

2nd

Distance between transmitter & receiver may be too far or there may be obstructions.

Make sure sign is receiving power and is on.

3rd

Move closer to the sign & try to reconnect.

Wi-Fi/Bluetooth range can exceed 40m without obstructions in an open space.

However, many factors can impede this range. So try to connect standing next to your sign first.



Light Issues

STROBE LIGHTS DON'T WORK

1st

Press strobe light app button & listen closely if controller is beeping.

If yes, strobe lights' wiring may be faulty, fuse may be burnt or lights need replacing.

2nd

If no, there is a controller issue, so controller needs fixing or to be replaced.

Fuse located on Controller Board inside sign.

3rd

Press bus light app button & listen closely if controller is beeping.

1st

Fuse located on Controller Board inside sign.

2nd

If yes, bus lights' wiring may be faulty, fuse may be burnt or lights need replacing.

3rd

If no, there is a controller issue, so controller needs fixing or to be replaced.



Actuator Issues

ACTUATORS DON'T WORK

1st

Press actuator app button & listen closely if controller is beeping.

If yes, actuator wiring may be faulty, fuse may be burnt or actuators need replacing.

2nd

If no, there is a controller issue, so controller needs fixing or to be replaced.

Fuse located on Controller Board inside sign.

3rd

ACTUATORS MAKING LOUD NOISE

Spray lubricant onto actuator to facilitate actuator movement.

1st

2nd

If noise continues, actuator may be bent or faulty and need replacing.

PLEASE NOTIFY TECHNO SIGNZ IMMEDIATELY IF PROBLEM PERSISTS AS FAULTY ACTUATORS MAY LEAD TO CRACKING OF FRAME, AND MAY VOID WARRANTY.

TEMPORARY ACTUATOR REPLACEMENT

1st

Make sure sign is down. Remove electric actuators, by removing the pins & bolts.




Replace with manual actuators that are supplied with each unit.

2nd



Digi Pilot Sign Wiring

1st Like any wired device, if you follow the wires, it should lead you to the problem. For the Digi Pilot Sign, this is a simple chain of wires starting at the power source, columns of LED modules daisy chained together.

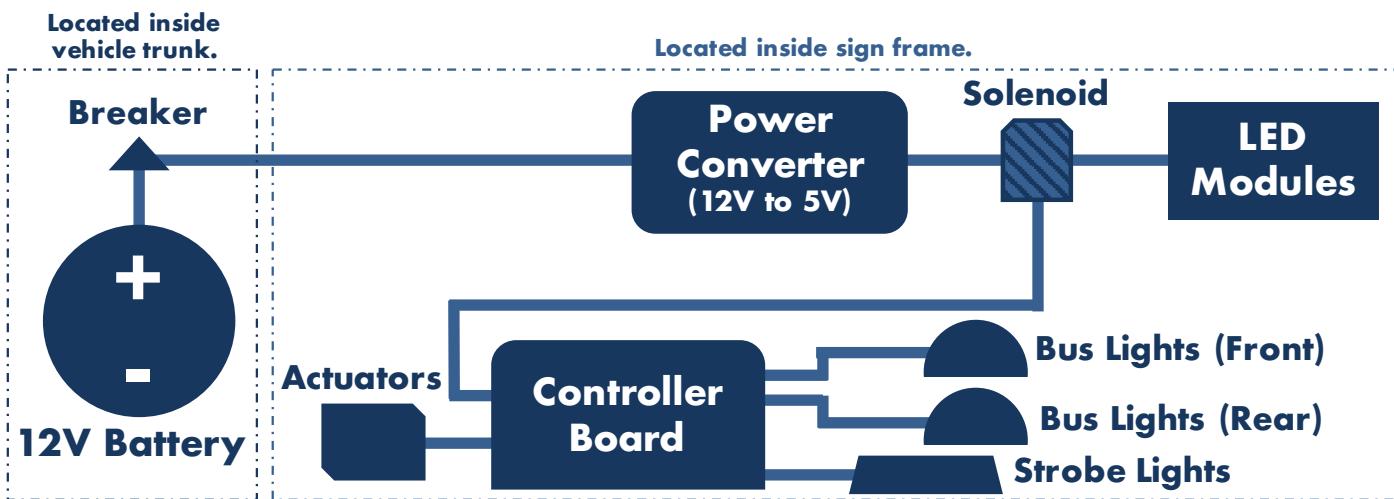

Start at the power source and follow the wires to each point, checking if there is any faulty wiring. Also, make sure the controller board beeps when Pressing any command button from the app. Then check the controller board for any burnt fuses, which may need replacing (one fuse for each function).

2nd



TechnoSignz.ca