



JTC-1037 BALL JOINT ANCHOR PIN PRESS SET

- Special designed for the removal and installation of press fit parts, such as all joints, universal joints and truck break anchor pins, without having to resort to makeshift methods.
- It contains heavy-duty C frame press, receiver tubes, installation and removing adapters.



JTC-1239 BRAKE SPOON

- Full length:1239A (85mm) /1239B (155mm)
- Designed to adjust brakes on most cars and light trucks.
- Universal angle design for most cars.



JTC-1517 HYDRAULIC BRAKE LINING RIVET MACHINE

- Suitable for 4, 6, 8mm and 6mm longer rivet.
- For brake lining riveting and replacing.
- Suggestion riveting pressure: 4mm (700psi), 6mm (150psi), 8mm (2200psi).
- Capacity of ram: 4 ton
- Air pump 8P101A is optional.



JTC AUTO TOOLS USA

678 - 876 - 3470
 2600 NORTHLAKE DR., SUITE F,
 SUWANEE, GA, 30024



JTC-1912 BRAKE SPRING PLIERS

- Tool removes and installs to return springs on most drum brakes.
- Socket end removes spring from anchor stud.
- Notched end installs spring on anchor.



JTC-4045 UNIVERSAL ADJUSTABLE WHEEL BEARING LOCK NUT TOOL KIT

- Adjustable jaws with locking feature to suit both hexagon and octagon wheel bearing lock nuts.
- Includes three sets round & three sets square of pins to suit lock nuts with pin holes.
- Suitable for 6Pt lock nut 1-3/4" to 5-1/4" (49-135mm) across the flats and 8PT lock nut 1-3/4" to 5-5/8" (49-143mm) across the flats.
- 3 set round pin : 1/4" (6mm), 5/16" (8mm), 3/8" (10mm)
- 3 set square pin : 1/4" (6mm), 5/16" (8mm) , 3/8" (10mm)



JTC-4225 VOLVO BALL JOINT INSTALLER AND REMOVER SET

- Special designed for lower control arm ball joint removal and installation.
- With 3 adapters: M12 x 1.75 , M14 x 1.5 , M14 x 2.0 (removing)
- Please use with slide hammer (JTC-2503) which is optional and not included in the set.
- Applicable: VOLVO S60(01~10), S80(99~06), V70(00~07), XC70(02~07), XC90(03~), XC60(09~)
- VM number:9995796



JTC AUTO TOOLS USA

678 - 876 - 3470

2600 NORTHLAKE DR., SUITE F,
SUWANEE, GA, 30024



JTC-4268 HUB CAP PLIERS

- Professional tool for removing the hub cap of automobile.
- Avoid to use this tool for the truck over 4 ton, as it was fixed by bolt.
- Length : 475mmL
- Range: 35-120mm



JTC-4424 3 PCS TUBE REM OVER

- Size: 6 x 8, 10 x 12, 15 x 16mm.
- Use for removing the adapter of break tube in the mid-size car.



JTC-4425 TUBE REM OVER 13 X 14

- Use for removing the adapter of break tube in the mid-size car.
- Size: 13 x 14 mm.



JTC AUTO TOOLS USA

678 - 876 - 3470

2600 NORTHLAKE DR., SUITE F,
SUWANEE, GA, 30024



**JTC-4818 DIESEL INJECTOR TEST AND CALIBRATING
HAND PUMP**

- Material :Aluminum alloy (A356)
- 3.5 inch dial gauge reading 0-600 bar also reading 0-8700 lbs. /sq.Incg
- The liquid tank is provided with a filter.
- Supplied with M14xM14 and M14xM12 pipes.



JTC-5342 1" TORQUE MULTIPLIER

- Gear ratio: 1:56
- Input Drive Square: 1"
- Output Drive Square: 1"
- Max. torque output: 3,200Nm
- Includes an extension bar and a wrench.



JTC-5573 TRUCK ADJUSTABLE BEARING INSTALLER

- Designed to install the wheel-bearing cups in a wide range of heavy-duty axles.
- A very easy and convenient tool to install various bearing cups.
- Capacity: 95-155mm



JTC AUTO TOOLS USA

678 - 876 - 3470

2600 NORTHLAKE DR., SUITE F,
SUWANEE, GA, 30024




JTC-5574 TRUCK BEARING RACE & OIL SEAL INSTALLER

- Specially designed for installing the bearing races and oil seal.
- Use the tapered driver side for bearing race and the flat side for oil seals.
- Including 6 drivers and an extension handle for deep brake drums without removing the drums.
- Driver size:
3-43/64", 4-7/8"
4-13/16", 5-1/2"
5-25/32", 6"



JTC-5576 TRUCK BRAKE SPRING REMOVER/INSTALLER

- Provide a safe way to replace the brake shoes on heavy-duty tractors and trailers.
- By using the leverage to remove and install the brake shoes.
- Applicable: S-cam air brake spring.

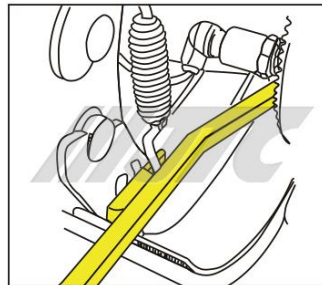

JTC AUTO TOOLS USA

678 - 876 - 3470

2600 NORTHLAKE DR., SUITE F,
SUWANEE, GA, 30024