LANDING/TAXI LIGHT ALIGNMENT

- 1. Aircraft Configuration.
- 1.1. Fuel full tanks including aux. tanks.
- 1.2 Strut and tires inflated per specification.
- 1.3 Remove lens
- . 2. Alignment Procedure.
 - 2.1 Locate aircraft on flat/level surface 30 1 foot from vertical wall aligned toCL mark -linch as shown in Figure 1.
 - 2.2 Verify both lights 33- 1 inch from floor.
 - 2.3 Align lights to Figure 1.
 - 2.4 Verify adjustment screws within adjustment range, install lens.

