



- Parts List**
1. Barrel
 2. Wedge
 3. Wedge Screw
 4. Front Sight
 5. Recoil Shield
 6. Cylinder Arbor
 7. Frame Plate
 8. Ratchet
 9. Retaining Collar
 10. Retaining Collar Pin
 11. Cylinder
 12. Nipples (5)
 13. Frame
 14. Trigger Screw
 15. Trigger
 16. Bolt
 17. Bolt Screw
 18. Trigger Actuating Bar
 19. Trigger Actuating Bar Screw
 20. Frame Plate Screws (2)
 21. Hammer
 22. Hand
 23. Hammer Screw
 24. Stirrup
 25. Stirrup Pin
 26. Recoil Shield Screws (2)
 27. Mainspring
 28. Hand Spring
 29. Hand Spring Screw
 30. Trigger & Bolt Spring
 31. T&B Spring Screw
 32. Upper Trigger Spring
 33. Upper Trigger Spring Screw
 34. Butt Screw
 35. Backstrap
 36. Backstrap Screws (2)
- Wood grips (one piece) are not shown.

THE PATERSON COLT

Disassembly—To remove barrel (1) from frame (13) remove wedge screw (3) and drift wedge (2) out of barrel from right to left. Pull barrel forward off frame and cylinder arbor (5); remove cylinder from arbor. Ratchet (8) and collar (9) are removed from arbor by drifting out retaining pin (10). Unscrew frame plate screws (20) and remove frame plate (7) from top of frame. Unscrew backstrap screws (36) and butt screw (34) and remove backstrap (35) from frame with one-piece wood grips attached. Unscrew hand spring screw (29) and remove hand spring (28) from rear of frame. Press in mainspring (27) and disengage stirrup (24) from top end of mainspring. Unscrew hammer screw (23) and remove hammer (21) and hand (22) from frame. Unscrew trigger and bolt spring screw (31) and remove spring (30). Unscrew trigger screw (14), actuating bar screw (19) and bolt screw (17) from right side of frame. Trigger (15), bolt (16) and actuating bar (18) may be removed from frame. Reassemble in reverse order.

