



User Guide

I. Outer Configuration

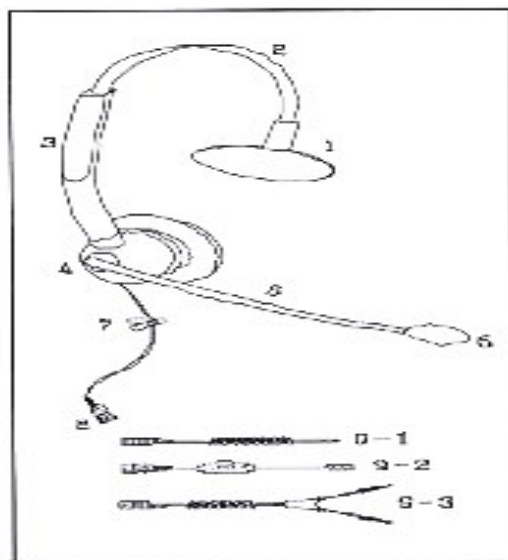

- 1: T-Pad
- 2: Headband
- 3: Adjustable Pole
- 4: Speaker
- 5: Swing boom
- 6: Microphone
- 7: Clip
- 8: QD Connector
- 9-1: RJ9 Plug
- 9-2: USB2.0 Plug
- 9-3: 3.5mm Stereo Plug

II. Headband

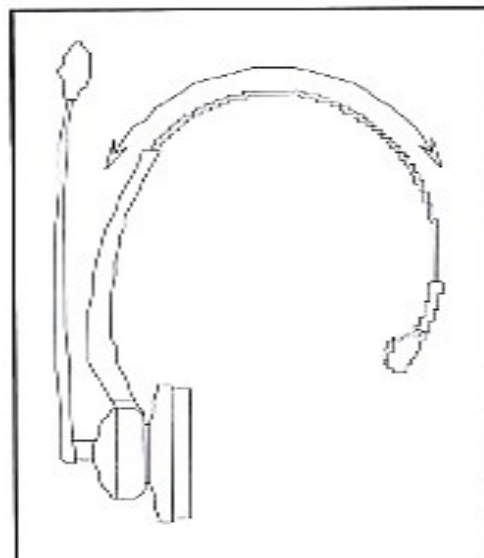


Headband can be adjusted max. at 50mm to meet different people's requirements for comfort wearing.

BUY ON

www.cablematic.com


III. Boom Arm

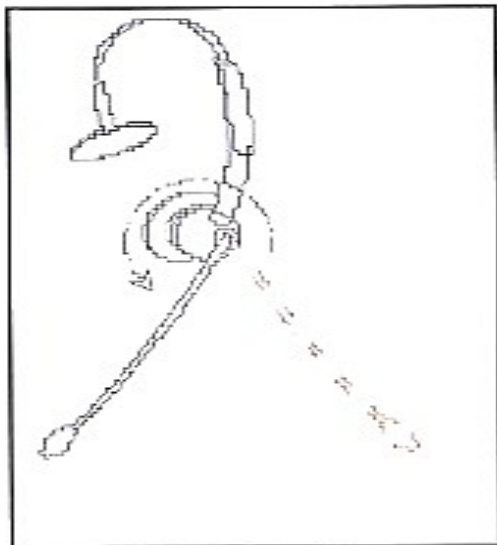

Swing boom is 330° rotatable. Position the microphone boom to leave a width of finger between the lower lip and microphone for best communicating position.

Notes: Don't rotate the boom over 330°!

IV. Speaker

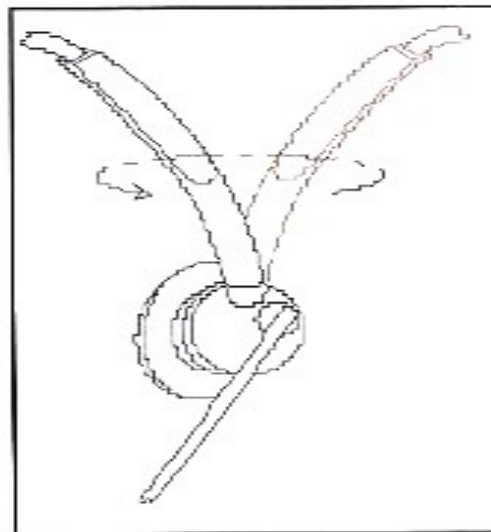

Speaker assembly jointed with the headband is rotatable max. at 180° to adjust the ear cushion for comfort wearing.