

# Preface

## Attentions:

Welcome to use our network video recorder. For your secure using, please read this user manual carefully. The following contents are about the proper use of the product, the prevention of danger and loss of property etc. Please be sure to abide.

### 1. Installation Environment:

- Please place and use this product in the environment with temperature 0°€50°Ç
- The device should be placed horizontally when it is being installed and used, avoid lean or inversion;
- Do not place or install it in the high temperature, wet, dusty and sooty places.
- Keep the device away from water drop or splash. Don't put any object with liquid inside like flower vase or any other object on the device.
- To ensure the normal heat dissipation of the device, there is a fan installed inside the device. The device should be installed in well-ventilated environment;
- The back of the DVR should be away from other devices or the wall above 6cm in order to release heat;
- If the device is used in the regions with much thunder, please install lightning protection device to avoid host or hardware breakdown by lightning stroke.

### 2. Attentions:



- Do not touch the power switch and the NVR by wet hands or wet objects, in order to avoid electric shock;
- After installing the host, please make sure that the host and the chassis are connected to the ground in order to avoid video and audio signal interference and damaged by static electricity;
- Ensure the voltage stability of the power supply of the NVR. Use the power input with stable voltage value and little wave interference rather than shutdown the NVR by disconnecting the main switch directly;
- Do not drop any liquid or metal on the NVR in case short circuit inside or fire;
- The device does not include any hard disk, and you need to properly install

the hard disk before using it, otherwise, you cannot record and playback the video;

- The dust on the mainboard will cause short circuit when it is damp. In order to ensure the long-term normal working, you should regularly dedust the mainboard, connectors, chassis, fan and so on by a brush;
- Do not disconnect the power switch directly when you want to shutdown the NVR. You should use the shutdown button on the panel in order to avoid damage to the hard disk;
- The device system supports HDD format function. If the HDD has been used, please take note that if it is with FAT 32 format. This NVR only supports HDD with FAT 32 format;
- Do not open the device when it is connected with electricity; ;
- To ensure the integrity of the recording data, please replace the hard disk when it is damaged (there is disk error record in the log information).

**3. Note:**

- The user manual is for reference only. The real object is the standard;
- The products will be updated at any time. It is subject to update without notice.
- Please contact our technical department for the latest programs and additional documentation.
- If there is any doubt or dispute, our company reserves the right of final explanation.

This user manual offer references to multi-series products. The specific operation of each product will not be listed one by one. Please contact our technical department when you have any question.

## Contents

Chapter 1: Product Instruction .....	5
1.1 Product Summary.....	5
1.2 Main Functions of Product.....	5
Chapter 2: Installation Instruction.....	6
2.1 Open-case Inspection.....	6
2.2 HDD Installation.....	6
Chapter 3: Local Operation Guide .....	7
3.1 Start/Shutdown System.....	7
3.2 System Login.....	7
3.3 Menu Operation.....	8
3.3.1 Start Setup .....	8
3.3.2 How to connect NVR with IP CameraAt first, set IP camera parameter.....	8
3.3.3 Display Setting.....	11
3.3.4 PTZ Setting.....	11
3.3.4.1 PTZ Control.....	12
3.3.4.2 PTZ Setting.....	12
3.3.5 System Setting.....	13
3.3.5.1 Device Parameters .....	13
3.3.5.2 Channel Parameters.....	14
3.3.5.3 Network Parameters .....	16
3.3.5.4 Alarm & Exception.....	18
3.3.5.5 Account Parameters.....	19
3.3.5.6 HDD Settings.....	19
3.3.5.7 System Management.....	19
3.3.5.8 Device Log.....	20
3.3.6 Playback.....	20
3.3.7 Record Backup .....	21
3.3.8 Manual Record.....	22
3.3.9 Alarm Information.....	22
3.3.10 Capture.....	23

---

3.3.11 File Manager.....	23
Chapter 4: Network Operating Instruction.....	24
4.1 WEB Browser Operating Instruction.....	24
4.1.1 Network Connection.....	24
4.1.2 ActiveX Control Installation and User Login and Logout.....	24
Chapter 5: Mobile Viewing Operating Instruction.....	25
5.1 Client Software Obtaining.....	25
5.2 The Parameter Settings of the NVR which Supports Mobile Surveillance .....	25
5.3 Android Mobile System.....	26
5.4 Blackberry Mobile System.....	27
5.5 Symbian Mobile System.....	29
5.6 Windows Mobile System.....	30
5.7 iPhone Mobile System.....	31
Chapter 6: Appendix .....	34
6.1 HDD Capacity Calculation Method for Reference.....	34
6.2 Remote Control Operation .....	36
6.3 Technical Data.....	37
6.3.1 1.5U 720P/1080P Economic NVR Series .....	37
6.3.2 2U 720P/1080P Economic NVR Series.....	39
6.3.3 1.5U/2U 1080P Professional NVR Series.....	40
6.4 Trouble Shooting .....	42
Chapter 7: DVR/NVR IE Viewing Operation Instruction for ADSL Mode.....	43
7.1 DVR setting .....	44
7.2 Router Setting.....	45
7.3 IE Login Operations .....	46
Appendix—FAQ of NVR .....	46

## **Chapter 1: Product Instruction**

### **1.1 Product Summary**

This device is a video coding and recording product specially designed for the video monitoring field, combining with H.264 video compression, large capacity HDD storage, TCP/IP network, embedded Linux operating system and other various advanced electronic information technologies, realizing high-quality image and low bit rate recording features and favourable system stability.

The device meets the standard of GB 20815-2006 "Video Security Surveillance Digital Video Device" issued by the government. This device has functions including recording, playback and monitoring simultaneously, realizing synchronous video and audio, with advanced control technology and powerful network data transmission ability.

### **1.2 Main Functions of Product**

The following functional characteristics will be different due to the different series of products and their different hardware versions.

- Real-time Monitoring
- Compression Processing Function
- Recording Function
- Video Playback and Backup
- Camera Control
- Alarm Management and Control
- Communication Port
- Network Function

## **Chapter 2: Installation Instruction**

### **2.1 Open-case Inspection**

When you receive the product, please check all the things according to the NVR packing list in the box.

### **2.2 HDD Installation**

Installation Preparation:

Need one cross screwdriver. This series of HDD NVR can install 2 to 8 pieces of HDD inside, and the capacity of each HDD can be up to 2TB.

HDD Installation Steps:

- Twist off the screws on the side panel of the case and then open the cover of the chassis.
- Fix the HDD on the HDD screw whole sites of the baseboard with screws.
- Connect the HDD data cable and power cable.
- Cover the case, fix it with screws.

## Chapter 3: Local Operation Guide

### 3.1 Start/Shutdown System

#### 3.1.1 Start System

Plug power cable, press power switch, the power led will be on and the NVR will start. After booting, the video output default to multi-window output mode. If the booting time is within the record setting time period, the system will auto enable the record function.

**Notice:** Please use the NVR matching power supply instead of any other power supply of any other type or brand.

#### 3.1.2 Shutdown System

- Click  → click Shutdown. (Note: this method is suggested when shutdown device in order to avoid damage to the device from electricity cut-off by accident).
- Long press the power key on the front panel can shutdown the system(the user should have shutdown authority)

**Notice:** Before changing the HDD operation, you should shutdown the device and cut the power supply first and then operate.

#### 3.1.3 Power Failure Recovery

When the NVR is under the recording status, if the system power is cut off or the device is shut down forcefully, after reconnected with the power supply, the NVR will auto-save the video before cutting and auto-recover to the previous status and continue to work.

### 3.2 System Login

After normal booting, single-click  or press the OK key on the remote control to pop-up the login dialog box, user input the user name: admin and password blank(default to be blank) in the input box.

## 3.3 Menu Operation

### 3.3.1 Start Setup

Click  , and the interface will display:



- 1) Shutdown: Click “Shutdown” button, the device
- 2) Reboot: Click “Reboot” button, the device will reboot.
- 3) Click “Login” button to login the system. User name: admin, password: blank by default;
- 4) Lock: Click “[\*] Lock”, the menu will be locked.

### 3.3.2 How to connect NVR with IP Camera

**At first, set IP camera parameter:**

This device supports multi-version Onvif protocols, compatible with main brand IP cameras. Take below brands as example:



Before connect the IP camera with NVR, please make sure that the IP addresses of the IP camera and the NVR are in a same network section, and the main stream and sub stream are adjusted to be the suggested values (main stream: 2048k, sub stream: 512k), otherwise, these problems may appear: the NVR cannot search the IP camera, the image cannot be connected, the image is not fluent, the image quality is bad and so on.

Connect the NVR with the network cable, and the switch in the LAN. After




booting, click  and enter the system configure interface to set the network parameters including the IP address, subnet mask, network gateway of the NVR. User can run the command ping through the PC in the LAN to ping the IP of the NVR to see if the NVR has connected with the LAN.




Then click the right mouse button and appear the below menu:


Click “IP Channel Setting” and will appear below interface:

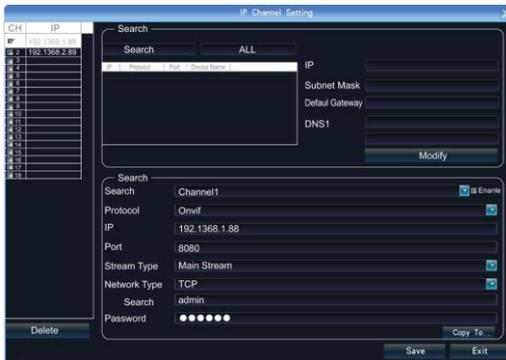

To connect IP camera, click “Search”, NVR will auto search the IP cameras in LAN, then it will appear IP camera list:

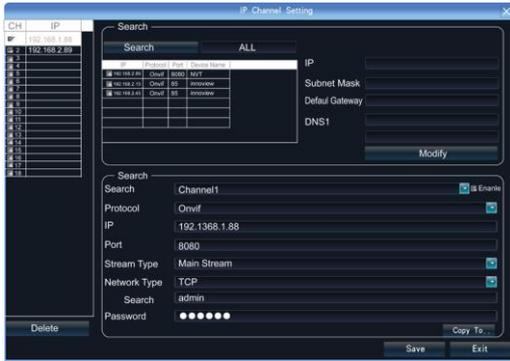

To connect certain IP camera, please select the IP camera in the below list and double-click it, the NVR will auto fill in the IP, protocol, port of the IP camera in the above input box. Then manually input the user name and password of this IP camera and click save, then the image of the IP camera will appear in the channel.

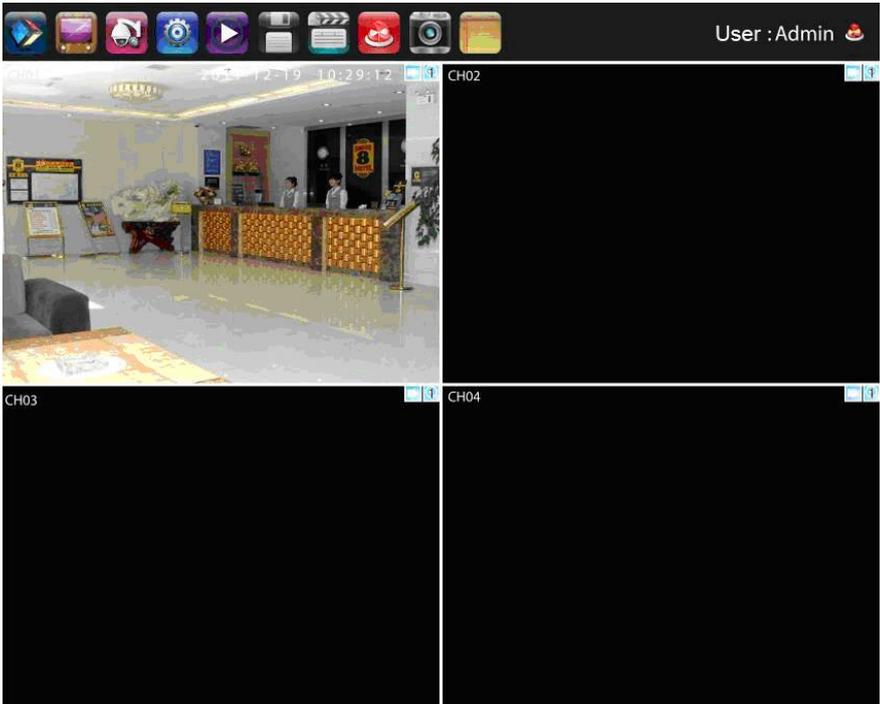

You can also manually input the IP camera information instead of auto searching the IP and then click save.

Below are some main functions of the NVR:

The menu consists of display setting, PTZ, setting, playback, record, alarm, capture and file manager etc.


The device enters the real-time monitoring screen after normal booting. There are superposed date, time, and channel name of every channel. Icons of record, 3D positioning and alarm status will appear in the right upper corner.

### 3.3.3 Display Setting



Click  , the interface on the right will show:

- 1) Resolution: select the most appropriate resolution as needed;
- 2) Language: Different languages for selection (For example: Simplified Chinese, Traditional Chinese and English).
- 3) Skin: There are original version and blue for selection.
- 4) Screen mode: there are different screen modes for selection, for example, 1 screen, 4 screens, 9 screens and so on.
- 5) Rotation Interval: Setup the time interval of rotation. Tick “Enable SEQ” to start rotation.

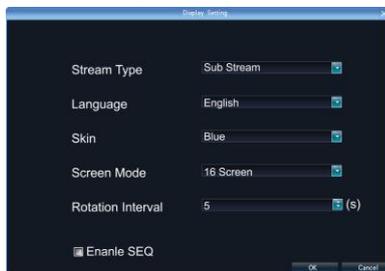

(Note: the rotation function can only be enabled under 1 screen)

### 3.3.4 PTZ Setting



Click  will show the below interface:



### 3.3.4.1 PTZ Control

Before starting the PTZ control, please firstly confirm the PTZ parameter settings, PTZ protocol and the correct connection of the 485 control line etc.


After setting the parameters, select the channel which you want to control in the preview interface, then control the left-handed rotation, right-handed rotation, up regulation, down regulation of the lens; zoom in and zoom out of the focal length; zoom in and zoom out of the focal point; zoom in and zoom out of the iris; setting of the PTZ speed.

### 3.3.4.2 PTZ Setting

1) Preset setting: first turn the camera to the needed position through the direction buttons of the PTZ control, then select a preset number, and click “Settings” button. “Preset” call: select a preset number which needs to be called, and click “Call” button.

2) Cruise setting: select a cruise number, click “Settings”, as shown in the below interface:

➤ In the cruise setup interface, select preset point, cruise time, cruise speed, click “Add” button, then the preset point of the cruise path is added successfully (multi-preset points can be added). Click “Delete” button can delete the preset point of the cruise path.

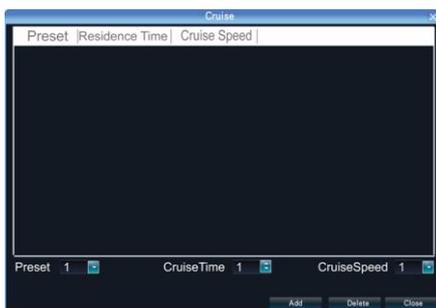

➤ “Cruise” call: select a cruise number click “Call” button.  
➤ “Cruise” delete: select a cruise number, and click “Delete” button.


3) “Track” setup: select a track number, and click “Set” button, then start the PTZ control operations, and then click “Stop”, and the track is remembered successfully.

4) “Track” call: select a track number, and click “Call” button.

### 3.3.5 System Setting



Click  , and the below interface will show:

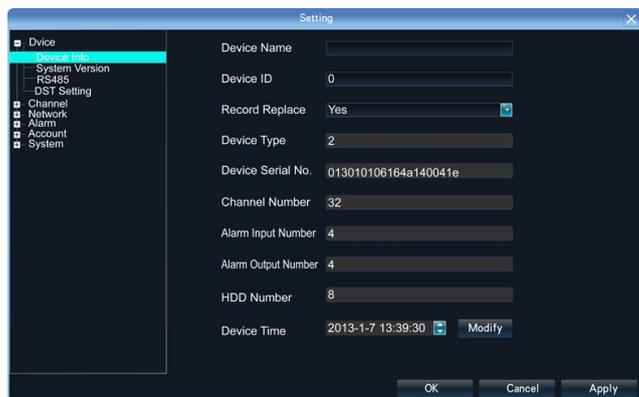

#### 3.3.5.1 Device Parameters


**[Device Info]** Check and modify the basic information of the device.

**[System Version]** Check the basic information of the device system.

**[RS232]** Can set RS232 serial port.

**[RS485]** Can set the RS485 serial port.

**[DST Setting]** Tick “DST” check box, then click the set button to set the start time and end time of DST.

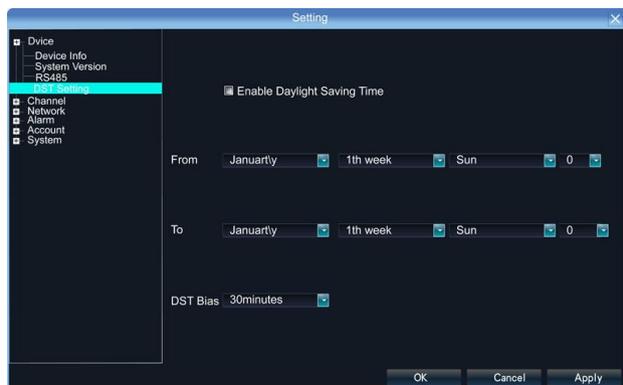

### 3.3.5.2 Channel Parameters

**[Display Settings]** The configuration parameter of every channel can be modified.

- 1) Camera Name: You can modify the name of the specified channel.
- 2) Time Format: You can select different time formats for the specified channel.
- 3) Date Format: You can select different date format for the specified channel.
- 4) Display Week: Can select different week display status for the specified channel.
- 5) OSD Position: You can select any position for the OSD of the specified channel.
- 6) Display Parameters: Can set the brightness, contrast, saturation and hue for the specified channel.
- 7) Video Format: There are PAL and NTSC for selection.
- 8) Copy To: Copy the configuration parameters to other channels.

**[Video Parameters]** The setting parameters of every channel can be modified.

- 1) Encoding Type: Main Stream (Normal), Sub Stream, Main Stream (Event) for selection.
- 2) Stream Type: Video, Video&Audio for selection.
- 3) Resolution: There are CIF/QCIF/4CIF/2CIF main stream resolution types for selection..
- 4) Bitrate Type: Constant and Variable for selection.
- 5) Frame Rate: Select different value from the drop-down list, the default value is "Full Frame".
- 6) Video Quality: Select different image quality as needed, it is default to "Highest".
- 7) Copy To: Copy the configuration parameters to other channels.

**[Schedule Record]** You can set different types of record plan for each channel.

- 1) Enable Recording: Tick the small box before "Enable Recording" will start recording.
- 2) All Day Recording: Tick the small box before "All Day Recording" to start all day recording, then you can select schedule recording, motion recording,

alarm recording, command recording etc.

- 3) Record Time: You can setup by 8 separate time periods.
- 4) Advanced Settings: You can set the prerecord time and post record time.
- 5) Copy To: Copy the configuration parameters to other channels.

**[Motion Detection]** The parameters of each channel can be modified.

- 1) Area settings: Select the motion detection area, press the left mouse button and drag to the area which you want to set motion detection, click OK.
- 2) Alarm Schedule: Set the time intervals of alarm.
- 3) Linkage: Select the linkage way which you need.
- 4) Copy To: Copy the configuration parameters to other channels.

Onvif protocol does not support above function

**[Video Lost]** Can modify the parameters of each channel.

- 1) "Alarm Schedule": Set the time intervals of alarm.
- 2) "Linkage": Select the linkage way which you need.
- 3) "Copy To": Copy the configuration parameters to other channels.

Onvif protocol does not support above function

**[Video Tampering]** The parameters of each channel can be modified.

- 1) Area settings: Select the motion detection area, press the left mouse button and drag to the area which you want to set motion detection, click OK.
- 2) Alarm Schedule: Set the time intervals of alarm.
- 3) Linkage: Select the linkage way which you need.
- 4) Copy To: Copy the configuration parameters to other channels.

Onvif protocol does not support above function

**[Video Mask]** The parameters of each channel can be modified.

- 1) Area settings: Select the motion detection area, press the left mouse button and drag to the area which you want to set motion detection, click OK.
- 2) Copy To: Copy the configuration parameters to other channels.

Onvif protocol does not support above function

### 3.3.5.3 Network Parameters

**[Network Settings]** The network basic parameters of the device can be modified.

- 1) NIC Type: there are different network card types for selections.
- 2) IP: enter corresponding numbers to modify the IP address.
- 3) Obtain Auto: Auto search IP function. When open DHCP, the IP/Subnet Mask/Default Gateway cannot be set; If the current DHCP is valid, then the IP/Subnet Mask/ Default Gateway will show the value obtained by DHCP; if the current DHCP is invalid, IP address etc. will show 0.
- 4) Device Port: Enter the corresponding device port.
- 5) Subnet Mask: Enter the corresponding IP subnet mask.
- 6) Default Gateway: Enter the corresponding gateway address.
- 7) MAC: Display the MAC address current network port.
- 8) HTTP Port: It is default to 0.
- 9) Multicast: Enter the corresponding multicast address.
- 10) Enable Wi-Fi: Tick the box before “Enable Wi-Fi” and click “Wi-Fi”, and enter the following interface:



Click “Refresh”, and find the WiFi router and double click. Then input the ip address, subnet mask, default gateway, DNS server address1 and DNS server address 2.

- 11) Enable 3G: Tick the box before “Enable 3G”, click “3G” to enter the following interface:
  - a. The access number of the China Unicom is \*99# APN address is: 3GNET.

- b. The access number of the China Telecom is #777 APN address is blank.
- c. The access number of the China Mobile is \*99\*\*\*1# APN address is blank.

12) Advance:

- DNS Server Address1: The IP address of the DNS server.
- DNS Server Address2: The standby IP address of the DNS server.
- Alarm Host IP: Enter the IP address of the alarm host.
- Alarm Host Port: Enter the port of the alarm host.
- Enable PPPOE: you can enable the PPPOE service:
  - ✓ Input the PPPOE user name.
  - ✓ Input the dynamic address of the device.
  - ✓ Confirm password.

**[DDNS Settings]** Through the DDNS server, there should be a PC with fixed IP address on the internet and run this DDNS server on this PC.

- 1) Select DDNS server type (There are IP Server, Dyn dns, Peanuthull for selection).
- 2) Input the server name.
- 3) Input the port.
- 4) Input the user name.
- 5) Input the password.
- 6) Confirm the password.
- 7) Input the standby domain name.

**[NTP Settings]** Enable NTP timing.

- 1) Server Address: Input the IP of the NTP server.
- 2) NTP Port: This SNTP only supports TCP transmission. It is default to 123.
- 3) Synchronize every: Input the time interval needed to be adjusted.
- 4) Select Time Zone: Select the time zone of different places.
- 5) GMT: You can do fine adjustment of time.

**[Email Settings]** Setup E-mail.

- 1) Email Address: Input the email address.
- 2) Password: Input the email password.
- 3) PWD Confirm: Confirm the password.

- 4) Receiver: Input the email address and user name of the receiver.
- 5) Interval: Select the interval of sending email.
- 6) SMTP Server: Input the SMTP server address.
- 7) Port: Input the SMTP server port.

### **3.3.5.4 Alarm & Exception**

**[Alarm Input]** Setup alarm input.

- 1) Alarm Schedule: Set the time intervals of alarm.
- 2) Linkage: Select the way of linkage. PTZ linkage: select the channel number and the action for linkage (preset, patrol, and pattern) to the specified point and click ok.
- 3) Copy: Copy the configuration to the other channels.

**[Alarm Output]** Setup alarm output.

- 1) Alarm Schedule: Set the time intervals of alarm.
- 2) Linkage: Select the way of linkage.

**[Exception]** Setup abnormality


- 1) HDD Full: When there is no space in the HDD, it can trigger corresponding linkage type.
- 2) Disk Fault: When there is HDD read and write fault alarm, it can trigger corresponding linkage type.
- 3) Network Broken: When there is network broken alarm, it can trigger corresponding linkage type.
- 4) IP Address Conflict: When there is network IP conflict alarm, it can trigger corresponding linkage type.
- 5) Illegal Access: When there is illegal access alarm, it can trigger corresponding linkage type.
- 6) Video Output Standard Mismatch: When the input and output format do not match the setting format, it can trigger corresponding linkage type.
- 7) Video Signal Exception: When there is video signal abnormality, it can trigger corresponding linkage type.

### 3.3.5.5 Account Parameters

**[Account Setting]** You can add user, modify user, set user authority, delete user.

- 1) Add User: You can set user name, password, confirm password, user type and bind the IP address.
- 2) Modify User: You can modify the user name, password, confirm password, user type and bind the IP address.
- 3) User Privilege: You can setup the privilege of the new added user.
- 4) Delete User: Delete the new added user.

**[User Online]:** View the user connected with the NVR, logging way, logging time and IP address.

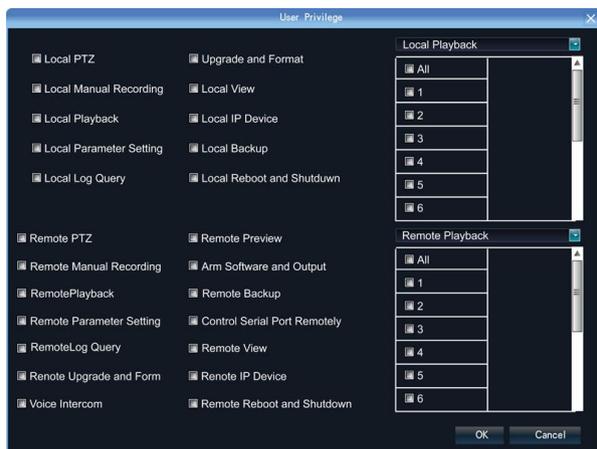

### 3.3.5.6 HDD Settings

You can format the HDD and view the HDD capacity, the free space and status etc.

### 3.3.5.7 System Management

**[Update]** Insert the USB storage device into the NVR, click “Browse” to find the upgrade file, and click “Upgrade”.


**[Auto Reboot]** You can select every day, every week, once and disable to

maintain the system.

[Stream Info.] You can view the main stream and sub stream of each channel.

### 3.3.5.8 Device Log

You can search the logs according to different types and different date and time, as shown in the above picture.

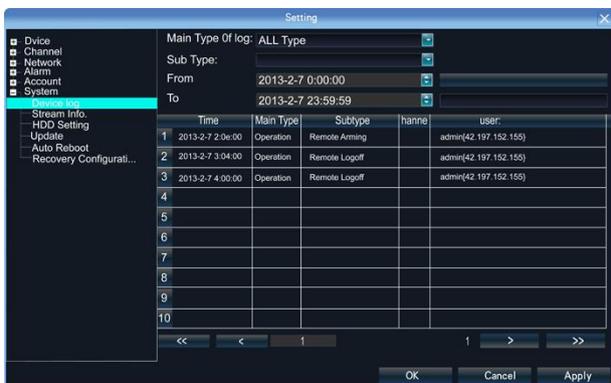


1. Main Type of Log: There are All Type, Alarm, Exception and Operation for selection.
2. Sub Type: According to different main types, there are corresponding sub types for selection.
3. From: You can select the start time of a log you want to search.
4. To: You can select the end time of a log you want to search.
5. Export: You can export the log you have searched.

### 3.3.6 Playback



Click  , and will show the below interface:

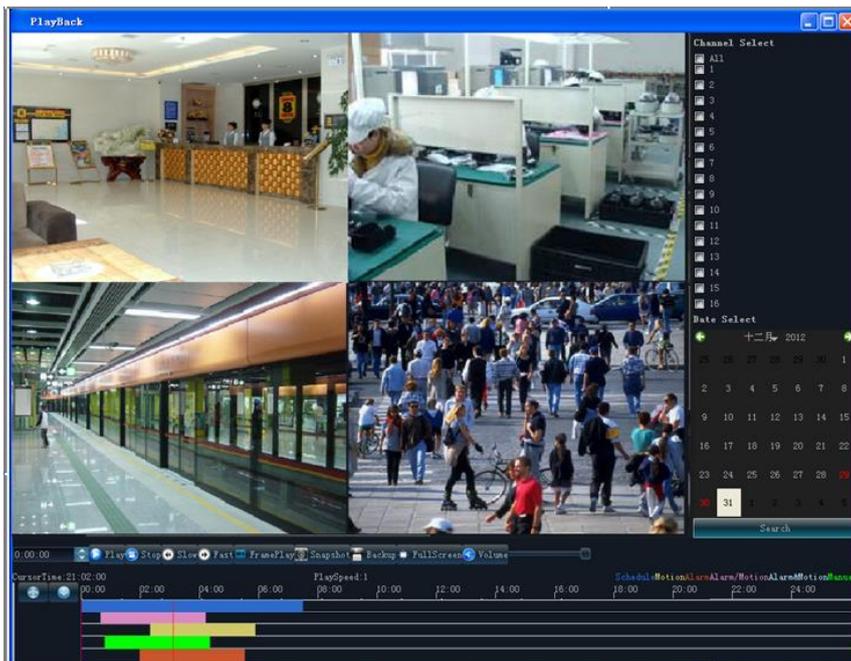


**[Search]:** Select and tick the channel which you want to search the recording, and it will auto search the recording which meet the search condition as shown in the below picture.

- 1) Pause: pause the current playback image.
- 2) Stop: Stop the playing video.
- 3) Slow: Slow down the playback speed. (there are: 1/2, 1/4, 1/8, 1/16 times)
- 4) Fast: Accelerate playback. (there are: 2, 4, 8, 16 times)
- 5) Snapshot: You can capture picture in any playback channel.
- 6) Backup: You can backup the recording of any channel. Insert USB storage device, click Refresh to detect the USB device. If the USB device is recognized normally, it will be displayed in the list, then select the channel, start time and end time, click “Start”, and the system will auto start backup and show the progress.

### 3.3.7 Record Backup



Click  , and below interface will show:

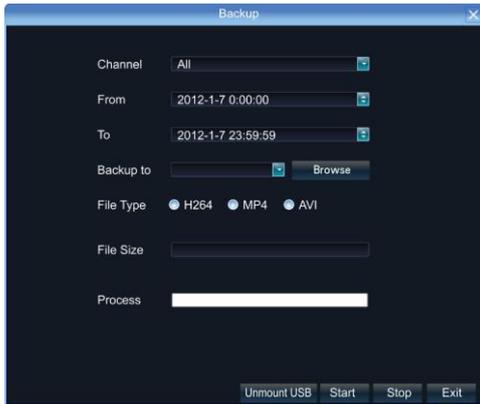


Insert USB storage device, click Refresh to detect the USB device. If the USB device is recognized normally, it will be displayed in the list, then select the channel, start time and end time, click “Start”, and the system will auto start backup and show the progress.

### 3.3.8 Manual Record



Click , and the interface on the right will show:

Manual: the priority is the highest. No matter which status each channel is under, after carrying out "Manual" button, all the corresponding channels will start regular recording.

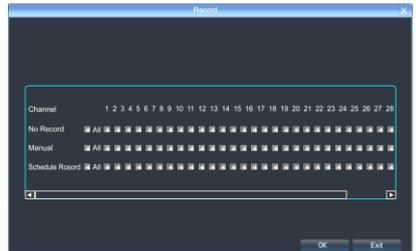


### 3.3.9 Alarm Information



Click , and the interface on the right will show:

All the alarm information of the device is recorded in the “Alarm” list.

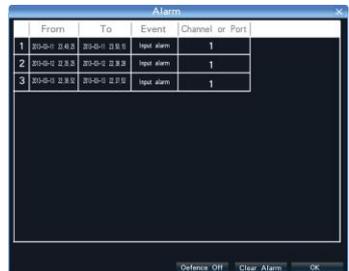

### 3.3.10 Capture




Single-click on the preview channel, click “Capture”, you can capture picture on any preview channel.

### 3.3.11 File Manager



Click , and the below interface will show:

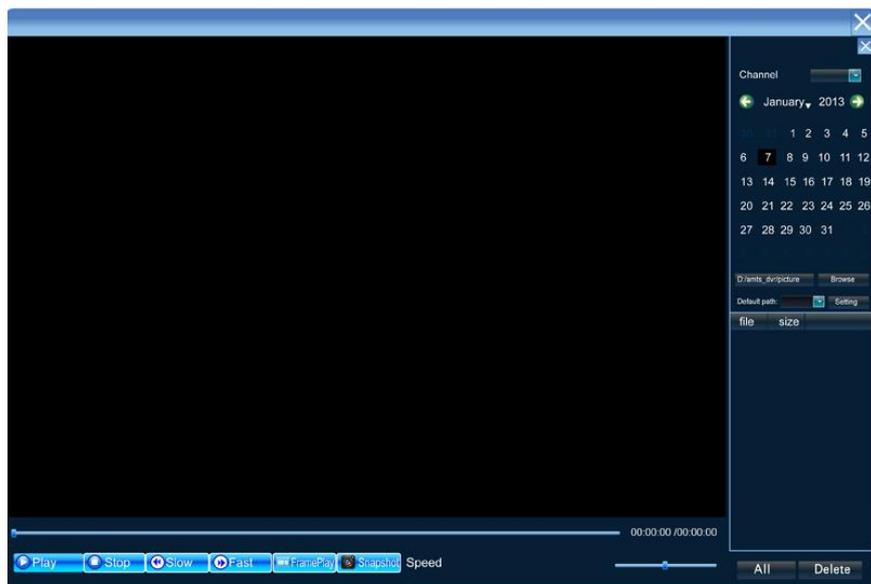

The backup files in the external storage device and the capture pictures will be displayed in the document list bar.

## Chapter 4: Network Operating Instruction

### 4.1 WEB Browser Operating Instruction

#### 4.1.1 Network Connection

- ✓ Confirm the NVR correct access to the network.
- ✓ Set the IP address, subnet mask and gateway for the computer server and NVR. Please allocate IP address in the same network segment if there is no router device in the network. If there is router device, you just need to set corresponding gateway and subnet mask. For the network setting, please refer to [Settings]>[Network Parameters].
- ✓ Please make sure that the IP address setting is correct. When the IP address setting is complete, you can use the system own ping tool to check if the NVR is connected to the network correctly.

#### 4.1.2 ActiveX Control Installation and User Login and Logout

- ✓ When the NVR accesses to the network correctly, you can login and visit it through IE browser
- ✓ You can download and install IE ActiveX from NVR through the Internet. Then input the IP address of the NVR in the IE browser, port number 5050, user name and password, then the below interface will pop-up:



When Login successfully, then shows:



More detail Network operation ways, please goes to the Host Side.

## Chapter 5: Mobile Viewing Operating Instruction

This operation guide is about how to install and use the mobile softwares in the mobile phones with Android, Blackberry, windows mobile, iPhone, Symbian systems.

### 5.1 Client Software Obtaining

You can obtain the mobile surveillance client software from the CD or our technical department. The corresponding client software of each system is as below:

MEYE\_SB\_S60\_3rd.sisx: mobile surveillance client of the 3rd version of Symbian S60 system;

MEYE\_SB\_S60\_5rd.sisx: mobile surveillance client of the 5th version of Symbian S60 system;

MEYE\_WM.cab: mobile surveillance client of Window system;

MEYE\_Android.apk: mobile surveillance client of Android system;

MEYE\_RIM.rar: mobile surveillance client of BlackBerry system;

Note: iPhone uses TMeye+, downloaded from appstore.

### 5.2 The Parameter Settings of the NVR which Supports Mobile Surveillance

Resolution: CIF or QCIF;

Frame Rate: 5-10fps;

Stream Type: Limited

Stream: 64-256Kb/S


Note: you can adjust the settings according to the performance and network condition. Mobile phone with higher performance and network condition will display better effect. If the network condition is not good, you can reduce the frame rate to ensure the fluency.

## 5.3 Android Mobile System

The mobile client software supports version above 1.5 of Android system, including HTC G1, HTC Magic, HTC Hero, HTC G5 and so on.

### Installation and Operation Instruction

1. Copy the MEYE\_Android.apk to the mobile or download it from Google directly.
2. Click the program to install.
3. Click to run the program as shown in the picture on the right:

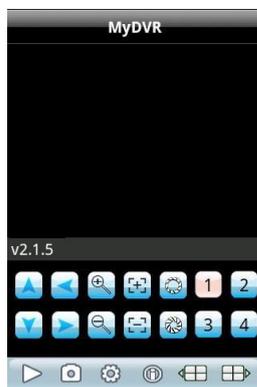

**The functions of the buttons are as below:**

Function Button	Name	Function Description
	Play	Program connects the device and start to play the video
	Snapshot	Capture the current image (the pictures are saved in the picture directory of the mobile phone by default)
	Setting	Set IP address of the NVR or DDNS, port, user name, and password and device name.
	Last Group	Can select the channel of last group
	Next Group	Can select the channel of next group
	About	About the information.
	Select Channel	Select to play the video of any channel of the device. Coordinating with the "Next Group", you can switch to 8ch or 16ch.
	PTZ Control	Control PTZ up, down, left and right.
	Zoom	Zoom in and zoom out
	Focal Length	Increase or decrease the focal length
	Iris	Increase or decrease the iris

4. Use for the first time, you need to do the following settings:


**Address:** The public IP address or DDNS of the NVR;

**Port:** The server port of the NVR;

**NVR Title:** The device name of the NVR, which is used to differentiate different devices;

**User ID:** Same as the user name on IE;

**Password:** Same as the password on IE.



: Return button.

## 5.4 Blackberry Mobile System

The mobile client software supports version above 4.6 of blackberry system. The screen resolution should be 480\*360 or 480\*320, including model 8900, 9000, 9700, 9630 and so on.

### 5.4.1 Installation and Operation Instruction

1. Install the vMEye.cod and vMEye.alx packages into the Blackberry mobile through the Desktop Manager. Click “option” on the mobile desk, and then click “application” to find the vMEye and then enter. Click “Edit Permission” and set “allow” for all permissions. Some of the permissions cannot be set “allow” (the option is grey and cannot be modified) and can be ignored and click save directly.
2. Click vMEye icon to run the program, then enter the initialized interface through a initialized splash interface, which is shown as below picture:

Name: The device name of the NVR, which is used to differentiate different devices;


Address: The public IP address or DDNS of the NVR;

Port: The server port of the NVR;

User ID: The same as the user name on IE;

Password: The same as the password on IE.

Network Type: Select the network type you want to use.

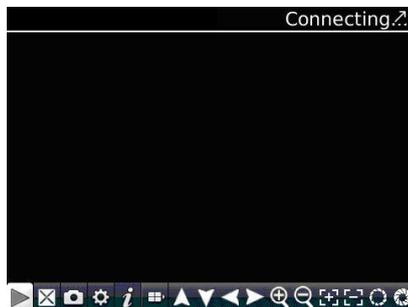

3. Click Login to enter the main interface:

**The functions of the buttons are as below:**

Function Button	Name	Function Description
	Play	Program connects the device and start to play the video
	Full Screen	Full screen play
	Snapshot	Capture the current image (the pictures are saved in the picture directory of the mobile phone by default)
	Setting	Set IP address of the NVR or DDNS, port, user name, password and device name.
	Next Group	Can select the channel of next group
	About	About the information
	Select Channel	Select to play the video of any channel of the device
	PTZ Control	Control PTZ up, down, left and right
	Zoom	Zoom in and zoom out
	Focal Length	Increase or decrease the focal length
	Iris	Increase or decrease the iris

## 5.5 Symbian Mobile System


Mobile client supports symbian system version above 9.1 (namely symbian 3rd and 5th version mobile), including all the 3rd version like Nokia 6120c, e71,5800 with 240\*320, 320\*240 resolution, the 5th version with 360\*640, 640\*360 resolution.



### ☆ Installation and Operation Instruction

1. Download and Install the package file(sisx) in the phone and then you will find the program icon and find the vmeye in the specified directory.
2. Click the vmeye program icon. After running the program, the below initialized interface will appear:

### The functions of the buttons are as below:

Function Button	Name	Function Description
	Play	Program connects the device and start to play the video
	Snapshot	Capture the current image (the pictures are saved in the picture directory of the mobile phone by default)
	Setting	Set IP address of the NVR or DDNS, port, user name, password and device name.
	Next Group	Can select the channel of next group
	Exit	Exit the program
	Full Screen	Full screen view
	Select Channel	Select to play the video of any channel of the device. Coordinating with the "Next Group", you can switch to 8ch or 16ch.
	PTZ Control	Control PTZ up, down, left and right

	Zoom, Focal Length, Iris	Zoom in and zoom out, increase and decrease focal length and iris. The above prompting bar will prompt the function of the selected button.
---	--------------------------	---

Use for the first time or need to modify the parameters, please click Setting button to enter the parameter setting interface, which as shown in the below picture:

IP: The public IP address or DDNS of the NVR;

Port: The server port of the NVR;

User Name: The same as the user name on IE;

Password: The same as the password on IE.

Alias: Give a name to the device and it will appear on the playing page.





## 5.6 Windows Mobile System


Mobile client supports windows system version above 2003. It only supports screen touch version currently.

1. Copy the MEYE\_WM.cab to the mobile and install it.

Click the corresponding program icon to open as shown in the picture on the right.

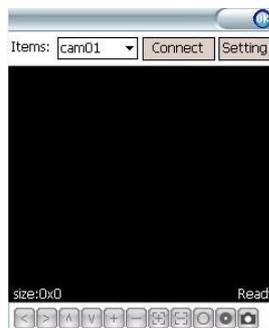


Function Button	Name	Function Description
	Connect and Play	Program connects the device and start to play the video
	Setting	Set IP address of the NVR or DDNS, port, user name, password and device name.
	Disconnect	Program disconnects the video

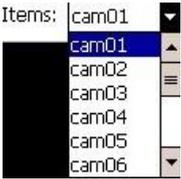	<p>Select Channel</p>	<p>Select to play the video of any channel of the device</p>
	<p>PTZ Control</p>	<p>Control PTZ up, down, left and right</p>
	<p>Zoom</p>	<p>Zoom in and zoom out</p>
	<p>Focal Length</p>	<p>Increase or decrease the focal length</p>
	<p>Iris</p>	<p>Increase or decrease the iris</p>
	<p>Snapshot</p>	<p>Capture the current image (the pictures are saved in the picture directory of the mobile phone by default)</p>

**The functions of the buttons are as below:**

2. Use for the first time or need to modify the parameters, please click  button to enter the parameter setting interface, as shown in the below picture:

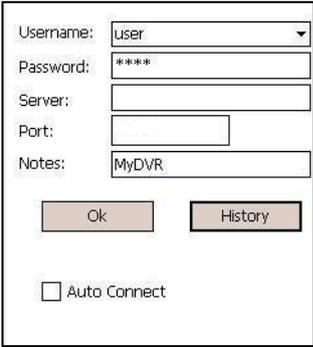

**Username:** The same as the user name on IE;

**Password:** The same as the password on IE.

**Server:** The public IP address or DDNS of the NVR;

**Port:** The server port of the NVR;

**Notes:** The description of the NVR, which is used to differentiate different devices;

3. After successful setting, press [OK] button to enter the connection interface. The image will appear if connected successfully.

### 5.7 iPhone Mobile System

Mobile client supports iphone system version iOS 3.0 or higher version, including iPhone,iPod touch and so on.

## Installation and Operation Instruction

1. Run the App Store of iPhone, switch to search page, input TMeye+, in the search bar, and find the application program package, click install. After finish installation, the program icons will appear as shown in the below picture:



2. Click TMeye+, icon, the above initialized interface will appear.

### The functions of the buttons are as below:

Function Button	Name	Function Description
	Play	Program connects the device and start to play the video
	Snapshot	Capture the current image (the pictures are saved in the picture directory of the mobile phone by default)
	Setting	Set IP address of the NVR or DDNS, port, user name, password and device name
	Last Group	Can select the channel of last group
	Next Group	Can select the channel of next group
	About	About the information
	Select Channel	Select to play the video of any channel of the device. Coordinating with
	PTZ Control	Control PTZ up, down, left and right

	Zoom	Zoom in and zoom out
	Focal Length	Increase or decrease the focal length
	Iris	Increase or decrease the iris

3. Use for the first time or need to modify the parameters, please click Setting button to enter the parameter setting interface, which as shown in the below picture:


**Alias:** The name of the NVR, which is used to differentiate different devices;

**Address:** The public IP address or DDNS of the NVR;

**Port:** The server port of the NVR;

**User ID:** The same as the user name on IE;

**Password:** The same as the password on IE.



: Return button.



The screenshot shows a settings page with a blue header containing 'Back', 'Settings', and 'History' buttons. Below the header, there are two sections: 'Server Info' and 'User Info'. The 'Server Info' section contains three input fields: 'Name' with the value 'demo', 'Address' with the value '59.174.194.143', and 'Port' with the value '6003'. The 'User Info' section contains two input fields: 'User ID' with the value 'Admin' and 'Password' with a masked password represented by ten black dots.

## Chapter 6: Appendix

### 6.1 HDD Capacity Calculation Method for Reference

Install the network video recorder for the first time, please make sure whether the HDD is installed inside the host.

#### 6.1.1 The Capacity of the HDD

The digital video recorder requires a single HDD with above 500GB capacity. In order to obtain better stability, we recommend the HDD with 500G ~ 2TB capacity.

#### 6.1.2 The Selection of the Total Capacity

Calculate the total capacity of a NVR requires according to the recording requirement (recording type, recording file storage time) . Calculation method:

Step 1: Calculate the storage capacity  $q_i$  of a channel requires per hour according to the formula(1), Unit: MByte.

$$q_i = d_i \div 8 \times 3600 \div 1024 \quad (1)$$

Bit Stream Size	The Recording File Size in One Hour	The Recording File Size in One Day
256K	112M	2.6G
320K	140M	3.3G
512K	225M	5.3G
768K	337M	7.9G
1.00M	439M	10.3G
1.50M	659M	15.4G
2.00M	878M	20.6G

$d_i$  – bit rate, Unit Kbit/s

The following table shows the recording file size of the common bit rate under constant bit rate within one hour and one day for one channel.

The second step: after confirming the time requirement of recording, calculate the storage capacity in one channel requires according to formula(2), unit: MByte.

$$m_i = q_i \times h_i \times D_i \quad (2)$$

$h_i$  — recording time of each day (Hour)

$D_i$  — number of days of recording storage

For example: the HDD capacity for recording one month for 1 channel 1.50M bit stream. Unit GB.

$$m_i = 659 \times 24 \times 31 = 490296 \text{MB} = 478 \text{GB}$$

The third step: the total capacity (accumulating)  $q_T$  for 16 channels timing recording for a whole day. Unit: GB

$$q_T = q_{16} = m_i \times 16 = 7648 \text{GB}$$

If select 500G HDD, 16 pieces of HDD will be required to full record. User selects appropriate HDD according to the capacity.

The fourth step: calculate the total capacity(accumulating) needed for allchannels alarm recording(including motion detection). Unit: GB

$$q_T \times a\%$$

$a\%$ —alarm occurring rate.

Alarm occurring rate:  $(T_1 + T_2 + T_3 + \dots + T_n) / n T_{24}$  (n=1, 2, 3...)

$T_n$  — The alarm time of the Nth day(the time difference of larm end and alarm start) Unit: h  $T_{24} = 24\text{h}$

$q_T$  — the needed HDD capacity of T channels timing

For example: if the alarm occurring rate  $a\%$  for a month is 50%, then the alarm

recording capacity of 16 channels in one month is: Unit:GB

$$q_t \times a\% = q_{16} \times 50\% = 7648 \times 50\% = 3.7\text{GB}$$

## 6.2 Remote Control Operation

Numb	Icon	Description	Number	Icon	Descriptio
1	REC	Record Key	13		Last Section
2		Power On/Off	14		Video
3		Window	15		Frame
4		Window	16		Up
5	FN	Auxiliary Function Key	17		Down
6	STATUS/DEV	Device Code Key	18		Left
7	PTZ	PTZ Control Key	19		Right
8	II	Playback Pause Key	20		Enter Key
9	OSD	Menu Key	21	ESC	Exit Key
10		Next Section	22	MENU	Menu Key
11		Fast Forward Key	23	1-16	Channel 1-16
12		Fast Backward			

Note: When there are devices in a same place, the remote control should choose a device first according to the device number. Therefore, you should define one unique device number for each machine; otherwise, the remote control operation may simultaneously affect the devices which are with the same device number.

### 6.2.1 Remote Control Battery

Put into 2 pieces of No.7 batteries. Make sure that the positive and negative polarity correspond with each other rightly.

### 6.2.2 Code Corresponding Operation of the Remote Control

Press the [STATUS]/[DEV] button on the remote control, then input the NVR device number (default device number is "255". It can be modified under Management Tools→System Parameter). The maximum device number which can be set is 255. Input the 3-digit device number on the remote control, adding 0 in front if the number is not up to 3-digit, then press the [ENTER] button.

### 6.2.3 Turn on by Remote Control

When the device is under the status of being selected by the remote control, keep pressing [POWER] button on the remote control can turn off the device so that it will be under standby mode.

When the device is under the standby mode status of being selected, flicking on the [POWER] button can turn on the device and enter normal working condition.

### 6.2.4 Disable Remote Control Operation

When the device is under the status of being selected by the remote control, press the [DEV] button and the remote control will terminate the control on the NVR.

### 6.2.5 Abnormity Check of Remote Control

- Check the positive and negative polarity of the batteries.
- Check whether the power of the batteries has run out.
- Check whether the remote control sensor is blocked.
- Check whether there is fluorescent light being used in the nearby.

## 6.3 Technical Data

### 6.3.1 1.5U 720P/1080P Economic NVR Series

Series	1.5U 720P/1080P Economic NVR Series
--------	-------------------------------------

Product Category		1.5U 4ch NVR	1.5U 9ch NVR	1.5U 16ch NVR
Chassis		Standard 1.5U Chassis		
Operating System		Embedded LINUX operating system		
Image Code Standard		H.264/MPEG4 AVC		
Image Code Control		Image,code,quality,adjustable,variable,bitrate,and,constant1bitrate,optional		
Dual Stream		Each channel can set main stream and sub stream		
Audio Compression		G.711		
Video Standard		1080P(1920×1080)fps / 720P(1280×720)30fps		
Monitoring Image Quality		1080P(1920×1080) / 720P(1280×720)		
Recording Playback Quality		Any 4ch 1080P/720P playback simultaneously		
Image Motion Detection		Each screen can set detection areas and set 6-level sensitivity		
Region Cover		Every channel can set 4 cover regions		
Voice Talkback		Two-way voice talkback		
Recording Mode		Support manual , auto, dynamic detection, alarm trigger record mode		
Backup Way		Support U disk, USB mobile HDD, USB DVD-RW, network storage and backup		
Recording Storage		Local HDD, network		
External Ports	Video Input	4ch 720P/ 3ch 720P+ 1ch 1080P	9ch 720P/ 4ch 720P+2ch 1080P	16ch720P /8ch 720P+4ch 1080P
	Audio Input	4ch network audio input	9/6/4ch network audio input	16/12/9ch network audio input
	Video Output	1ch VGA+1ch HDMI		
	Audio Output	1ch BNC auxiliary output		
	Alarm Input	4ch	9ch	16ch
	Alarm	1ch	1ch	4ch
	Network Port	1 RJ45,10M/100M/1000M self-adaptive LAN port		
	Wireless	3G, WIFI		
	RS485 Port	Full duplex standard 485 port		

	USB Port	2 USB ports		3 USB ports
Local Login		User name and password		
HDD Port		2 SATA HDD port/1 SATA+1 E-SATA		
Power Supply		12V4A	DC12V3.3A	DC12V5A
Mobile Surveillance		Support (iPhone, Windows Mobile, BlackBerry, Symbian, Android) smart phone		
Power Consumption		≤25 (without HDD)		
Working Temperature		-10°C~+55°C		
Working Humidity		10%-90%		
Dimension		Equipment: 350mm×240mm×70mm,		
Wight(without HDD)		N.W.: 1.7Kg; with packing:2.89Kg		
Outside Carton		5pcs/carton. 675mm×425mm×385mm;		
Installation Way		Desktop installation		

### 6.3.2 2U 720P/1080P Economic NVR Series

Series	2U 720P/1080P Economic NVR Series	
Product Category	2U 720P 9ch NVR	2U 720P 16ch NVR
Chassis	Standard 2U Chassis	
Operating System	Embedded LINUX operating system	
Image Code Standard	H.264/MPEG4 AVC	
Image Code Control	Image,code,quality,adjustable,variable,bitrate,and,constant1bitrate,optional	
Dual Stream	Each channel can set main stream and sub stream	
Audio Compression	G.711	
Video Standard	1080P(1920×1080)fps / 720P(1280×720)30fps	
Monitoring Image Quality	1080P(1920×1080) / 720P(1280×720)	
Recording Playback Quality	Any 4ch 1080P/720P playback simultaneously	
Image Motion Detection	Each screen can set detection areas and set 6-level sensitivity	
Region Cover	Every channel can set 4 cover regions	
Voice Talkback	Two-way voice talkback	

Recording Mode		Support manual , auto, dynamic detection, alarm trigger record mode	
Backup Way		Support U disk, USB mobile HDD, USB burner, DVD-RW, network storage and backup	
Recording Storage		Local HDD, network	
External Ports	Video Input	9ch 720P/ 4ch 720P+2ch 1080P	16ch 720P/ 8ch 720P+4ch 1080P/
	Audio Input	9/6/4ch network audio input	16/12/9ch network audio input
	Video Output	1ch VGA+1ch HDMI	
	Audio Output	1ch BNC auxiliary output	
	Alarm Input	9ch	16ch
	Alarm Output	1ch	4ch
	Network Port	1 RJ45,10M/100M/1000M self-adaptive LAN port	
	Wireless	3G, WIFI	
	RS485 Port	Full duplex standard 485 port	
	USB Port	2 USB ports	3 USB ports
Local Login		User name and password	
HDD Port		8 SATA+2 E-SATA HDD port	
Power Supply		AC110-240V ~ ATX 200W 50-60 Hz	AC110-240V ~ ATX 300W 50-60 Hz
Mobile Surveillance		Support( iPhone, Windows Mobile, BlackBerry,	
Power Consumption		≤30W (without HDD)	
Working Temperature		-10℃ ~ + 55℃	
Working Humidity		10%-90%	
Dimension		Equipment: 440mm×450mm×90mm,	
Wight(without HDD)		N.W.: 6Kg; with packing: 9Kg	
Outside Carton		2pcs/carton. 555mm×545mm×470mm;	
Installation Way		Desktop installation	

### 6.3.3 1.5U/2U 1080P Professional NVR Series

<b>Series</b>	<b>1.5U/2U 1080P Professional NVR Series</b>
---------------	--

Product Category		1.5U 1080P 16ch NVR	2U 1080P 16ch NVR
Chassis		Standard 1.5U Chassis	Standard 1.5U Chassis
Operating System		Embedded LINUX operating system	
Image Code Standard		H.264/MPEG4 AVC	
Image Code Control		Image,code,quality,adjustable,variable,bitrate,and,constant1bitrate,optional	
Dual Stream		Each channel can set main stream and sub stream	
Audio Compression		G.711	
Video Standard		1080P(1920×1080) 30frame/second	
Monitoring Image Quality		1080P(1920×1080)	
Recording Playback Quality		16ch 1080P	
Playback Channel		4ch	
Image Motion Detection		Each screen can set detection areas and set 6-level sensitivity	
Region Cover		Every channel can set 4 cover regions	
Voice Talkback		Two-way voice talkback	
Recording Mode		Support manual , auto, dynamic detection, alarm trigger record mode	
Backup Way		Support U disk, USB mobile HDD, USB burner, DVD-RW, network storage and backup	
Recording Storage		Local HDD, network	
Network Video Input		16ch	
Network Audio Input		16ch	
External Ports	Video Output	1ch VGA+1chHDMI	
	Audio Output	1ch BNC	
	Alarm Input	16ch	
	Alarm Output	4ch	
	Network Port	1 RJ45,10M/100M/1000M self-adaptive LAN port	
	Wireless Port	Support 3G, WIFI	
	RS485 Port	Full duplex standard 485 port	
	USB Port	3 USB port	
Local Login		User name and password	
HDD Port		2 SATA/1 SATA+1	8 SATA +2 E-SATA

Power Supply	DC12V5A	AC110-240V ~ ATX
Mobile Surveillance	Support (iPhone , Windows Mobile ,	
Power Consumption	≤20W(without HDD)	≤40W(without HDD)
Working Temperature	-10°C ~ + 55°C	
Working Humidity	10%-90%	
Dimension	Equipment:	Equipment:
Wight(without HDD)	N.W.: 1.7Kg, with	N.W.: 6.58Kg, with
Outside Carton	5pcs/carton,	2pcs/carton,
Installation Way	Desktop installation	

## 6.4 Trouble Shooting

### ➤ The device fails to start or keeps restarting.

Possible causes:

1. NVR is upgraded with wrong program which has caused the damage of system software.
2. The main board is defective; please contact the supplier for maintenance.
3. HDD is defective, please replace the HDD.

### ➤ Fail to operate the device by remote control

Possible causes:

1. Check if the batteries in the remote control are installed correctly, especially the positive and negative polarity.
2. Check if the batteries in the remote control have power.
3. Check if the remote control window is covered.
4. Check if the remote address of the NVR matches the address of the remote control.

### ➤ Fail to control PTZ

Possible causes:

1. Incorrect cable connection of the RS-485 port, A, B ports are connected oppositely.
2. Incorrect settings of PTZ decoder type, protocol, baud rate and address bit.

3. The quantity of the PTZ connected to the RS-485 bus is relatively big, which causes the signal reflection, and you need to parallel connect a 120Ω electrical resistance in the far-end.
4. The RS-485 port of the main board is defective.

➤ **The preview image of the NVR is scratched.**

Possible causes:

Video input format is not matched. If the camera is with NTSC format while the NVR is with PAL format, then the preview image will be scratched.

➤ **NVR playback image is scratched or fail to search the recording.**

Possible causes:

1. Program error; please try to reboot the NVR.
2. HDD data error caused by bad track and bad clusters, please detect the HDD. If the HDD is defective, please replace the HDD.
3. Hardware error of NVR, please contact the supplier.

➤ **NVR cannot connect network.**

Possible causes:

1. Please check if the network physical connection is correct.
2. Please check the NVR network parameter configuration.
3. Please check if IP conflict exists in the network.

➤ **The download or backup recording video fail to play**

Possible causes:

1. Player is not installed correctly.
2. The file system error of the backup U disk or removable hard disk.
3. Graphics speed up software whose version is above DX8.1 is not installed.

## **Chapter 7: DVR/NVR IE Viewing Operation Instruction for ADSL Mode**

If customer connects with ADSL and need IE viewing, please do the setting as the following:


Equipments: NVR, 1 set computer that connected with LAN, router, internet cable  
 Let DVR and computer both connect with internet cable. Click “Star” button on the left corner of computer → Run → Input CMD and click *ENTER* key→Input ipconfig/all and click *ENTER* key. Then take note for the IP information

## 7.1 NVR setting

1. Start the NVR →Click Setting icon to enter the setting menu→Network Setting



Click DDNS for setting.

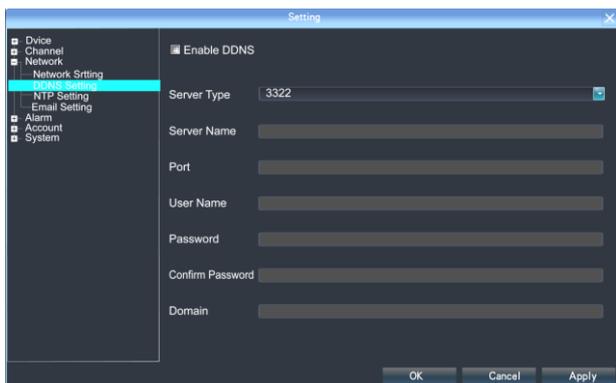

- 1) The physical address can keep the same;
- 2) IP address: the IP must be the unique and cannot conflict with other host or workstation

Eg: 192.168.1.101

- 3) Default Gateway: be same with the LAN gateway, eg: 192.168.1.1
  - a) Subnet Mask: 255.255.255.0
  - b) DNS Address: be same with the LAN gateway;
  - c) Device Port: default number is 5050, can change as the necessary;
  - d) http Port: default number is 80, can change as the necessary;
  - e) Cell Phone Port: +3 based on the device port number, eg, if the device port is 5050, then the cell phone port is 5053

## 7.2 Router Setting

As the so many different router brands, take the TP-LINK router as the example, please do the operation as the following:

1. Open IE browser and input the gateway, like: <http://192.168.1.1>
2. Input the *User Name* and *Password* to login the router management  
TP-LINK default user name: admin, password: admin,
3. Click the “Forwarding Rules” of tool bar at the left side, some router named it by Port Mapping, click *Virtual Server*→click *Adding New Items*

Add the following DVR IP address to there and save it.

HTTP Port: default number 80

Device Port: default number 5050

Default Port: default number 5051

Default Port: default number 5052

Cell Phone Port: default number 5053

After finish it and click the item “*All entries effect*”

Now take 3322 as the example, bound the dynamic IP address [www.3322.org](http://www.3322.org) to fixed domain name. Enter 3322 website and input the application information. Take note the domain name after applying successfully.

**Note:** domain name, user name and password need to add on the DDNS setting of DVR network setting.

Now input the applied domain in the IE browser, you can login the NVR.

**Note:** If you fail to login in, please try again by adding colon + http port number.

### 7.3 IE Login Operations

Open IE browser and input the domain name, then it pop out the following information: Downloading activx, please wait or click here.

Once the download has completed, please close IE browser first before unzipping the installation package. After installation finished, then open the IE browser and input the domain name, login with port number, user name and password. The default user name is admin and no password. Then you will see the DVR monitoring image.

If you think the above operation is too difficult, we suggest you use [www.aedvr.com](http://www.aedvr.com) free domain name + Client server of UPnP automatic DNS

#### **Do the following operation after the setting of 7.1:**

1. Write down the device series number:  
(Setting→Device Parameter→Device Info→Device Series No)
2. Enter *Network Setting*→Click *Advance*→ Select *Enable manage host & Enable UPnP*.
3. Manage host address: [www.aedvr.com](http://www.aedvr.com) Port: 5050, save and login out
4. Login [www.aedvr.com](http://www.aedvr.com) by IE browser, Port: 81, User name: admin, no password. Input device series number, user name and password, click OK, then can see DVR monitoring image.

This method no need router setting and no need login domain name, it's very easy and stable.

#### Appendix-----FAQ of NVR

1. **Q:** Why Motion Detection Alarm, Mask Alarm, Video Alarm configuration setting is correct but fail to work

**A:** The ONVIF protocols of IPC that connected with NVR do not support these functions now.

2. **Q:** Why fail to search IPC?

**A:** Maybe the NVR or IPC doesn't connect with the internet properly, please test the internet connection by run PING command, and also please check whether there is IP conflict.

3. **Q:** Need long time waiting for the image showing

**A:** Different brands or different models of IPC have time difference for the imaging showing, but normally the waiting time should less than one minute. But it's true that some may be longer than one minute.

4. **Q:** After saving, no imaging comes out.

**A:** Maybe the user name or password is mistake; also maybe the private protocol of IPC caused the compatible problem. Please try again by the IPC that support i8 protocol or the standard ONVIF protocol.

5. **Q:** Some channel has the recording information and the image comes out after double clicking, but the image fails to show at the multi-channel preview mode.

**A:** Right click the image channel to bring out the main menu, then go to IP Channel Setting, select *Sub-stream* instead of *Main Stream* for the *Mode* item. Then save the configuration. If there still no image come out at multi-channel preview mode, please adjust the sub-stream less than 1M.