



Instruction Manual

IIT-2000/2010/5000/5010

Electrical Safety Tester





Table of Contents

SAFETY INSTRUCTIONS	3
GETTING STARTED.....	8
IIT-2000/2010/5000/5010 Overview	10
Appearance	15
Set Up	24
OPERATION.....	32
Menu Tree.....	34
Test Lead Connection	39
ACW, DCW, IR and GB Manual Testing	42
Special MANU Test Mode (000)	86
Automatic Tests	92
Common Utility Settings.....	112
EXTERNAL CONTROL	121
External Control Overview.....	122
REMOTE CONTROL	129
Interface Configuration	130
Command Syntax	136
Command List	139
Error Messages	194
FAQ	195
APPENDIX	197




Fuse Replacement	197
Test Errors.....	198
IIT-2000/2010/5000/5010 Specifications	201
IIT-2000 Dimensions	210
IIT-2010 Dimensions	211
IIT-5010 Dimensions	212
IIT-5000 Dimensions	213
Declaration of Conformity	215
INDEX	216


SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to ensure your safety and to keep the instrument in the best possible condition.

Safety Symbols


These safety symbols may appear in this manual or on the instrument.

 **WARNING** Warning: Identifies conditions or practices that could result in injury or loss of life.

 **CAUTION** Caution: Identifies conditions or practices that could result in damage to the instrument or to other properties.

 **DANGER High Voltage**

 **Attention Refer to the Manual**

 **Protective Conductor Terminal**



Frame or Chassis Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General

- Do not place any heavy object on the instrument.

Guideline



CAUTION

- Avoid severe impact or rough handling that leads to damaging the instrument.
- Do not discharge static electricity to the instrument.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the IIT-2000/2010/5000/5010 unless you are qualified.

(Measurement categories) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The IIT-2000/2010/5000/5010 does not fall under category II, III or IV.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
 - Measurement category III is for measurement performed in the building
-

installation.

- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.

Power Supply



WARNING

- AC Input voltage range:
100/120/220/230VAC $\pm 10\%$
- Frequency: 50Hz/60Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

Cleaning

the IIT-2000/
2010/ 5000/
5010

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

Operation

Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: $\leq 70\%$ (no condensation)
- Altitude: $< 2000\text{m}$
- Temperature: $0^{\circ}\text{C}\sim 40^{\circ}\text{C}$

(Pollution Degree) EN 61010-1:2010 specifies the pollution degrees and their requirements as follows. The IIT-2000/2010/5000/5010 falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs.

The pollution has no influence.

- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage
environment

- Location: Indoor
- Temperature: -10°C to 70°C
- Relative Humidity: ≤ 85% (no condensation)

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

Power cord for the United Kingdom

When using the safety tester in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons

 **WARNING: THIS APPLIANCE MUST BE EARTHED**

IMPORTANT: The wires in this lead are coloured in accordance with the following code:


Green/ Yellow: Earth

Blue: Neutral

Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol  or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details.

As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

This chapter describes the safety tester in a nutshell, including its main features and front / rear panel introduction. After going through the overview, please read the safety considerations in the Set Up chapter.



IIT-2000/2010/5000/5010 Overview	10
Series lineup	10
Model Overview	11
Main Features	11
Accessories.....	12
Package Contents.....	14
Appearance	15
IIT-2000/5000 Front Panel.....	15



IIT-2010/5010 Front Panel	15
IIT-2000/2010 Rear Panels	20
IIT-5000 Rear Panel.....	20
IIT-5010 Rear Panel.....	21
Set Up.....	24
Line Voltage Connection and Power Up.....	24
Installing the Optional GPIB Card	26
Workplace Precautions	27
Operating Precautions	28
Basic Safety Checks	31

IIT-2000/2010/5000/5010 Overview

Series lineup

The IIT-2000/2010/5000/5010 Safety Testers are AC/DC withstanding voltage, insulation resistance and ground bond safety testers.

The IIT-2000/IIT-5000 is AC/DC withstanding voltage testers. The IIT-2010 & IIT-5010 include all the test functions as well as ground bond testing. All models can operate at up to 5kVAC for AC withstanding voltage testing and at up to 6kVDC for DC withstanding voltage testing.

For the IIT-5010/5000 models, the testing terminals are also mirrored on the rear panel for added safety and for more permanent safety testing environments. They also include an innovative sweep function to view test results as a graph.

The IIT-2000/2010/5000/5010 can store up to 100 manual tests, as well as run up to 16 manual tests sequentially as an automatic test, allowing the safety testers to accommodate any number of safety standards, including IEC, EN, UL, CSA, GB, JIS and others.

Note: Throughout this user manual, the terms ACW, DCW, IR and GB refer to AC Withstanding, DC Withstanding, Insulation Resistance and Ground Bond testing, respectively.

Model Overview

Model name	ACW	DCW	IR	GB	Sweep
IIT-2000	✓	✓			
IIT-2010	✓	✓	✓	✓	
IIT-5000	✓	✓			✓
IIT-5010	✓	✓	✓	✓	✓

Main Features

- Performance
- ACW: 5kVAC
 - DCW: 6kVDC
 - IR: 50V~1000V (50V steps)*
 - GB: 3A~30A (IIT-2010);
3A~32A (IIT-5010)

* The IIT-5010 also includes an extra +125V test point

- Features
- Ramp up time control
 - Safety discharge
 - 100 test conditions (MANU mode)
 - 100 automatic tests (AUTO mode)
 - Over temperature, voltage and current protection
 - Pass, Fail, Test, High Voltage and Ready indicators
 - PWM output (90% efficiency, increased reliability)
 - Interlock (configurable)
 - Sweep Function
 - Rear panel output (IIT-5000/5010 only)
-

- Interface
- Remote control start/stop interface terminal
 - RS232/USB interface for programming
 - Optional GPIB interface for programming
 - Signal I/O port for pass/fail/test monitoring and start/stop control/interlock

Accessories

Standard Accessories	Part number	Description
	GHT-114 x1	Test lead
	Region dependent	Power cord



GTL-115 x1	GB Test leads (IIT-2010/5010 only)
N/A	Remote terminal male plug
N/A	Interlock key


Optional Accessories	Part number	Description
	GHT-205	High Voltage Test Probe
	GHT-113	High Voltage Test Pistol
	GTL-232	RS232C cable
	GTL-248	GPIB cable
	GTL-247	USB cable
	GRA-417	Rack Adapter Panel (19", 4U) (IIT-2000/2010/5000 only)

Options	Part number	Description
	Opt.01 GPIB Interface	GPIB module

Package Contents

Check the contents before using the IIT-2000/2010/5000/5010.

Opening the box

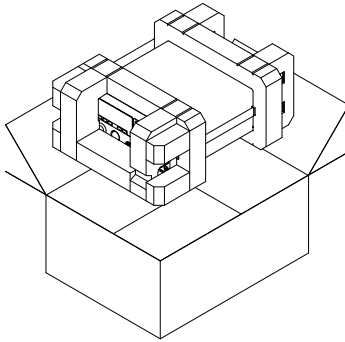

Contents (single unit)

- IIT-2000/2010/5000/5010
 - Quick Start guide
 - User manual CD
 - CTC (Calibration Traceable Certificate)
 - Power cord x1 (region dependent)
 - GHT-114 test leads x1
 - GTL-115 test leads x1 (IIT-2010/5010)
 - Remote terminal male plug
 - Interlock key
-


Note

Keep the packaging, including the box, polystyrene foam and plastic envelopes should the need arise to return the unit to RS components.


Appearance




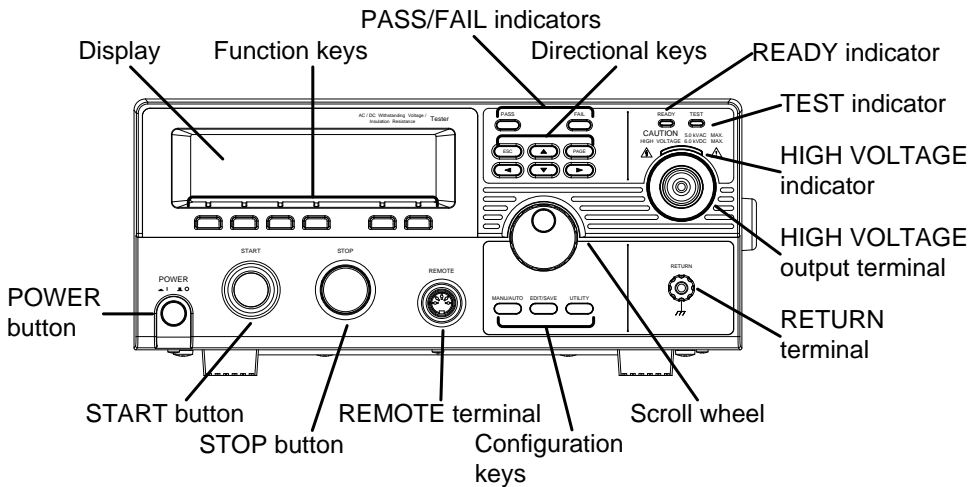


IIT-2000/5000

Front Panel

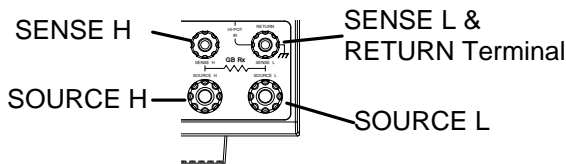


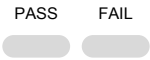IIT-2010/5010 Front Panel

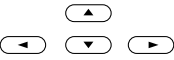


Display	240 X 64 dot matrix display (LCD)	
Function keys	The function keys correspond to the soft-keys directly above on the main display.	
Pass/Fail indicators		The PASS and FAIL indicators light up upon a PASS or FAIL test result at the end of a manual test or automatic test.
ESC key		The ESC key is used to exit out of a menu or cancel a setting.
PAGE key		The PAGE key is used to view automatic test information and test results.
Directional arrow keys		The directional arrow keys are used to navigate menus and parameter settings.
READY indicator		The READY indicator is lit when the tester is ready to begin testing. The STOP button is used to put the tester into READY status.
TEST indicator		The TEST indicator is lit when a test is on. The START button is used to put the tester into TEST status.

HIGH VOLTAGE indicator



The HIGH VOLTAGE indicator will light up when an output terminal is active. Only after the test has finished or stopped will the indicator turn off.

HIGH VOLTAGE output terminal

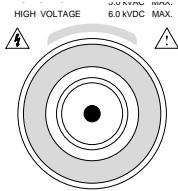

The HIGH VOLTAGE terminal output is used for outputting the testing voltage. The terminal is recessed for safety. This terminal is used in conjunction with the RETURN terminal.



WARNING

USE EXTREME CAUTION.


Do not touch the HIGH VOLTAGE terminal during testing.

RETURN terminal

All models except IIT-2000/5000

The RETURN terminal is used for IR, DCW and ACW tests.


RETURN



RETURN, SENSE and SOURCE terminals


IIT-2010/5010

The RETURN terminal is used for IR, DCW and ACW tests.

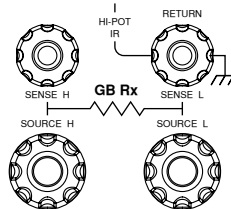

The SOURCE H, SOURCE L, SENSE H and SENSE L terminals are used for GB tests.

Scroll wheel

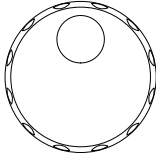

The scroll wheel is used to edit parameter values.

UTILITY key




Used to enter the MANU Utility or Common Utility menu.

EDIT/SAVE key



Used to start editing MANU/AUTO tests as well as save settings and parameters.

MANU/AUTO key




The MANU/AUTO key is used to select manual tests (MANU) or automatic tests (AUTO).

REMOTE terminal




The REMOTE terminal is used to connect to a remote controller.

STOP button

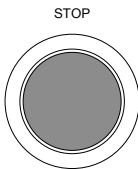

The STOP button is used to stop/cancel tests. The STOP button will also put the safety tester in the READY status to begin testing.


START button

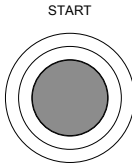

The START button is used to start tests.


The START button can be used to start tests when the tester is in the READY status. Pressing the START button will put the tester in the TEST status.

POWER switch




Turns the power on. The safety tester will always start up with the last test setting from when the instrument was last powered down.


IIT-2000/2010 Rear Panels

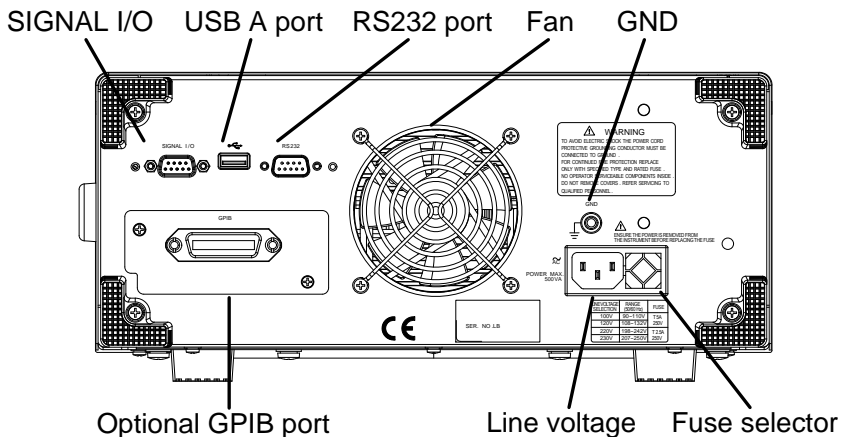


IIT-5000 Rear Panel

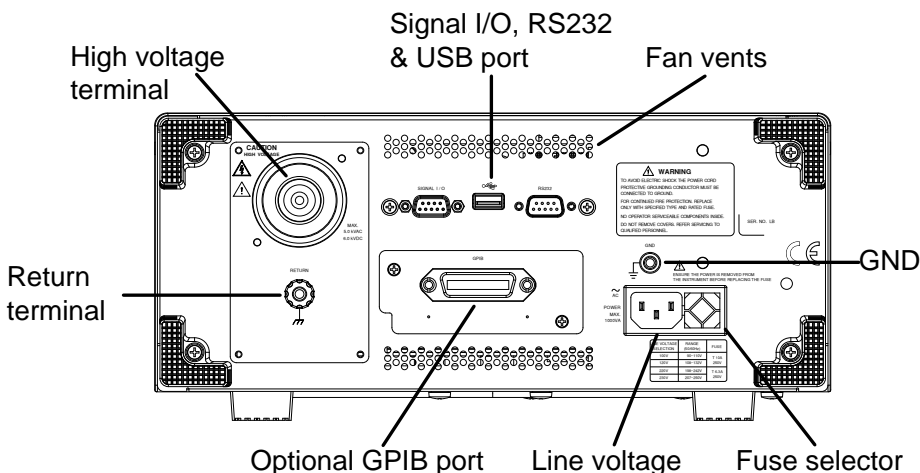


IIT-5010 Rear Panel

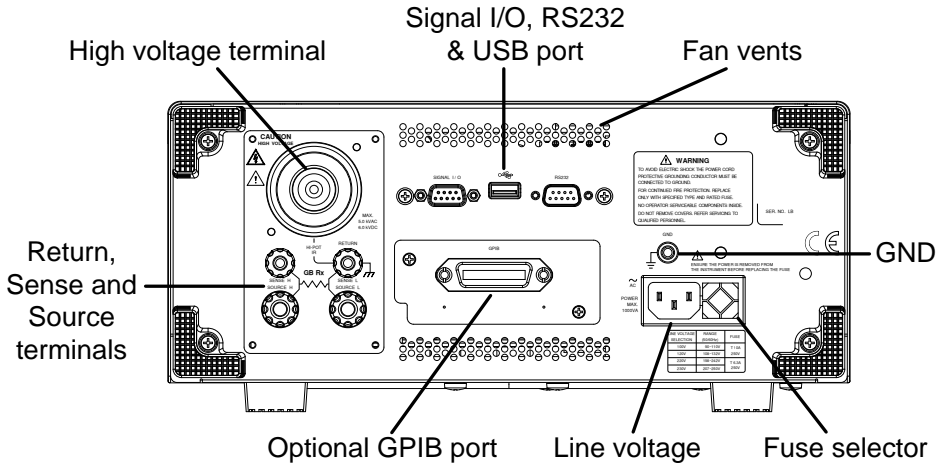

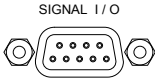SIGNAL I/O port  The SIGNAL I/O port is used to monitor the tester status (PASS, FAIL, TEST) and input (START/STOP signals). It is also used with the Interlock key.


USB A port  Used for remote control.

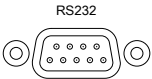RS232 interface port  Used for remote control and firmware updates.

Fan/Fan Vents


Exhaust fan. Allow enough room for the fan to vent. Do not block the fan openings.

GND




Connect the GND (ground) terminal to the earth ground.

Line voltage input



Line voltage input: 100/120/220/230VAC $\pm 10\%$

Line voltage fuse



Line voltage selector and fuse:

IIT-2000/2010:

100V/120V T5A 250V


220V/230V T2.5A 250V

IIT-5010/5000:

100V/120V T10A 250V

220V/230V T6.3A 250V


Optional GPIB port



Optional GPIB interface for remote control.

HIGH VOLTAGE IIT-5000/5010
output terminal

The HIGH VOLTAGE terminal output is used for outputting the testing voltage.

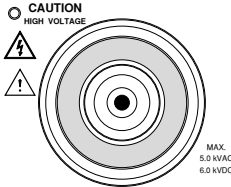

WARNING


USE EXTREME CAUTION.

Do not touch the HIGH VOLTAGE terminal during testing.

RETURN
terminal

IIT-5000


The RETURN terminal is used for IR, DCW and ACW tests.



RETURN/
SENSE and
SOURCE
terminals

IIT-5010

The RETURN terminal is used for IR, DCW and ACW tests.

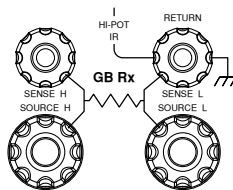

The SOURCE L/H and SENSE L/H terminals are for GB tests only.


Set Up

Line Voltage Connection and Power Up


Background Before powering up the IIT-2000/2010/5000/5010 ensure the correct voltage has been selected on the rear panel. The IIT-2000/2010/5000/5010 supports line voltages of 100V/120V/220V and 230V.

Steps 1. Check the line voltage and the fuse in the fuse holder. Page 197


The desired line voltage should line up with the arrow on the fuse holder.

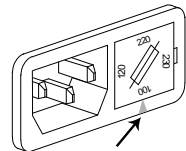

2. Connect the power cord to the AC voltage input.

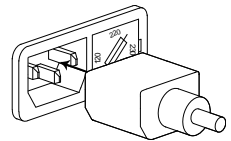

3. If the power cord does not have an earth ground, ensure the ground terminal is connected to an earth ground.






Warning


Ensure the power cord is connected to an earth ground.
Failure could be harmful to the operator and instrument.

4. Press the Power button.

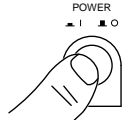


5. When the unit is powering up, all the LED indicators will light.
Check to make sure all 5 LED indicators are working.

6. Check to make sure the System Self Test passes without errors.



After the System Self Test completes, the tester will go into VIEW status and be ready to operate.

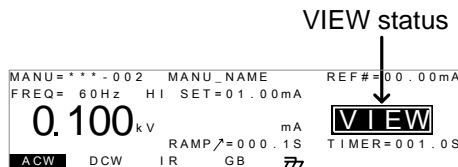


WARNING


See the Appendix on page 1 for details if a self-test error is detected.

Installing the Optional GPIB Card


Background The optional GPIB is a user-installable option. Follow the instructions below to install the GPIB card.

 **WARNING** Before installing the optional GPIB card ensure the IIT-2000/2010/5000/5010 is turned off and disconnected from power.

Steps 1. Remove the screws from the rear panel cover plate.

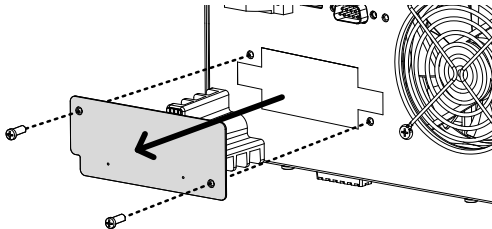

2. Insert the GPIB card into the two slots on either side of the opening. Push the card gently until it is fully inserted.

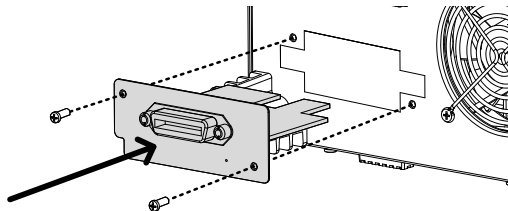

Workplace Precautions

Background The IIT-2000/2010/5000/5010 is a high voltage instrument that outputs dangerous voltages. The following section describes precautions and procedures that must be followed to ensure a safe work environment.



WARNING

The IIT-2000/2010/5000/5010 generates voltages in excess of 5kVAC or 6kVDC. Follow all safety precautions, warnings and directions given in the following section when using the instrument.

1. Only technically qualified personnel should be allowed to operate the safety tester.
2. The operating workplace must be fully isolated, especially when the instrument is in operation. The instrument should be clearly labeled with appropriate warning signage.
3. The operator should not wear any conductive materials, jewelry, badges, or other items, such wrist watches.
4. The operator should wear insulation gloves for high voltage protection.

5. Ensure the earth ground of the line voltage is properly grounded.
6. Ensure any devices that are adversely affected by magnetic fields are not placed near the tester.

Operating Precautions

Background The IIT-2000/2010/5000/5010 is a high voltage instrument that outputs dangerous voltages. The following section describes precautions and procedures that must be followed to ensure that the tester is operated in a safe manner.

WARNING

The IIT-2000/2010/5000/5010 generates voltages of up to 5kVAC or 6kVDC. Follow all safety precautions, warnings and directions given in the following section when using the instrument.

1. Never touch the safety tester, lead wires, terminals, probes and other connected equipment when the tester is testing.
2. Do not turn the safety tester on and off quickly or repeatedly. When turning the power off, please allow a few moments before turning the power back on. This will allow the protection circuits to properly initialize.

Do not turn the power off when a test is running, unless in an emergency.

3. Only use those test leads supplied with the instrument. Leads with inappropriate gauges can be dangerous to both the operator and the instrument.

For GB testing, never use the Sense leads on the SOURCE terminals.

4. Do not short the HIGH VOLTAGE terminal with ground. Doing so could charge the chassis to dangerously high voltages.
5. Ensure the earth ground of the line voltage is properly grounded.
6. Only connect the test leads to the HIGH VOLTAGE/SOURCE H/SENSE H terminals before the start of a test. Keep the test leads disconnected at all other times.
7. Always press the STOP button when pausing testing.
8. Do not leave the safety tester unattended. Always turn the power off when leaving the testing area.
9. When remotely controlling the safety tester, ensure adequate safety measures are in place to prevent:

- Inadvertent output of the test voltage.
- Accidental contact with the instrument during testing. Ensure that the instrument and DUT are fully isolated when the instrument is remotely controlled.

10. Ensure an adequate discharge time for the DUT.

When DCW or IR tests are performed, the DUT, test leads and probes become highly charged. The IIT-2000/2010/5000/5010 has discharge circuitry to discharge the DUT after each test. The time required for a DUT to discharge depends on the DUT and test voltage.

Never disconnect the safety tester before a discharge is completed.

Basic Safety Checks

Background The IIT-2000/2010/5000/5010 is a high voltage device and as such, daily safety checks should be made to ensure safe operation.

1. Ensure all test leads are not broken and are free from defects such as cracks or splitting.
2. Ensure the safety tester is always connected to an earth ground.
3. Test the safety tester operation with a low voltage/current output:

 Ensure the safety tester generates a FAIL judgment when the HIGH VOLTAGE and RETURN terminals are shorted (using the lowest voltage/current as the testing parameters).



WARNING

Do not use high voltages/currents when the HIGH VOLTAGE and RETURN terminals are shorted. It may result in damage to the instrument.

OPERATION


Menu Tree	34
Menu Tree Overview.....	35
Test Lead Connection	39
ACW, DCW, IR Connection	39
GB Connection.....	40
ACW, DCW, IR and GB Manual Testing	42
Choose/Recall a Manual Test Number	44
Edit Manual Test Settings	45
Setting the Test Function	46
Setting the Test Voltage or Test Current	47
Setting the Test Frequency.....	48
Setting the Upper and Lower Limits.....	49
Setting a Reference Value	52
Setting the Test Time (Timer)	53
Setting the Ramp Up Time.....	55
Creating a MANU Test File Name	56



Setting the ARC Mode	58
Setting PASS HOLD	62
Setting FAIL MODE	63
Setting MAX HOLD	65
Setting the Grounding Mode	66
Saving and Exiting EDIT Status.....	71
Running a MANU Test.....	72
PASS / FAIL MANU Test	77
Zeroing of the Test Leads (GB only).....	83
Special MANU Test Mode (000)	86
Automatic Tests	92
Choose/Recall an Automatic Test	93
Edit Automatic Test Settings.....	94
Adding a Step to the Automatic Test	95
Creating an AUTO Test File Name	96
Saving and Exiting EDIT Status.....	98
Automatic Test Page View.....	99
Running an Automatic Test.....	102
Automatic Test Results	107

Menu Tree


This section describes the overall structure of the operation statuses and modes for the IIT-2000/2010/5000/ 5010 safety testers. The testers have two main testing modes (MANU, AUTO) and 5 main operation statuses (VIEW, EDIT, READY, TEST and STOP).

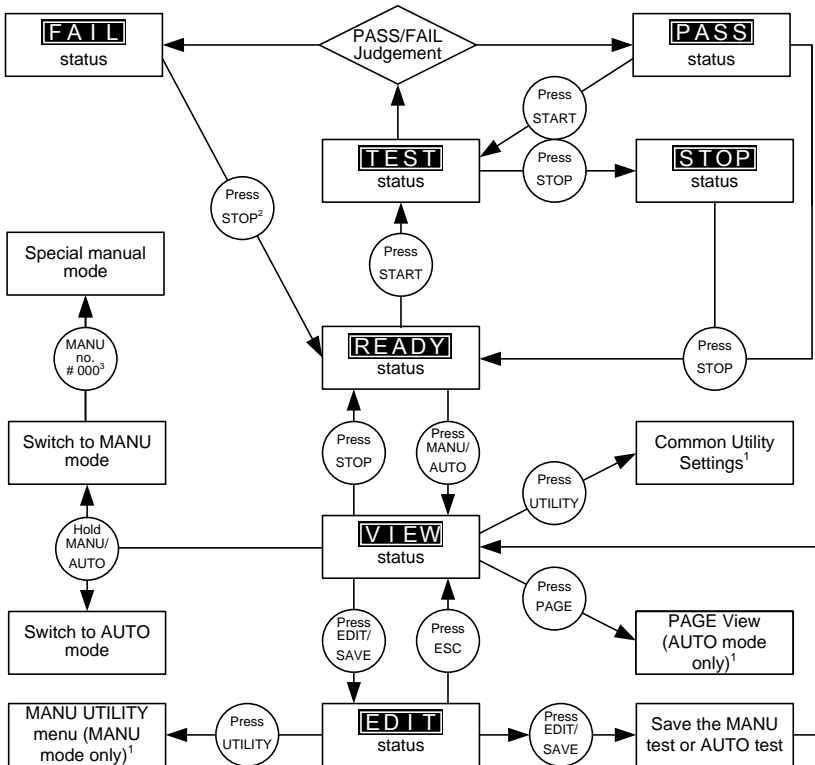


1 Press EDIT/SAVE to save settings, or ESC to cancel and return to the previous screen.
 2 Press the STOP key twice for a FAIL result.
 3 When in MANU mode, selecting MANU number 000 will enter the special manual mode.
 4 The Sweep mode function is only accessible in the special manual mode.

Menu Tree Overview

VIEW status VIEW status is used to view the parameters of the selected manual test/automatic test. The VIEW status is also used to put the tester into MANU or AUTO mode.

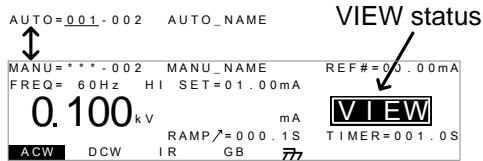


EDIT status EDIT status is used to edit the manual test or automatic test parameters. Pressing the EDIT/SAVE key will save any changes. Pressing the ESC key will cancel any changes.

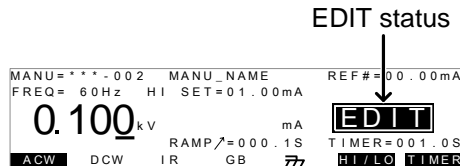

READY status

When the tester is in READY status, it is ready to begin testing. Pressing the START button will begin testing and put the tester into TEST status. Pressing the MANU/AUTO key will return the tester to VIEW status.


READY status

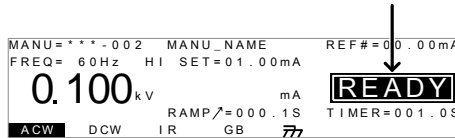

TEST status

TEST status is active when a MANU test or AUTO test is running. Pressing STOP will cancel the MANU test or the remaining steps in an AUTO test.


TEST status

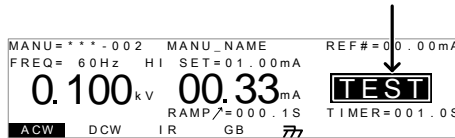

STOP status

STOP status is shown when a manual test or automatic test did not finish running and has been stopped by the operator. Pressing STOP will return the tester to READY status.

STOP status

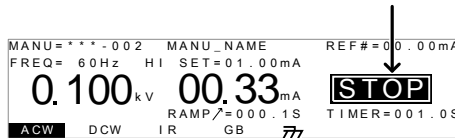

Page View

Up to 16 tests can be used to create an automatic test. Page View is used to see which manual tests (steps) an automatic test is composed of. The steps can be re-arranged and deleted in Page View.

```
AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI SET=01.00mA
#01: 0.100 #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09:007 #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
```

AUTO mode

AUTO indicates that the tester is in AUTO mode. AUTO mode is for creating/running a sequence of up to 16 MANU tests.

AUTO mode

↙

```
AUTO=003-002 AUTO_NAME REF#=00.00mA
FREQ= 60Hz HI SET=01.00mA
0.100kV mA EDIT
ACW DCW IR GB 77 ADD
RAMP=000.1S TIMER=001.0S
```

MANU mode

MANU mode is used to create and/or execute a single test. MANU indicates that the manual test mode is active.

MANU mode

↙

```
MANU=***-002 MANU_NAME REF#=00.00mA
FREQ= 60Hz HI SET=01.00mA
0.100kV mA EDIT
ACW DCW IR GB 77 HI/LO TIMER
RAMP=000.1S
```

Common Utility Settings

This utility controls the LCD, buzzer, interface and control settings. These settings are system wide.

```
COMMON UTILITY
Start Ctrl:FRONT PANEL
Double Action:OFF
Key Lock:OFF INTERLOCK:OFF
LCD BUZZ INTER CTRL
```

MANU Utility Settings

The Manu Utility settings are configured for each MANU test separately. The settings include: ARC MODE, PASS HOLD, FAIL MODE, MAX HOLD and GROUND MODE.

```
MANU=***-002 MANU UTILITY
ARC MODE:OFF
PASS HOLD:OFF
FAIL MODE:Stop
MAX HOLD:OFF
GROUND MODE:ON
```



Test Lead Connection

This section describes how to connect the IIT-2000/2010/5000/5010 to a DUT for withstanding, insulation resistance or ground bond testing.


ACW, DCW, IR Connection

Background ACW, DCW and IR tests use the HIGH VOLTAGE terminal and RETURN terminal with the GHT-114 test leads.

ACW, DCW, IR Connection

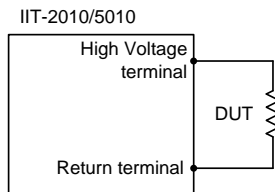


- Steps**
1. Turn the power off on the safety tester.
 2. Connect the high voltage test lead(red) to the HIGH VOLTAGE terminal and screw firmly into place.
 3. Connect the return test lead (white) into the RETURN terminal and screw the protector bar into place, as shown below.

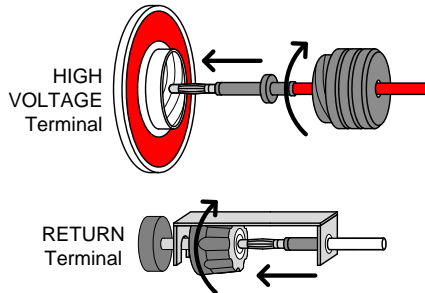

GB Connection


Background GB tests use the SENSE H/L and SOURCE H/L terminals with the GTL-115 test leads.

GB Connection

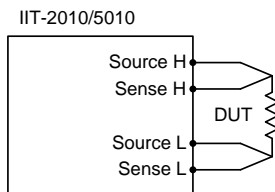

Steps

1. Turn the power off on the safety tester.
2. Connect the Sense H lead to the SENSE H terminal.
3. Connect the Sense L lead to the SENSE L terminal.
4. Connect the Source H lead to the SOURCE H terminal.
5. Connect the Source L lead to the SOURCE L terminal.

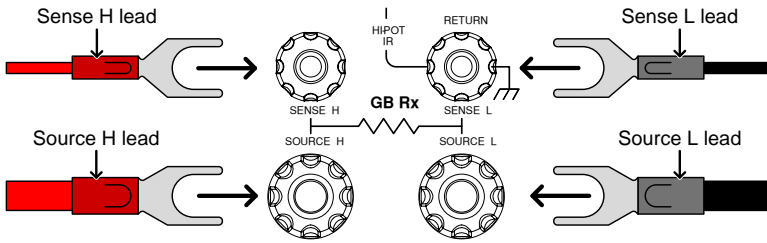

ACW, DCW, IR and GB Manual Testing

This section describes how to create, edit and run a *single* ACW, DCW, IR or GB safety test. Each Manual setting described in this chapter *only applies to the selected* manual test – *no other manual tests are affected*.

Each manual test can be stored/recalled to/from one of 100 memory locations.

Each stored manual test can be used as a test step when creating an AUTO test (page 92).

- Choose/Recall a Manual Test number → from page 44.
- Edit Manual Test Settings → from page 45.
- Setting the Test Function → from page 46.
- Setting the Test Voltage or Test Current → from page 47.
- Setting the Test Frequency → from page 48.
- Setting the Upper and Lower Limits → from page 49.
- Setting a Reference Value → from page 52.
- Setting the Test Time (Timer) → from page 53.
- Setting the Ramp Up Time → from page 55.
- Creating a MANU Test File Name → from page 56.
- Setting the ARC Mode → from page 58.
- Setting PASS HOLD → from page 62.
- Setting FAIL MODE → from page 63.
- Setting MAX HOLD → from page 65.

- Setting the Grounding Mode → from page 66.
- Saving and Exiting EDIT Status→ from page 71.
- Running a MANU Test → from page 72.
- PASS / FAIL MANU Test → from page 77.
- Zeroing of the Test Leads (GB only) → from page 83
- Special MANU Test Mode (000) → from page 86

Before operating the IIT-2000/2010/5000/5010, please read the safety precautions as outlined in the Set Up chapter on page 24.

Choose/Recall a Manual Test Number


Background ACW, DCW, IR and GB tests can only be created in the MANU (manual) mode. MANU number 001 to 100 can be saved and thus be loaded when editing/creating a MANU test or AUTO test. MANU number 000 is a special mode. See page 83 for details on the special mode.

Steps


1. If the tester is in AUTO mode, press and hold the MANU/AUTO key for three seconds to switch to MANU mode.



The tester can only switch between AUTO and MANU mode when in the VIEW status.

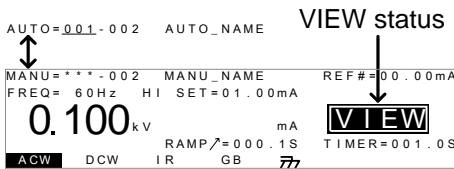


2. Use the scroll wheel to choose the MANU number.



MANU # 001~100

(MANU# 000 is a special mode)

MANU number



Note

The MANU number can only be chosen in VIEW status. If in the EDIT status, switch to the VIEW status by pressing the EDIT/SAVE or ESC key.

Edit Manual Test Settings


Background To edit any of the manual test settings, the tester must be in EDIT status.

Any settings or parameters that are edited only apply to the currently selected MANU number.

Steps

1. Press the EDIT/SAVE key when in VIEW status to enter the EDIT status. This will enter the EDIT status for the chosen test number.

EDIT/SAVE

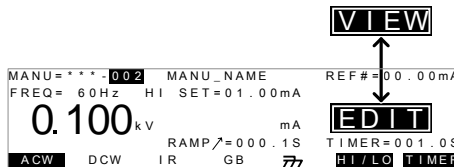

2. The Status changes from VIEW to EDIT.



Note

Pressing the EDIT/SAVE key again will save the settings for the current test and return back to VIEW status.

Setting the Test Function

Background

After a MANU number has been chosen and the tester is in EDIT status, a test function can be set.


There are four test functions, AC Withstand, DC Withstand, Insulation Resistance and Ground Bond.

Steps

1. To choose the test function, press the ACW, DCW, IR or GB soft-keys.



2. The test function soft-key is highlighted.



↑
test function





Note

The chosen test function only applies to the current test.

Setting the Test Voltage or Test Current


Background The test voltage can be set from 0.050kV to 5kV for ACW, 0.050kV to 6kV for DCW and 0.050 to 1kV for IR (50V steps*). For GB tests the test current can be set from 3A to 30A (IIT-2010) or 3A to 32A (IIT-5010).
*IIT-5010 includes a 125V test point.

Steps 1. Press the UP / DOWN arrow keys to bring the cursor to the voltage setting.



cursor

2. Use the scroll wheel to set the voltage level.



ACW	0.100kV ~ 5kV
DCW	0.100kV ~ 6kV
IR	0.05kV ~ 1kV (50V steps) ¹
GB	3.00A ~ 33.00A (IIT-2010)
	3.00A~ 33.00A (IIT-5010)

¹ IIT-5010 includes a 125V test point.



Note

When setting the voltage, be aware that a maximum of 200VA can be set for ACW and 50W for DCW (IIT-2000/2010) or 500VA and 100W, respectively for IIT-5010/5000.

The ground bond voltage (GBV) is calculated as the HI SET limit x Test Current.

Setting the Test Frequency

Background

A test frequency of 60Hz or 50Hz can be set, regardless of the input line voltage. The test frequency setting only applies to ACW and GB tests.

Steps

1. Press the UP / DOWN arrow keys to bring the cursor to the FREQ setting.




```

MANU=***-002  MANU_NAME  REF#=00.00mA
FREQ= 60Hz  HI SET=01.00mA
0.100 kV  mA  EDIT
ACW  ICW  IR  GB  77  HI/LO  TIMER
  
```

cursor

2. Use the scroll wheel to set the test frequency.



ACW, GB 50Hz, 60Hz



Note

The test frequency can only be set for ACW or GB tests.

Setting the Upper and Lower Limits

Background

There is both a LO and HI judgment setting. When the measured value is below the LO SET setting, the test will be judged as FAIL. When the value exceeds the HI SET setting the test will be judged as FAIL. Any measurement between the LO SET and HI SET setting is judged as PASS. The LO SET limit cannot be made greater than the HI SET limit.


Steps

1. Press the HI/LO soft-key or use the UP / DOWN arrow keys to bring the cursor to the HI SET (ACW/DCW/GB) setting or the LO SET(IR) setting.

HI/LO




OR



CURSOR

- Use the scroll wheel to set the HI SET/LO SET limit*.



ACW (HI) 0.001mA~042.0mA (IIT-2000/2010)
 0.001mA~110.0mA (IIT-5000/5010)

DCW (HI) 0.001mA~011.0mA (IIT-2000/2010)
 0.001mA~021.0mA (IIT-5000/5010)


IR (LO) 0001MΩ ~ 9999MΩ (IIT-2010)
 0.001GΩ ~ 50.00GΩ (IIT-5010)

GB (HI) 000.1mΩ ~ 650.0mΩ


- Press the HI/LO soft-key again or press the DOWN arrow key to switch between HI SET and LO SET.



OR

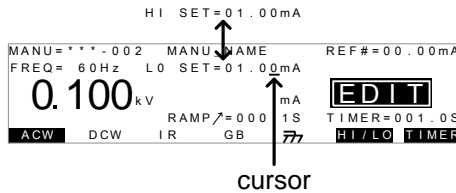

- Use the scroll wheel to set the HI SET/LO SET limit*.



ACW (LO)	0.000mA~041.9mA (IIT-2000/2010) 0.000mA~109.9mA (IIT-5000/5010)
DCW (LO)	0.000mA~010.9mA (IIT-2000/2010) 0.000mA~020.9mA (IIT-5000/5010)
IR (HI)	0001M Ω ~9999M Ω , ∞ (IIT-2010) 0.001G Ω ~50.00G Ω , ∞ (IIT-5010)
GB (LO)	000.0m Ω ~ 649.9m Ω



Note

*Please note that the resolution of the measured value depends on the resolution of HI SET setting.



Note


The LO SET setting is limited by the HI SET setting. The LO SET limit cannot be greater than the HI SET limit.

When setting the current, be aware that a maximum of 200VA can be set for ACW and 50W for DCW (IIT-2000/2010) or 500VA and 100W, respectively for IIT-5010/5000.


Setting a Reference Value

Background The REF# acts as an offset. The REF# value is subtracted from the measured current (ACW, DCW) or measured resistance (IR, GB).

- Steps**
1. Press the UP / DOWN arrow keys to bring the cursor to the REF# setting.

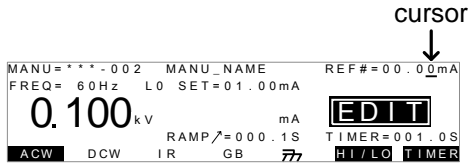

2. Use the scroll wheel to set the REF# value.



ACW	0.000mA~HI SET current-0.1mA
DCW	0.000mA~HI SET current-0.1mA
IR	0000MΩ~HI SETΩ-1MΩ
GB	000.0mΩ~HI SETΩ-0.1mΩ




Note

For GB tests, a reference offset can be automatically created using the zeroing function. See page 83 for details.

Setting the Test Time (Timer)

Background The TIMER setting is used to set the test time for the current test. The test time determines how long the test voltage or current is applied to the DUT. This test time does not include Ramp \nearrow , initial start time or discharge time (note: GB does not have Ramp \nearrow or discharge times). The test time can be set from 0.5 seconds to 999.9 seconds for ACW, DCW and GB and 1.0 second to 999.9 seconds for IR, with a resolution of 0.1 seconds for all modes. The timer can be turned off when in the special MANU test mode when using the ACW or DCW test functions.

Each test has an initial test time of approximately 150ms and a discharge time (except GB). The total discharge time depends on the DUT and test voltage.

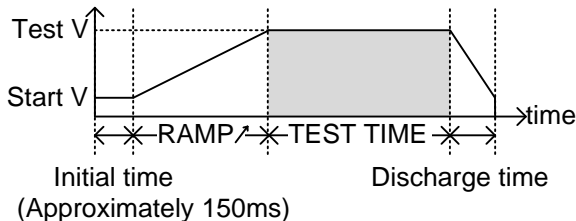


Steps

1. Press the TIMER soft-key or use the UP/DOWN arrow keys to bring the cursor to the TIMER setting.

TIMER




OR



cursor

2. Use the scroll wheel to set the TIMER value.



ACW	000.5s~999.9s
DCW	000.5s~999.9s
IR	001.0s~999.9s
GB	000.5s~999.9s

 Note

With the ACW test function, when the test current is between 30mA and 40mA (IIT-2000/2010) or 80mA and 100mA (IIT-5010/5000), the ramp time + test time cannot exceed 240 seconds. At this current level, the tester also needs to pause after a test for a time equal to or greater than the output time. See the specifications on page 201 for details.

Special Manual Mode

When in special MANU test mode (page 83) the Timer can be turned off when using the DCW or ACW test function.

Hold the **TIMER** soft-key for 3 seconds to turn the timer off.



 **Note**

The timer can only be turned off under special MANU test mode, however there is a limitation:


The timer cannot be turned off (limited to 240s) if the test current is between 30mA and 40mA (IIT-2000/2010) or 80mA and 100mA (IIT-5010/5000) in ACW mode.

The discharge time and initial test time cannot be edited.

Setting the Ramp Up Time



Background

The Ramp Up time is the total time taken for the tester to reach the test voltage level. The Ramp Up time starts after the initial time (approximately 150ms) with a start voltage of 50 volts. The Ramp Up time can be set from 000.1 to 999.9 seconds. The Ramp Up time is only applicable for ACW, DCW and IR tests.

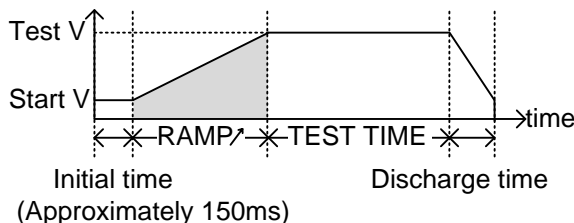


Steps

1. Use the UP/DOWN arrow keys to bring the cursor to the RAMP ↗ setting.

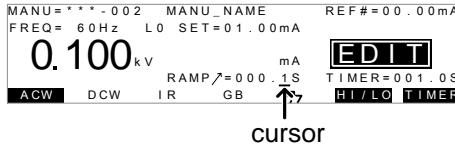

2. Use the scroll wheel to set the RAMP ↗ value.



ACW	000.1s~999.9s
DCW	000.1s~999.9s
IR	000.1s~999.9s



Note

The discharge time and initial test time cannot be edited.

Creating a MANU Test File Name

Background



Each manual test can have a user-defined test file name (default: MANU_NAME) up to 10 characters long. See the character list below for the allowed characters.

Character List


0	1	2	3	4	5	6	7	8	9																
A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y	z
+	-	*	/	_	=	:	Ω	?	()	<	>	[]											

Steps

1. Use the UP/DOWN arrow keys to bring the cursor to the MANU test file name at the top of the screen. The test file name is initially set as MANU_NAME.

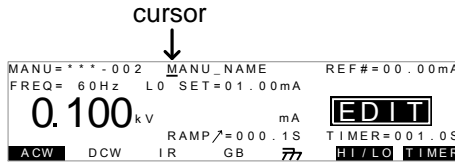

2. Use the scroll wheel to scroll through the available characters.



3. Press the Left/Right arrow keys to go the next character.



4. The MANU test file name is set when the current test setting is saved or when the cursor is moved to another setting.

Setting the ARC Mode

Background

ARC detection, otherwise known as flashover detection, detects fast voltage or current transients that are not normally detected. Arcing is usually an indicator of poor withstanding insulation, electrode gaps or other insulating problems that cause temporary spikes in current or voltage during ACW and DCW testing.

There are three ARC detection settings: OFF, ON AND CONTINUE, ON AND STOP.

The ON AND CONTINUE setting will detect arcs over the ARC current level and continue the test, the ON AND STOP setting will stop the test when an arc is detected.

ARC mode settings only apply to ACW and DCW tests.

Steps

1. Press the UTILITY key on the front panel when the tester is in EDIT status. The tester will go to the MANU Utility for the *current test*.

UTILITY



```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL MODE:STOP
MAX  HOLD:OFF
GROUND MODE:ON
```


**Note**

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the ARC MODE setting.



3. Use the scroll wheel to set the ARC mode.



ARC OFF, ON AND CONTINUE,
MODES: ON AND STOP

4. Press the EDIT/SAVE key to save and exit the MANU Utility and go back to EDIT status.

EDIT/SAVE



MANU=***-002	MANU_NAME	REF#=00.00mA
FREQ= 60Hz	HI SET=01.00mA	ARC= 01.00mA
0.100 _{kV}	mA	EDIT
ACW	DCW	IR
GB	77	HI/LO
RAMP=000.1S	TIMER=001.0S	TIMER

**Note**


The ESC key can be pressed at any time in the Utility menu to cancel and exit.

5. If the ARC MODE was set to either ON AND CONTINUE, or ON AND STOP, the ARC current level can be edited.

6. Use the UP/DOWN arrow keys to move the cursor to the ARC setting.



7. Use the scroll wheel to edit the ARC level.



IIT-2000/2010:

ACW 1.000mA~080.0mA

DCW 1.000mA~020.0mA

IIT-5010/5000:

ACW 2.000mA~200.0mA

DCW 2.000mA~040.0mA



Note

The ARC setting range is directly related to the HI SET current limit.

 ACW: IIT-2000/2010

HI SET Limit	ARC Range
0.001mA~0.999mA	1.000mA ~2.000mA
01.00mA~09.99mA	01.00mA ~20.00mA
010.0mA~042.0mA	001.0mA ~080.0mA

 ACW: IIT-5010/5000

HI SET Limit	ARC Range
0.001mA~1.100mA	2.000mA
01.11mA~11.00mA	02.00mA ~20.00mA
011.1mA~110.0mA	002.0mA ~200.0mA

 DCW: IIT-2000/2010


HI SET Limit	ARC Range
0.001mA~0.999mA	1.000mA ~2.000mA
01.00mA~09.99mA	01.00mA ~20.00mA
010.0mA~011.0mA	001.0mA ~020.0mA

 DCW: IIT-5010/5000

HI SET Limit	ARC Range
0.001mA~1.100mA	2.000mA
01.11mA~11.00mA	02.00mA ~20.00mA
011.1mA~021.0mA	002.0mA ~040.0mA

Setting PASS HOLD


Background The PASS HOLD settings only apply to the selected test in an AUTO test. When the PASS HOLD setting is set to ON, a PASS judgment is held until the START button is pressed.

 **Note** The PASS HOLD setting only applies to AUTO tests. This setting is ignored when running *a single* MANU test.

Steps 1. Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test*.




```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL MODE:STOP
MAX  HOLD:OFF
GROUND MODE:ON
```

 **Note** The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the PASS HOLD setting.



3. Use the scroll wheel to set PASS HOLD.



PASS OFF, ON
HOLD

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

Setting FAIL MODE

Background The FAIL MODE settings only apply to the selected test in AUTO tests.

FAIL MODE has three options, CONTINUE, HOLD and STOP.

When FAIL MODE is set to CONTINUE the tester will continue testing after a FAIL judgment.

When set to HOLD, the tester will hold the test on a FAIL judgment, and then continue testing after the START key is pressed.

The STOP mode will completely stop the test after a FAIL judgment.



Note

The FAIL MODE setting only applies to AUTO tests. This setting is ignored when running MANU tests.

Steps

1. Press the UTILITY key on the front panel when the tester is in MANU/EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for the current test.

UTILITY




```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL MODE: STOP
MAX  HOLD:OFF
GROUND MODE:ON
```

2. Use the UP/DOWN arrow keys to move to the FAIL MODE setting.



3. Use the scroll wheel to set FAIL MODE.



FAIL MODE CONTINUE, HOLD, STOP

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

Setting MAX HOLD

Background The MAX HOLD setting will hold the maximum current measured in the ACW and DCW tests or the maximum resistance measured in IR and GB tests.

Steps 1. Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test.*



```
MANU=***-002  MANU UTILITY
ARC  MODE:OFF
PASS HOLD:OFF
FAIL MODE:STOP
MAX  HOLD:OFF
GROUND MODE:ON
```




Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move to the MAX HOLD setting.



3. Use the scroll wheel to set MAX HOLD.



MAX HOLD OFF, ON

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.

EDIT/SAVE



Note

The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

Setting the Grounding Mode

Background

When GROUND MODE is set to ON, the IIT-2000/2010/5000/5010 grounds the return terminal to the ground. This mode is best for DUTs that are grounded to an earth ground by their chassis, fixtures or operation environment. This mode measures the potential of the HIGH VOLTAGE terminal with respect to earth ground. This means that any stray capacitance/resistance that leaks to earth ground will also be measured. This is the safest testing mode, though potentially not as accurate.


When GROUND MODE is set to OFF, the return terminal is floating with respect to the earth ground. This mode is for DUTs that are floating and not directly connected to an earth ground. This is more accurate than when GROUND MODE is set to ON as any stray capacitance/resistance that leaks to the earth ground from the DUT side of the testing circuit will not be measured. For this reason, this testing mode is able to

measure to a higher resolution.

The GROUND MODE is always set to OFF for IR and GB tests.


GROUND MODE = ON, DUT grounded

IIT-2000/2010/5000/5010

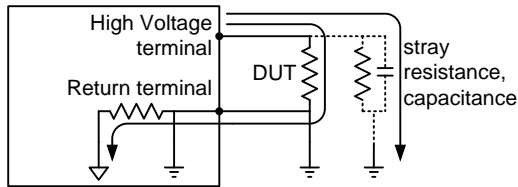


GROUND MODE = ON, DUT floating

IIT-2000/2010/5000/5010

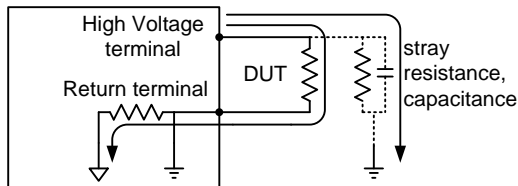


GROUND MODE = OFF, DUT floating

IIT-2000/2010/5000/5010

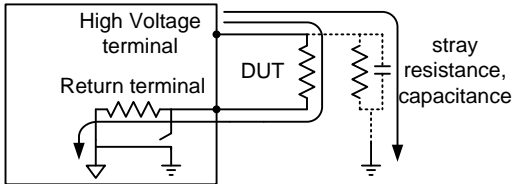


IIT-2010/5010(GB testing)

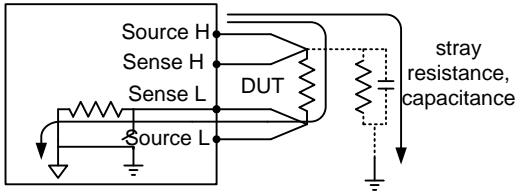


GROUND MODE = OFF, DUT grounded

IIT-2000/2010/5000/5010

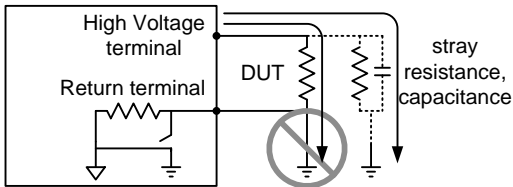

IIT-2010/5010(GB testing)

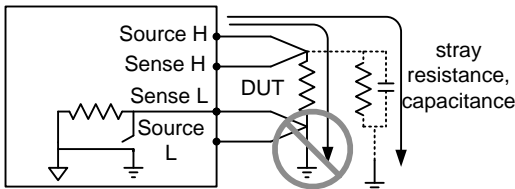

 Warning

When GROUND MODE is set to OFF, the DUT, fixtures or connected instrumentation cannot be grounded. This will short circuit the internal circuitry during a test.

For ACW and DCW tests, if it is not known whether the DUT test setup is grounded or not, always set GROUND MODE to ON.

Only set GROUND MODE to OFF when the DUT is floating electrically.

Steps

1. Press the UTILITY key on the front panel when the tester is in EDIT status. The display will go from the normal EDIT status to the MANU Utility menu for *the current test*.

UTILITY



```
MANU=***-002  MANU UTILITY
ARC  MODE: OFF
PASS HOLD: OFF
FAIL MODE: STOP
MAX  HOLD: OFF
GROUND MODE: ON
```


 Note

The MANU UTILITY settings only apply to the selected MANU test.

2. Use the UP/DOWN arrow keys to move the cursor to the GROUND MODE setting.



3. Use the scroll wheel to set the GROUND MODE.



GROUND MODE OFF, ON

4. Press the EDIT/SAVE key to save and exit the MANU Utility menu.



5. The GROUND MODE icon on the display changes accordingly.

_NAME	REF# =
= 01 . 00 mA	
mA	ED
λ= 000 . 1 S	TIMER
GB	OFF

↑

GROUND
MODE = OFF

_NAME	REF# =
= 01 . 00 mA	
mA	ED
λ= 000 . 1 S	TIMER
GB	ON

↑

GROUND
MODE = ON




The ESC key can be pressed at any time in the MANU Utility menu to cancel and exit.

IR and GB tests can only have GROUND MODE set to OFF.


Saving and Exiting EDIT Status

Background After all test parameters have been set, the test can be saved. After a test is saved it can be used when creating an AUTO test.


 **Warning** The special MANU number, 000, can be saved, however it cannot be used for AUTO tests. See page 83 for details.

Steps 1. When in EDIT status, press the EDIT/SAVE key to save the current test. This will enter the VIEW status for the chosen test number.

EDIT/SAVE

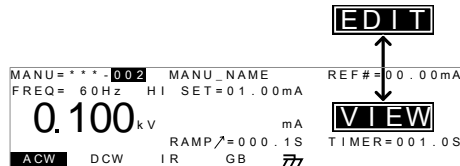

2. The Status changes from EDIT to VIEW.

 **Note** Pressing the EDIT/SAVE key again will return the tester back to EDIT status for the current test.

Running a MANU Test

Background A test can be run when the tester is in READY status.



The tester cannot start to run a test under the following conditions:

- A protection setting has been tripped; when a protection setting has been tripped the corresponding error message is displayed on the screen. See page 198 for a comprehensive list of the all the setting errors.
- The INTERLOCK function is ON and the Interlock key is not inserted in the signal I/O port (page 117).
- The STOP signal has been received remotely.


If Double Action is ON, ensure the START button is pressed immediately after the STOP button (<0.5s).




When a test is running the voltage output cannot be changed, unless the test is under the special manual mode. See page 83 for details.

Steps 1. Ensure the tester is in VIEW status for the current Page 71 test. Save the current test if necessary.


VIEW status



2. Press the STOP button to put the tester into the READY status.

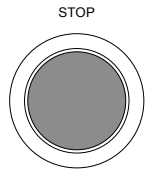


READY status



3. The READY indicator will be lit blue when in the READY status.




4. Press the START button when the tester is in the READY status. The manual test starts automatically and the tester goes into the TEST status.

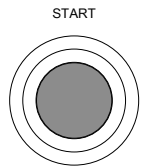


5. The TEST indicator will be lit orange when in the TEST status.




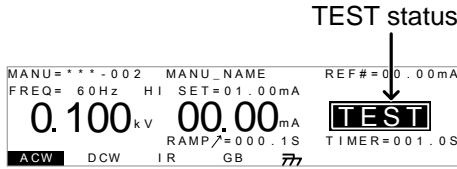


- The test will start by showing the remaining ramp up time, followed by the remaining test time. The test will continue until the test is finished or the test is stopped.

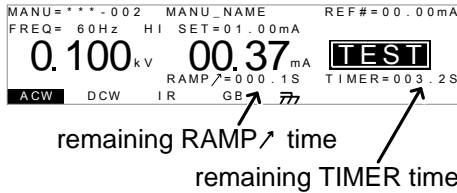


ACW Example

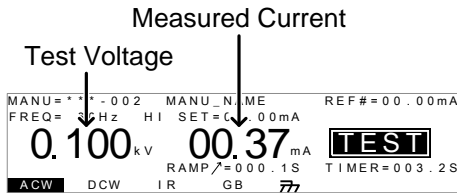


DCW Example

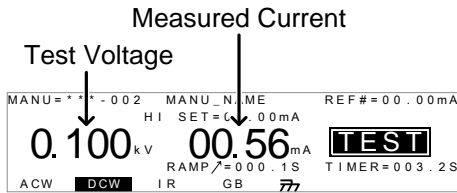

IR Example

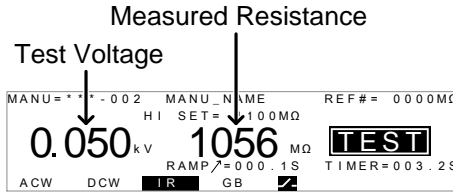


GB Example

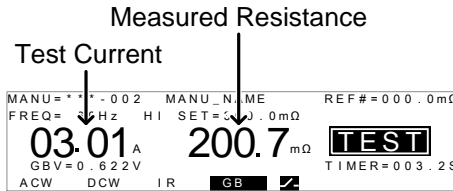


Stop the Test


1. To stop the test at any time when it is running, press the STOP button. The test will stop immediately. When the STOP button is pressed, a judgment is not made on the test.

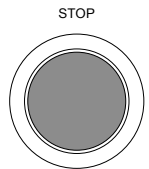

All panel keys except the STOP button are locked when the tester is in STOP status.

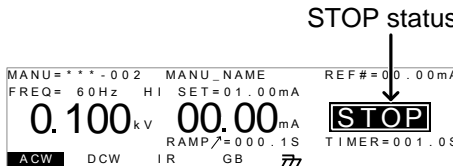

2. To put the tester back into READY status, press the STOP button again.

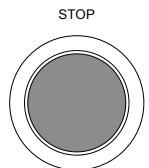

Exit TEST Status To exit testing, press the MANU/AUTO key when the tester is in the READY status. The tester will revert to the VIEW status for the current test.

MANU/AUTO



```
MANU=***-002  MANU_NAME  REF#=00.00mA
FREQ= 60Hz  HI SET=01.00mA
0.100 kV  mA  VIEW
RAMP=000.1S  TIMER=001.0S
ACW  DCW  IR  GB  77
```



Do not touch any terminals, test leads or any other connections when the test is on.

PASS / FAIL MANU Test

Background If the test is allowed to run to completion (the test is not stopped or a protection setting is not tripped) then the tester will judge the test as either PASS or FAIL.



Note

The test will be judged PASS when:

- The HI SET and LO SET limits have not been tripped during the test time.

The test will be judged FAIL when:

- Either the HI SET or LO SET limit has been tripped during the test time.
 - A protection setting has been tripped during the test time.
- See page 198 for a list of error messages.
-

PASS Judgment 1. When the test is judged as PASS, PASS will be displayed, the buzzer will sound and the PASS indicator will be lit green.


PASS




MANU=***-002	MANU_NAME	REF#=00.00mA
FREQ= 60Hz	HI SET=01.00mA	
0.100 kV	00.37 mA	PASS
	RAMP=000.1S	TIMER=001.0S
ACW	DCW	IR GB 77

2. The PASS judgment will be held on the display until the STOP or START button is pressed.

Pressing the STOP button will return the tester to the READY status.

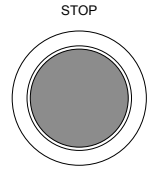

Pressing the START button will restart the test.

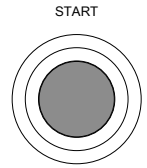

Note


The buzzer will only sound if the Pass Sound is set to ON. See page 113 for details.

The START button is disabled when the buzzer is beeping.

PASS Timing Diagrams


The timing diagrams below show the ACW, DCW, IR and GB timing for the START status, TEST status and PASS judgment.

ACW PASS Timing

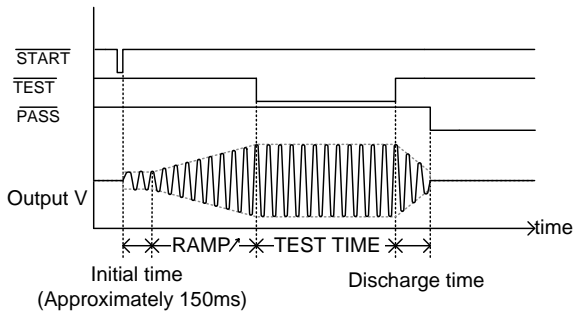


DCW PASS

Timing

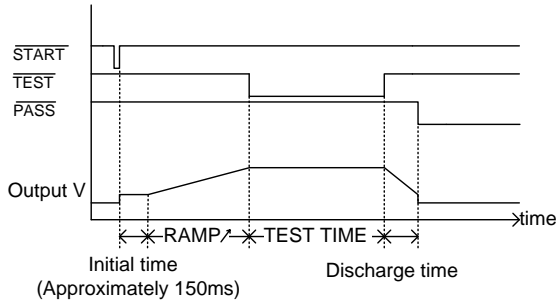


IR PASS Timing

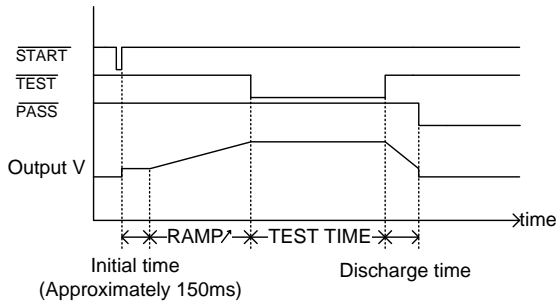

GB PASS

Timing

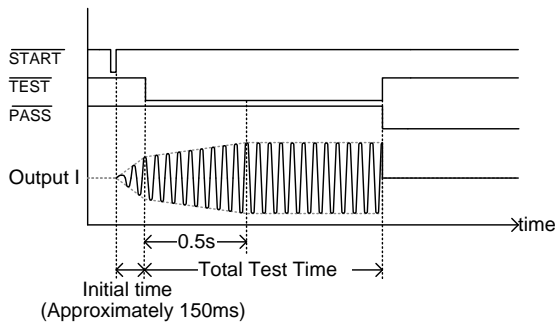

- FAIL Judgment
1. When the test is judged as FAIL, FAIL will be displayed, the buzzer will sound and the FAIL indicator will be lit red.

FAIL




As soon as a test is judged FAIL, power is cut from the terminals.



2. The FAIL judgment will be held on the display until the STOP button is pressed. Pressing the STOP button twice will return the tester to the READY status.

STOP

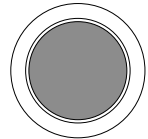


3. The READY indicator will be lit blue in the READY status.

READY



READY status




Note

The buzzer will only sound if Fail Sound is set to ON. See page 113 for details.


FAIL Timing Diagrams

The timing diagrams below show the ACW, DCW, IR and GB timing for the START status, TEST status and FAIL judgment.


ACW FAIL Timing

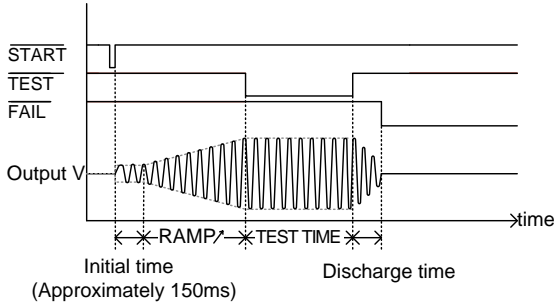


DCW FAIL Timing

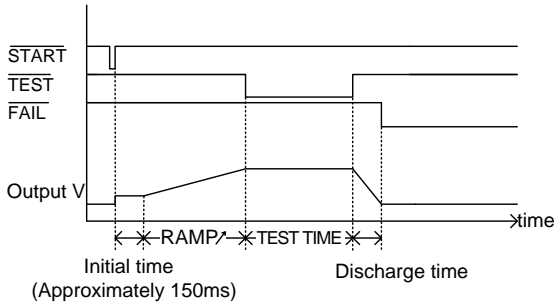

IR FAIL Timing

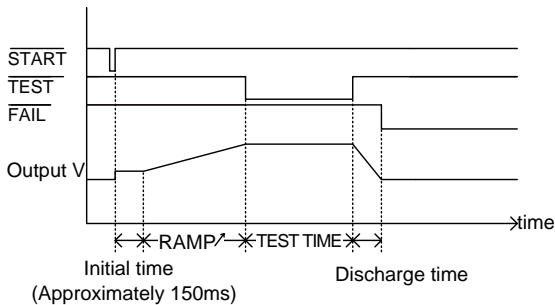

GB FAIL Timing

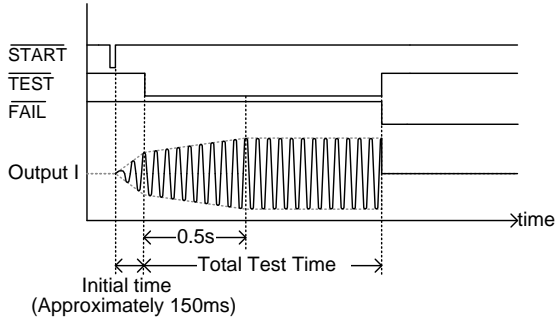

Zeroing of the Test Leads (GB only)


Background The Zeroing function is used to determine the resistance of the test leads for GB tests. When a zero check is performed, the reference is automatically set to the measured resistance of the test leads.

This function is only available for GB testing.


Steps

1. Ensure the tester is in VIEW status for the current GB test. Save the current test if necessary.


Page 71



2. Short the positive and negative alligator clips as shown below.

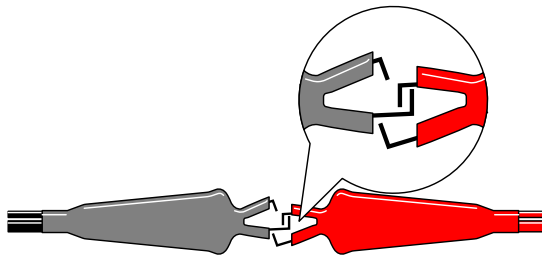



3. Press the STOP button to put the tester into the READY status.

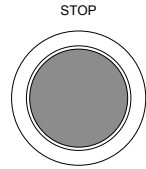

4. The ZERO function can be activated by pressing the corresponding soft-key in the READY status. The ZERO soft-key will be highlighted.




5. Press the START button to perform the zero check. The tester will go into the ZERO status.

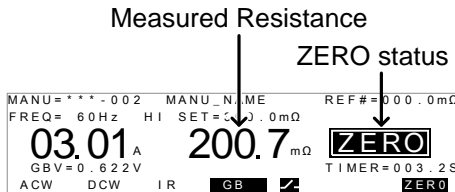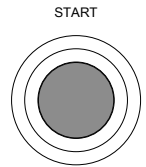

6. When the zero check has finished, the tester will judge the test as either PASS or FAIL. If the test has passed, the resistance of the test leads will be automatically set as the Reference value.

Reference value

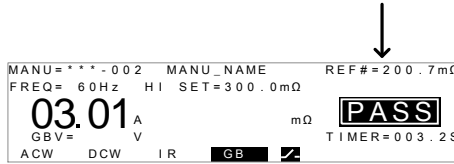


Note

Remember to replace the test leads to the proper position on the DUT before testing.

I<SET

If SOURCE H/L terminals are open or poorly connected, then the test will fail and an I<SET error will appear on the screen. Stop the test and re-check the connection again and try again.


I<SET error message

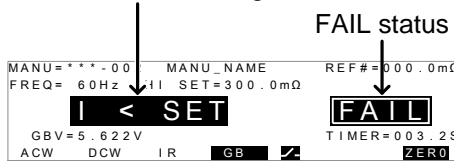

R = 0

If an R = 0 error message appear on the screen, stop the test and perform the zero check again.

R = 0 error message

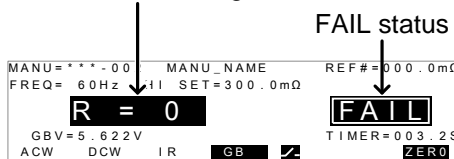


Special MANU Test Mode (000)

Special Test Mode Overview When MANU number 000 is selected, the special test mode is activated. Under the special test mode, the voltage can be changed during a test, in real time (ACW, DCW only). The test function can also be changed when in READY or VIEW status, unlike under normal operation.

Separate settings can be saved under the special test mode for each of the testing functions: ACW, DCW, IR and GB. This means a different ACW, DCW, IR and GB test setup can be saved for MANU number 000.

Sweep Function Overview The IIT-5000 and 5010 have access to the sweep mode function. The sweep function creates a graph of one of the ACW, DCW, IR or GB tests in the special manual mode. The graph will plot the output voltage, current or resistance versus time. After the test has been completed, the test current, voltage or resistance at any point in time can be viewed in the graph.

Below is an example of the resultant sweep plot of a DCW test where a DC voltage is ramped up to a user-defined level until the HI SET current level has been tripped or the test time runs out.

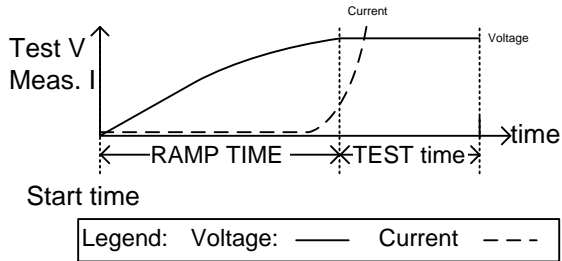

The test items that are plotted on the sweep graph depend on the type of test that is performed.

TEST Graph Test Items

ACW: Test voltage, measured current (V, I)

DCW: Test voltage, measured current (V, I)

IR: Test voltage, measured resistance (V, R)

GB: Test current, measured resistance (I, R)

Steps

1. Choose MANU number 000 to enter the special test Page 44 mode.

2. The settings of a previous test can be loaded by pressing the corresponding soft-key in the VIEW or READY status.

ACW



Example:
ACW

For example, if you are currently in DCW mode, pressing the ACW key will load the ACW settings that were previously used in the special manual mode.

3. Set all the necessary parameters for a test and save.

Pages
45~71

Note: A different test setup can be saved for each test function (ACW, DCW, IR and GB).

```

MANU=***-000  MANU_NAME  REF#=00.00mA
FREQ= 60Hz  HI SET=01.00mA
0.100 kV  mA  VIEW
STA.t=0000.1S  RAMP/=000.1S  TIMER=001.0S
ACW  DCW  IR  GB  77  SWEEP STA.t

```

IIT-5010/2010 shown.



Note

The TIMER settings can be set OFF when in the special test mode for ACW and DCW tests.

If the TIMER settings are set to OFF, the sweep function will not produce a graph.


Setting the Sweep Start Time

1. When in the VIEW status, press the STA.t key and set the starting time for the sweep graph. Make sure that the sweep start time is significantly less than the test time.

STA . t



This setting is only applicable for the IIT-5000/5010.



Start time

2. Press the EDIT/SAVE key to save the Start time.


EDIT/SAVE



Running the Test 1. In special test mode (000), tests are started and stopped in the same way as for the normal manual test mode. See page 72 for details.

Page 72

2. If required, the scroll wheel can be used to set the voltage level in real-time as the test is running (this does not apply to IR or GB tests).



ACW 0.050kV ~ 5kV

DCW 0.050kV ~ 6kV

Results

Test judgments are the same as those for the normal manual tests. Please see the PASS/FAIL MANU Test section for details.

Page 77

View Sweep Graph

Unlike normal manual tests, the special test mode also has an option to view the resultant test as a sweep graph.

This option is only available for the IIT-5000/5010.

Steps


1. When the test has finished, press the SWEEP key to view the results of the sweep in a graph.

SWEEP




Graph Test Items:		
TEST	Primary	Secondary
ACW	Test voltage	measured current
DCW	Test voltage	measured current
IR	Test voltage	measured resistance
GB	Test current	measured resistance

DCW Example

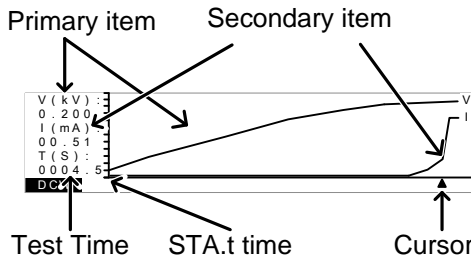


- Use the scroll wheel to move the cursor on the time axis (x-axis). The measured values for the primary and secondary items at that particular point in time are shown on the left-hand side.



Remove Lines
from the Graph

- Pressing the F5 key will toggle the primary test item on/off.
- Pressing the F6 key will toggle the secondary test item on/off.

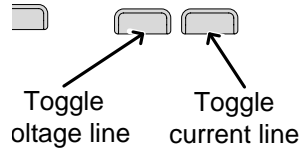

Example: DCW test

Exit the Results
Graph

To exit the graph, press the ESC key. You will be returned back to MANU mode/VIEW status.



Automatic Tests

This section describes how to create, edit and run automatic tests. Automatic tests allow you to link together up to 16 different MANU tests and run them sequentially. Each stored MANU test is used as a test step when creating an AUTO test.

- Choose/Recall an Automatic Test → from page 93
- Edit Automatic Test Settings → from page 94
- Adding a Step to the Automatic Test → from page 95
- Creating an AUTO Test File Name → from page 96
- Saving and Exiting EDIT Status → from page 98
- Automatic Test Page View → from page 99
- Running an Automatic Test → from page 102
- Automatic Test Results → from page 107

Before operating the IIT-2000/2010/5000/5010, please read the safety precautions as outlined in the Set Up chapter on page 24.

Choose/Recall an Automatic Test

Background The tester must first be put into AUTO mode to create or run automatic tests.


Up to 100 automatic tests can saved/recalled.

- Steps**
1. If the tester is in MANU mode, press and hold the MANU/AUTO key for three seconds. This will put the tester into Auto mode.

MANU/AUTO




The tester can only switch between AUTO and MANU mode when in the VIEW status.

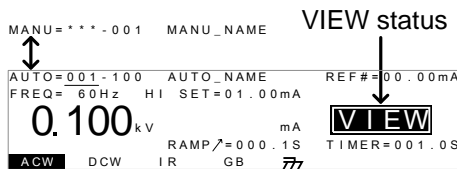


Note

If the chosen automatic test has not yet been setup, then the screen will be blank except for the status and mode.

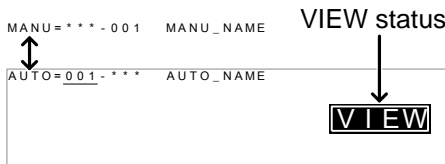


2. Use the scroll wheel to choose the AUTO number.



AUTO # 001~100

AUTO number



Note

The AUTO number can only be chosen in VIEW status. If in the EDIT status, switch to the VIEW status by pressing the EDIT/SAVE or ESC key.

Edit Automatic Test Settings

Background To edit an automatic test, the tester must be in EDIT status.


Any settings or parameters that are edited only apply to the currently selected AUTO number.

Steps

1. Press the EDIT/SAVE key when in VIEW status to enter the EDIT status. This will enter the EDIT status for the chosen AUTO number.

EDIT/SAVE



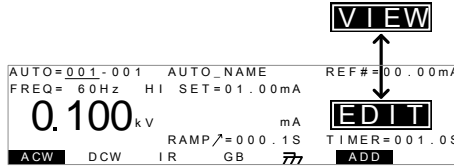

2. The Status changes from VIEW to EDIT. The tester is now ready to edit the current AUTO test.




Note

Pressing the EDIT/SAVE key again will save the settings or pressing the ESC will cancel the settings for the current AUTO test and return back to VIEW status.


Adding a Step to the Automatic Test

Background Up to 16 MANU tests (steps) can be added to an automatic (AUTO) test. Each step is added in a sequential order.

- Steps**
1. Press the DOWN arrow keys to bring the cursor to the MANU number.

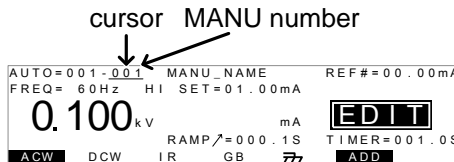

- Use the scroll wheel to choose a MANU number to add to the automatic test.



MANU number 001~100

- Press the ADD soft-key to add the selected manual test to the automatic test as another step.




- Repeat steps 2 and 3 for any other tests that you wish to add to the automatic test.



Note

After 16 steps have been added to an AUTO test, FULL will be shown on the display when you attempt to add another step to the AUTO test.



Note

The test order can be edited in the Page View menu after the AUTO test is saved. See page 99 for details.

Creating an AUTO Test File Name

Background


Each automatic test can have a user-defined test file name (Default: AUTO_NAME) up to 10 characters long. See the character list below for the allowed characters.

Character List


0	1	2	3	4	5	6	7	8	9																
A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y	z
+	-	*	/	_	=	:	Ω	?	()	<	>	[]											

Steps

1. Use the UP/DOWN arrow keys to bring the cursor to the AUTO number. A small cursor will also appear under the first character of the AUTO test file name. This is initially set as AUTO_NAME

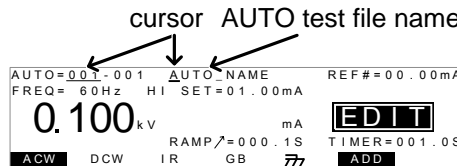

2. Use the scroll wheel to scroll through the available characters.



3. Press the LEFT/RIGHT arrow keys to go to the next character.



4. The AUTO test file name is set when the current AUTO test is saved or when the cursor is moved to another setting.



Note


To cancel the name changes, press the ESC key before the cursor is moved to another setting or the name is saved.

Saving and Exiting EDIT Status

Background After all test steps have been added to an automatic test, the automatic test can be saved.

- Steps**
1. When in EDIT status, press the EDIT/SAVE key to save the automatic test. After the test is saved the tester will revert back to VIEW status.

EDIT/SAVE

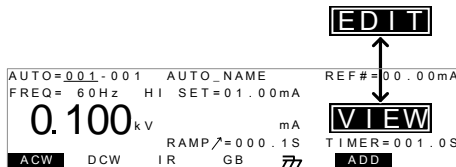

2. The status changes from EDIT to VIEW.
-


**Note**

Pressing the EDIT/SAVE key again will return the tester back to EDIT status for the selected AUTO test.

Automatic Test Page View


Background Pressing the PAGE key will show an overview of the tests for the currently selected automatic test when in the VIEW status. The Page View will show the order of the AUTO test steps as well as the manual file name, function, test voltage/current and HI/LO SET limits.

- Steps**
1. Ensure the tester has had an automatic test saved and the tester is in AUTO mode/VIEW status. Page 92

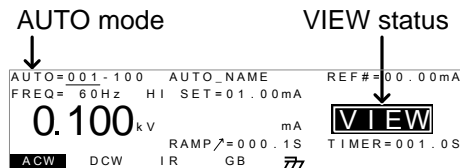

2. Press the PAGE key to bring up the Page view of the AUTO test.

All the test steps are shown on the bottom of the screen along with the corresponding MANU numbers. The top of the screen shows the selected MANU test file name and the settings (test function, test voltage, HI/LO SET).

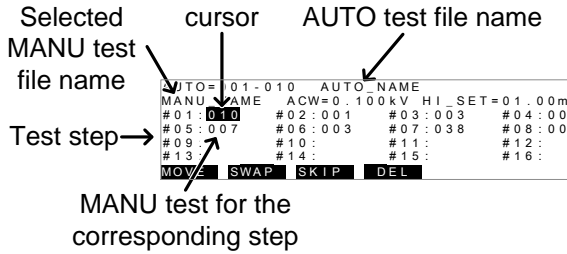

Editing

When in the Page View, the automatic test steps can be edited. Steps can be deleted, skipped, moved or swapped.

Moving a Step

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to move.



2. Press the MOVE soft-key.



3. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the destination step.



4. Press the MOVE soft-key again. The manual test will be moved to the destination step. The remaining steps will move up/down to fill the empty step.



```

AUTO=001-010  AUTO_NAME
MANU_NAME  ACW=0.100kV  HI_SET=01.00mA
#01: 010 ← #02:001 ← #03:003 ← #04:004
#05:007 → #06:003 #07:038 #08:005
#09:  #10:  #11:  #12:
#13:  #14:  #15:  #16:
MOVE SWAP SKIP DEL
    
```

Swapping Two Steps

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to swap.



2. Press the SWAP soft-key.



3. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the second step.



4. Press the SWAP soft-key again. The tests will be swapped with each other.



```
AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01: 010 ← → 001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
```

Skip a Test Step

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to skip.



2. Press the SKIP soft-key.



3. The step will have an asterisk beside the MANU number.



```
AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01: 010* #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
```



Note

The next time the automatic test is run, the steps with asterisks will be skipped.

Delete a Test Step

1. Use the UP/DOWN and LEFT/RIGHT arrow keys to move the cursor to the test step you wish to delete.



2. Press the DEL soft-key.



3. The step will be deleted.

Save Changes and Exit

To save the changes made in Page View, press the EDIT/SAVE key. You will be returned back to AUTO mode/VIEW status.

EDIT/SAVE



Cancel and Exit Page View

To cancel any changes and to exit the Page View, press the ESC key. You will be returned back to AUTO mode/VIEW status.

ESC



Running an Automatic Test

Background

An automatic test can be run when the tester is in READY status.



Note

The tester cannot start to run an AUTO test under the

following conditions:

- Any protection modes have been tripped.
- The INTERLOCK function is ON and the Interlock key is not inserted in the signal I/O port (page 127).
- The STOP signal has been received remotely.

If Double Action is ON, ensure the START button is pressed immediately after the STOP button (<0.5s).




Warning

Do not touch any terminals, test leads or the DUT when a test is running.


Steps

1. Ensure the tester is in VIEW status. Save the automatic test if necessary.


Page 93

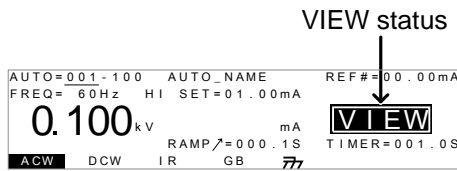

2. Press the STOP button to put the tester into the READY status.

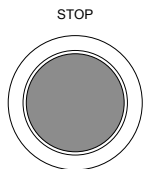


READY status



- The READY indicator will be lit blue when in the READY status.




- Press the START button when the tester is in the READY status. The AUTO test starts automatically and the display changes to TEST status.

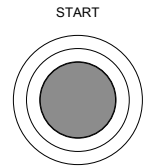

- The TEST indicator will be lit orange when in the TEST status.



- Each test will start by showing the remaining ramp up time, followed by the remaining test time. Each test will be tested in sequence until the last test has finished or the test is stopped.




remaining RAMP↑ time

remaining TIMER

PASS/FAIL
HOLD


1. If Pass Hold is set to ON or Fail Mode is set to HOLD for a manual test, then the tester will “hold” the testing after a Pass/Fail result for that particular test. See page 61, 63 for details.

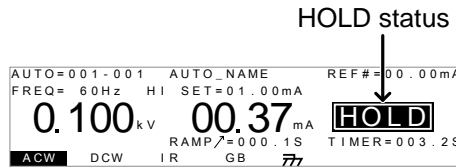


2. The PASS or FAIL indicator will also be lit. The buzzer will NOT sound.



3. To continue to the next test after HOLD is displayed on-screen, press the START button.

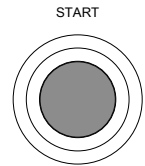

4. To stop the test when HOLD is displayed on-screen, press the STOP button.

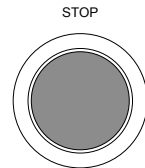


Note

When in HOLD status, only the START and STOP buttons can be pressed, all other keys are disabled.

Stop a Running Test

1. To stop the AUTO test at any time when it is running, press the STOP button. The AUTO test will stop immediately. When the STOP button is pressed, a judgment is not made on the current test and any remaining tests are aborted.

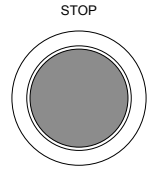


All panel keys except the STOP and START buttons are locked when the tester has been stopped. All the results up until when the AUTO test was stopped are shown on-screen. See page 107 for more details on automatic test results.

```
AUTO=001-*** AUTO_NAME
#01: FAIL #02: PASS #03: STOP #04: ----
#05: ---- #06: ---- #07: ---- #08: ----
#09:      #10:      #11:      #12:
#13:      #14:      #15:      #16:
```

Example of an automatic test that has been stopped. Dashes (-) indicate aborted test steps.


2. To put the tester back into READY status, press the STOP button again.

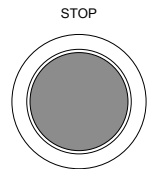

Exit Testing

To exit testing, press the MANU/AUTO key when the tester is in the READY status. The tester will revert to the VIEW status for the current automatic test.

MANU/AUTO




Automatic Test Results

Background

If all the test steps are allowed to run to completion (the AUTO test is not stopped or a protection setting is not tripped) then the tester will judge each step as either PASS or FAIL. This is shown as a table after the automatic test has finished running. If the test has been stopped, then any remaining tests will not be run and thus the AUTO test will not finish running.

Overview

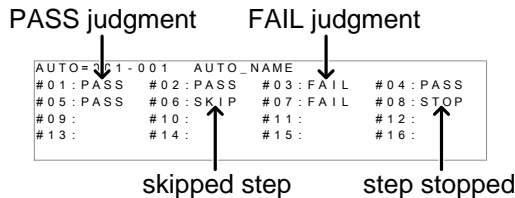

Note

The PASS/FAIL judgment for an automatic test as a whole depends on the results of all the steps (manual tests) that

compose the automatic test:

- Each step must be passed for a PASS judgment (excluding skipped tests).
- A FAIL result for a single step will result in FAIL for the whole automatic test.
- A STOP. No step can be stopped for a PASS/FAIL judgment to be made. In other words, if a test is stopped, it is judged as neither PASS nor FAIL.
- No step can contain an ERROR or ILOCK message.

ERROR message ILOCK message

```

AUTO= 1-001    AUTO_NAME
#01: ERROR    #02: PASS    #03: ILOCK
  
```

ERROR: Indicates that V, I or R is not correct. This usually occurs if the testing leads are not properly connected.

ILOCK: Indicates that the interlock key is disconnected (if configured to be used).

PASS Judgment

When all the tests have been judged as PASS, the PASS indicator will be lit green and the buzzer will sound.

PASS



AUTO=001-*** AUTO_NAME			
#01: PASS	#02: PASS	#03: PASS	#04: PASS
#05: PASS	#06: PASS	#07: PASS	#08: PASS
#09: :	#10: :	#11: :	#12: :
#13: :	#14: :	#15: :	#16: :



Note

The Pass Sound setting must to set to ON for the buzzer to sound (page 114).

FAIL Judgment

When any of the tests have been judged as FAIL, the FAIL indicator will be lit red and the buzzer will sound.

FAIL



AUTO=001-*** AUTO_NAME			
#01: PASS	#02: PASS	#03: PASS	#04: PASS
#05: PASS	#06: FAIL	#07: FAIL	#08: PASS
#09: :	#10: :	#11: :	#12: :
#13: :	#14: :	#15: :	#16: :




Note

The Fail Sound setting must to set to ON for the buzzer to sound (page 114).

View Results

1. When the PASS or FAIL overview table is shown on the screen, turn the scroll wheel right to scroll through each test step.

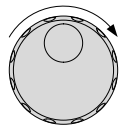


step number

MANU number for current step

STEP: 02-003	MANU_NAME	REF#=00.00mA
FREQ= 60Hz	HI SET=01.00mA	
0.100 kV	00.37 mA	PASS
ACW	DCW	IR
		GB
	RAMP=000.0S	TIME=003.2S


PASS/FAIL result

- Turn the scroll wheel left to return back to the overview table.

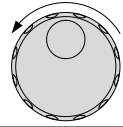

Return to Ready Status 1. The PASS/FAIL results will be held on the screen until the STOP button is pressed.


- To put the tester back into READY status, press the STOP button (twice for a fail result).

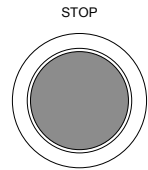

- The READY indicator will be lit blue in the READY status.




READY status




Exit Testing

To exit testing, press the MANU/AUTO key when the tester is in the READY status. The tester will revert to the VIEW status.


MANU/AUTO



PASS Timing
Diagram

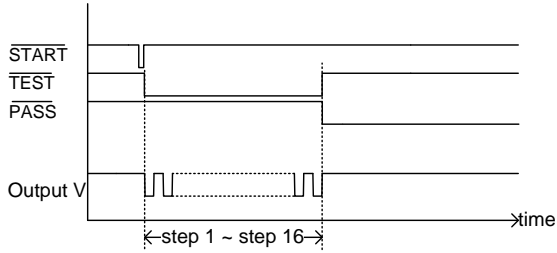

FAIL Timing
Diagram

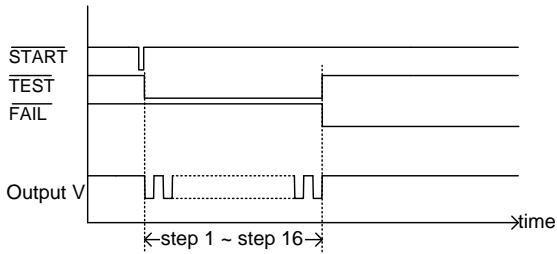

Common Utility Settings

The Common Utility settings are system-wide settings that apply to both MANU tests and AUTO tests.


The Common Utility menu includes the following settings:

- LCD settings → from page 112.
- Buzzer Settings → from page 113.
- Interface Settings → from page 115.
- Control settings → from page 117.

LCD Settings

Description The LCD settings include contrast and brightness controls.

Steps 1. Ensure the tester is in VIEW status. Save the Page 71
current test if necessary.

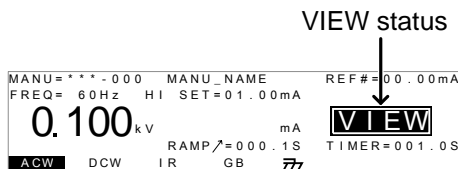

2. Press the UTILITY key.


UTILITY




3. Press the LCD soft-key to bring up the LCD Common Utility menu.



4. Use the UP/DOWN arrow keys to choose a menu item: LCD Contrast, LCD Brightness.



5. Use the scroll wheel to select a parameter for the chosen menu item.



LCD Contrast 1(low) ~ 8(high)
 LCD Brightness BRIGHT, DARK

6. Press EDIT/SAVE to save the settings and exit to VIEW status.




The ESC key can be pressed at any time to cancel and exit back to VIEW status.

Buzzer Settings

Description The Buzzer settings allow you to set whether the buzzer will sound for PASS/FAIL judgments. The buzzer time can also be set for the PASS/FAIL judgments. The buzzer settings are system-wide.

Steps 1. Ensure the tester is in VIEW status. Save the current test if necessary. Page 71

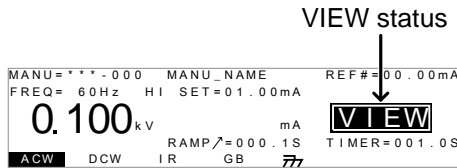

2. Press the UTILITY key.




3. Press the BUZZ soft-key to bring up the Buzzer Common Utility menu.



4. Use the UP/DOWN arrow keys to choose a menu item: Pass Sound or Fail Sound.



5. Use the scroll wheel to select a parameter for the chosen menu item.



Pass Sound ON (000.2s~999.9s), OFF

Fail Sound ON (000.2s~999.9s), OFF

6. Press EDIT/SAVE to save the settings and exit to the VIEW status.



Note

When in automatic tests, the Pass Sound and Fail Sound settings only apply to the overall PASS/FAIL of the *overall automatic test*, not each test step that make up the automatic tests.



Note

The ESC key can be pressed at any time to cancel and exit back to VIEW status.


Interface Settings

Description The interface settings choose the remote interface configuration. USB, RS232 and GPIB (optional) can be selected.

Steps 1. Ensure the tester is in VIEW status. Save the current test if necessary.

Page 71

VIEW status

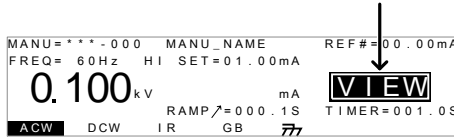


2. Press the UTILITY key.



3. Press the INTER soft-key to bring up the Interface Common Utility menu.




4. Use the scroll wheel to select USB, RS232 or GPIB.



5. For RS232 or GPIB, use the UP/DOWN arrow keys to choose Baud or Address.



6. Use the scroll wheel to select the baud rate or GPIB address.



Baud rate 9600, 19200, 38400, 57600, 115200

GPIB address 0~30

7. Press EDIT/SAVE to save the settings and exit to VIEW status.

EDIT/SAVE



Note

Ensure the baud rate settings or GPIB address matches the host machine.



Note

The ESC key can be pressed at any time to cancel and exit back to VIEW status.

Control Settings

Description

The Control settings are accessed in the COMMON UTILITY menu. The Control settings include: Start Control, Double Action, Key Lock and Interlock.

Start Control is used to determine how a test is started. Tests can be started via the front panel (START/STOP buttons), from a remote controller or via the SIGNAL I/O port.

The Double Action function is a safety feature used to prevent accidentally starting a test. Normally to start a test, the START button is pressed when the tester is in the READY status. To start a test when Double Action is ON, the STOP button must first be pressed, followed by the START button within 500ms.

Key Lock disables the front panel keys from changing the test


number, mode or testing parameters. Only the Utility menu and any keys required for testing are not disabled.

The Interlock function is a safety feature. The interlock function prevents a test from running, unless the interlock pins on the signal I/O port connector are shorted. The included interlock key can be used for this purpose. See page 127 for details.

Steps

1. Ensure the tester is in VIEW status. Save the current test if necessary.


Page 71

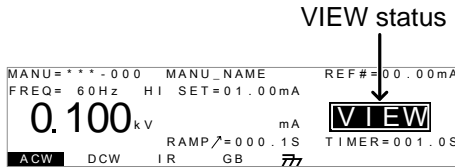

2. Press the UTILITY key.




3. Press the CTRL soft-key to bring up the Control Common Utility menu.



4. Use the UP/DOWN arrow keys to choose a menu item: Start Ctrl, Double Action, Key Lock or INTERLOCK.



5. Use the scroll wheel to select setting for the chosen menu item.



Start Ctrl	FRONT PANEL, REMOTE CONNECT, SIGNAL IO
Double Action	ON, OFF
Key Lock	ON, OFF
INTERLOCK	ON, OFF

6. Press EDIT/SAVE to save the settings and exit to VIEW status.

EDIT/SAVE



Note

The Double Action setting is ignored when the IIT-2000/2010/5000/5010 is being controlled remotely using the USB, RS232 or GPIB interfaces.



Note

If a test is started with INTERLOCK ON, but the interlock signal I/O pins are not shorted (either with the included interlock key or manually), the INTERLOCK OPEN message will be displayed, preventing the test from starting.

Interlock open message

MANU=***-002 MANU NAME REF#=00.00mA
FREQ= 60Hz HI SET 1.00mA
0.100 INTERLOCK OPEN **READY**
kV mA
RAMP 000.1S TIMER=001.0S
ACW DCW IR GB 77

EXTERNAL CONTROL

The External Control chapter covers the REMOTE terminal and the SIGNAL I/O port.

External Control Overview	122
Remote Terminal Overview	122
Remote Controller Operation	123
SIGNAL I/O Overview	124
Using the SIGNAL I/O to Start/Stop Tests	127
Using the Interlock Key	128

External Control Overview

The External Control section describes the front panel REMOTE terminal connection and the rear panel SIGNAL I/O port.


Remote Terminal Overview

Overview The REMOTE terminal connector is a standard 5-pin DIN terminal suitable for a remote controller.

WARNING

Keep any cables that are connected to the REMOTE terminal away from the HIGH VOLTAGE and RETURN terminals.

Pin Assignment and Connection

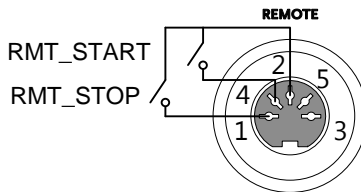

Pin	Pin name	Description
1	RMT_STOP	Remote Stop signal
2	COM	Common line
3	Not used	
4	RMT_START	Remote Start signal
5	Not used	

Signal Properties

High level input voltage 2.4V~3.3V


Low level input voltage	0~0.8V
Input period	minimum of 1ms

Remote Controller Operation

Description The IIT-2000/2010/5000/5010 accepts external remote controllers with a START and STOP button. To use the REMOTE terminal, the IIT-2000/2010/5000/5010 must first be configured to accept a remote controller.

Operating a remote controller is the same as operating the START and STOP buttons on the front panel.

- Steps**
1. Insert the lead of remote controller into the REMOTE terminal.
 2. Configure the Start Ctrl option to REMOTE CONNECT in the Common Utility menu.
 3. The tester will now only be able to start a test using a remote controller.

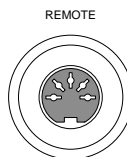

**NOTE**

Even if the IIT-2000/2010/5000/5010 is configured to use the REMOTE CONNECT option, the STOP button on the front panel can still be used to stop a test.

4. To return the operation control to the front panel, Page 117 configure the Start Ctrl option to FRONT PANEL.


SIGNAL I/O Overview

Overview

The SIGNAL I/O port can be used to remotely start/stop tests and monitor the test status of the instrument. The SIGNAL I/O port is also used for the interlock function (page 117).

The SIGNAL I/O port uses a DB-9 pin female connector.


Pin Assignment

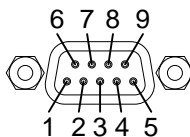


Pin name	Pin	Description
INTERLOCK1	1	When INTERLOCK is ON, a test is only allowed to start
INTERLOCK2	2	when both INTERLOCK pins are shorted.
INPUT_COM	3	Common input line
INPUT_START	4	Start signal input
INPUT_STOP	5	Stop signal input
OUTPUT_TEST	6	Indicates that a test is in progress

OUTPUT_FAIL	7	Indicates that a test has failed
OUTPUT_PASS	8	Indicates that a test has passed
OUTPUT_COM	9	Common output line


Interlock
connection



Input
Connection

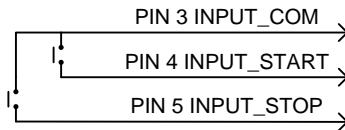

Output
Connection

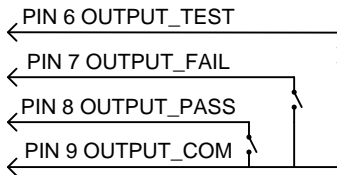

Signal

Input Signals


Properties

High level input voltage	5V ~ 32V
Low level input voltage	0V ~ 1V
Low level input current	Maximum of -5mA
Input period	Minimum of 1ms


Output Signals

Output Type	Relay form A
Output Rated Voltage	30VDC
Maximum output current	0.5A

Input Stop and

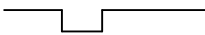INPUT_STOP 

Input Start

INPUT_START 

Timing

Using the SIGNAL I/O to Start/Stop Tests

Background To use the SIGNAL I/O port the Start Ctrl settings have to be set to SIGNAL I/O in the Common Utility menu.

- Panel operation 1. Set the Start Ctrl option to SIGNAL I/O. Page 117
2. Connect the Input/Output signals to the SIGNAL I/O port.
 3. To start the testing, short the INPUT_STOP and INPUT_COM line for a minimum of 1ms to put the tester into READY status.
 4. To start the testing, short the INPUT_START and INPUT_COM lines for a minimum of 1ms.
 5. To stop the testing, temporarily short the INPUT_STOP and INPUT_COM line again.
-




NOTE

Even if the IIT-2000/2010/5000/5010 is configured to use the SIGNAL I/O interface, the STOP button on the front panel can still be used to stop a test.

Using the Interlock Key

Background When the INTERLOCK function is set to ON, tests are only allowed to start when both Interlock pins on the signal I/O port are shorted. Using the Interlock key will short the INTERLOCK1 and INTERLOCK2 pins on the signal I/O port. See page 124 for the Signal I/O pin assignment.

Panel operation 1. Insert the Interlock key into the SIGNAL I/O port on the rear panel.

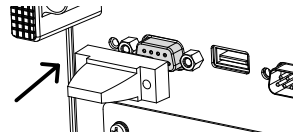

2. Set the INTERLOCK option to ON in the Common Page 117 Utility.



Note

With INTERLOCK set to ON, the tester can now only start a test when the Interlock key is connected. Do not remove the interlock after starting a test. It must be connected after a test has started or is running.

Set INTERLOCK to OFF to disable this feature.

REMOTE CONTROL


This chapter describes basic configuration of IEEE488.2 based remote control. The remote interface supports USB, RS232 and GPIB.

Interface Configuration	130
Command Syntax.....	136
Command List.....	139
Error Messages.....	194

Interface Configuration

USB Remote Interface

USB Configuration	PC side connector	Type A, host
	IIT-5000 side connector	Rear panel Type A
	USB Class	CDC (communications device class) (VCP, Virtual Com Port)

- Panel operation
1. Connect the USB cable to the rear panel USB A port. 
 2. Set the interface to USB from the Common Utility [Page 115](#) menu.
-




Note

When USB is used for remote control, an RS232 port is simulated. Check the Windows Device Manager for the baud rate and other RS232 settings. Check the RS232 configuration below for more details.

Note the baud rate is fixed to 115200 baud when using the USB interface.


RS232 Remote Interface

RS232 Configuration	Connection	Null modem cable
	Baud rate	9600, 19200, 38400, 57600, 115200
	Parity	None
	Data bits	8
	Stop bit	1
	Flow control	None

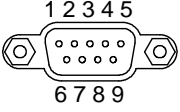Pin Assignment		1: No connection
		2: RxD (Receive Data)
		3: TxD (Transmit Data)
		4: No connection
		5: GND
		6-9: No connection

Connection	PC		Tester	
	DB9 Pin	Signal	Signal	DB9Pin
	2	RxD	TxD	3
	3	TxD	RxD	2
	5	GND	GND	5

Panel operation 1. Connect the Null modem cable to the rear panel RS232 port.



2. Set the interface to RS232 from the Common Utility menu. Page 115

GPIB Remote Interface

GPIB Configuration	Address	0-30
--------------------	---------	------

- Panel operation 1. Connect the GPIB cable to the rear panel GPIB port.



2. Set the interface to GPIB and set the GPIB address from the Common Utility menu. Page 115

USB/RS232 Remote Control Function Check

Functionality
check

Invoke a terminal application such as Hyper Terminal.

To check the COM port number and other settings, see the Device Manager in the PC. For WinXP; Control panel → System → Hardware tab.

Run this query command via the terminal after the instrument has been configured for USB or RS232 remote control (page 130, 130).

*idn?

This should return the Model number, Serial number, and Firmware version in the following format:

IIT-2000, XXXXXXXXXXXXX, V1.00


Model number : IIT-2000

Serial number :12 character serial number

Firmware version : V1.00

- ^j can be used as the terminal character when entering the queries/commands from a terminal application.
-

Display When the panel is being remotely controlled via the USB, RS232 or GPIB interfaces, RMT will be displayed on the screen.




Return to Panel Control

Background When the instrument is remotely controlled all panel keys except the STOP button are disabled.

Steps

1. When RMT is on the display, press the STOP button. The panel goes to the READY status.

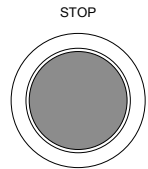

2. From the READY status the tester can go into one of two states: TEST or VIEW.


- To put the tester into VIEW status, press the MANU/AUTO key.



- To put the tester in TEST status, press the START button. This will start the manual test/automatic test. For more details on running a manual test or

automatic test, see pages 72 and 102,
respectively.

START

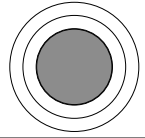

Note

To put the tester back to RMT, simply issue another remote control command.


Command Syntax

Compatible	IEEE488.2	Partial compatibility
Standard	SCPI, 1999	Partial compatibility

Command Structure

SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in an SCPI command represents each node in the command tree. Each keyword (node) of an SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

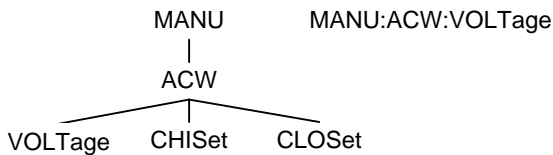

Command types

There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types

Setting	A single or compound command with/without a parameter
---------	---

Example	MANU:STEP 1
---------	-------------

Query	A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.
-------	--

Example	MANU:ACW:VOLTage?
---------	-------------------

Command Forms


Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.

Below are examples of correctly written commands.

Long form	SYSTem:BUZZer:KEYSound SYSTEM:BUZZER:KEYSOUND system:buzzer:keysound
-----------	--

Short form	SYST:BUZZ:KEYS syst:buzz:keys
------------	----------------------------------

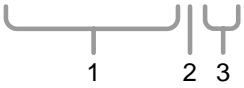Command	MANU:STEP 100	1. Command header
Format		2. Space 3. Parameter

Parameters	Type	Description	Example
	<Boolean>	Boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5
	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<string>	ASCII text string	TEST_NAME
Message Terminator	CR, LF	Carriage Return, Line feed code	



Command List

System	SYSTem:LCD:CONTRast	143
Commands	SYSTem:LCD:BRIGHtness	144
	SYSTem:BUZZer:PSOUND	144
	SYSTem:BUZZer:FSOUND	145
	SYSTem:BUZZer:PTIME	145
	SYSTem:BUZZer:FTIME	146
	SYSTem:ERRor	146
	SYSTem:GPIB:VERSion	148
Function	FUNCTion:TEST	149
Commands	MEASure<x>	150
	MAIN:FUNCTion	151
Manual	MANU:STEP	154
Commands	MANU:NAME	155
	MANU:INITial	155
	MANU:RTIME	156
	MANU:EDIT:MODE	157
	MANU:ACW:VOLTage	157
	MANU:ACW:CHISet	158

MANU:ACW:CLOSet	158
MANU:ACW:TTIME	159
MANU:ACW:FREQuency	160
MANU:ACW:REF	161
MANU:ACW:ARCCurrent	162
MANU:DCW:VOLTag	162
MANU:DCW:CHISet	163
MANU:DCW:CLOSet	164
MANU:DCW:TTIME	165
MANU:DCW:REF	165
MANU:DCW:ARCCurrent	166
MANU:IR:VOLTag	167
MANU:IR:RHISet	167
MANU:IR:RLOSet	168
MANU:IR:TTIME	169
MANU:IR:REF	170
MANU:GB:CURREnt	171
MANU:GB:RHISet	171
MANU:GB:RLOSet	172
MANU:GB:TTIME	172
MANU:GB:FREQuency	173
MANU:GB:REF	173
MANU:GB:ZEROCHECK	174
MANU:UTILity:ARCMODE	174
MANU:UTILity:PASShold	175
MANU:UTILity:FAILmode	175



	MANU:UTILity:MAXHold.....	176
	MANU:UTILity:GROUNDMODE	177
	MANU<x>:EDIT:SHOW	177
Sweep	SWEEP:DATA:STATus	179
Commands	SWEEP<X>:DATA:SHOW	180
	SWEEP:GRAPh:SHOW	181
	SWEEP :GRAPh:LINE.....	182
	SWEEP:STARt:TIME.....	183
	AUTO:STEP	184
Auto Commands	AUTO<x>:PAGE:SHOW.....	185
	AUTO:PAGE:MOVE	185
	AUTO:PAGE:SWAP	186
	AUTO:PAGE:SKIP.....	187
	AUTO:PAGE:DEL.....	187
	AUTO:NAME	188
	AUTO:EDIT:ADD	188
	TESTok:RETurn	189
	*SRE	190
Common	*CLS.....	191
Commands	*IDN	191




Remote Commands	*RMTOFF.....	192
Special Functions	Inter Lock Key Open	192

System Commands


SYSTem:LCD:CONTRast	143
SYSTem:LCD:BRIGHtness	144
SYSTem:BUZZer:PSOUND.....	144
SYSTem:BUZZer:FSOUND	145
SYSTem:BUZZer:PTIME	145
SYSTem:BUZZer:FTIME.....	146
SYSTem:ERRor	146
SYSTem:GPIB:VERSion	148

SYSTem:LCD:CONTRast




Description	Sets the contrast of the LCD display from 1 (low) to 8 (bright).	
Syntax	SYSTem:LCD:CONTRast <NR1>	
Query Syntax	SYSTem:LCD:CONTRast?	
Parameter/ Return parameter	<NR1>	1~8
Example	SYST:LCD:CONT 5 Sets the display contrast to 5.	

SYSTem:LCD:BRIGhtness




Description	Sets the brightness of the LCD display from 1(dark) to 2(bright).	
Syntax	SYSTem:LCD:BRIGhtness <NR1>	
Query Syntax	SYSTem:LCD:BRIGhtness?	
Parameter/ Return parameter	<NR1>	1 (dark), 2 (bright)
Example	SYST:LCD:BRIG 2 Sets the display brightness to bright.	

SYSTem:BUZZer:PSOUND



Description	Turns the buzzer sound on or off for a PASS judgment.	
Syntax	SYSTem:BUZZer:PSOUND{ON OFF}	
Query Syntax	SYSTem:BUZZer:PSOUND ?	
Parameter/ Return parameter	ON	PASS Sound on.
	OFF	PASS Sound off.
Example	SYST:BUZZ:PSOUND ON Turns the buzzer sound on for PASS judgments.	

SYSTem:BUZZer:FSOUND



Description Turns the buzzer sound on or off for a FAIL judgment.

Syntax SYSTem:BUZZer:FSOUND{ON|OFF}

Query Syntax SYSTem:BUZZer:FSOUND ?

Parameter/ ON FAIL Sound on.


Return OFF FAIL Sound off.

parameter

Example SYST:BUZZ:FSOUND ON

Turns the buzzer sound on for FAIL judgments.

SYSTem:BUZZer:PTIME



Description Sets the PASS sound duration in seconds.

Syntax SYSTem:BUZZer:PTIME <NR2>

Query Syntax SYSTem:BUZZer:PTIME?

Parameter/ <NR2> 0.2~999.9


Return

parameter

Example SYST:BUZZ:PTIM 1

Sets the buzzer to 1 second for a PASS judgment.

SYSTem:BUZZer:FTIME



Description Sets the FAIL Sound duration in seconds.

Syntax SYSTem:BUZZer:FTIME <NR2>

Query Syntax SYSTem:BUZZer:FTIME?

Parameter/ <NR2> 0.2~999.9

Return

parameter

Example SYST:BUZZ:FTIM 1

Sets the buzzer to 1 second for a FAIL judgment.

SYSTem:ERRor



Description Returns any errors in the output buffer. See the error code table below for details.

Query Syntax SYSTem:ERRor ?

Return <string> Returns an error string that includes an error code and an error description.

Error Code Table

Error code, Error description

0, No Error

20, Command Error

21, Volume Error

22, String Error

23, Query Error

24, Mode Error

25, Time Error

26, DC Over 50W (IIT-2000/2010), DC Over 100W (IIT-5010/5000)

27, GBV > 5.4V

30, Voltage Setting Error

31, Current Setting Error

32, Current HI SET Error

33, Current LO SET Error

34, Resistance HI SET Error

35, Resistance LO SET Error

36, REF Setting Error

37, Frequency Setting Error

38, ARC Setting Error

39, RAMP Time Setting Error

40, TEST Time Setting Error

45, Buffer Error

- 50, Scanner Box Not Found
- 51, HI Channel Setting Error
- 52, LO Channel Setting Error
- 60, Get Data = 0 (IIT-5010/5000 gets SWEEP data)

Example SYST:ERR ?

 >0,No Error

 Returns "0,No Error" as the error message.

SYSTEM:GPIB:VERSion → Query

Description Queries the GPIB version.

Query Syntax SYSTEM:GPIB:VERSion?

Return parameter	<string>	Returns: The GPIB version as a string "GPIB,V1.00" or "No GPIB connected" if there is not a GPIB device configured/connected.
-------------------------	-----------------------	--

Query Example SYST:GPIB:VERS?


 >GPIB,V1.00

 Returns the GPIB version.

Function Commands

FUNCTION:TEST	149
MEASure<x>.....	150
MAIN:FUNCTION	151

FUNCTION:TEST



Description Turns the currently selected test (output) on or off.

When HOLD is displayed on the screen during AUTO tests, use the FUNCTION:TEST command to move on to the next step.

Setting the FUNCTION:TEST command to OFF at the end of a test will also temporarily turn the PASS/FAIL buzzer sound off.

Syntax FUNCTION:TEST {ON|OFF}

Query Syntax FUNCTION:TEST?

Parameter	ON	Turns the test on.
	OFF	Turns the test off.

Return	TEST ON	Test is on.
---------------	---------	-------------

parameter	TEST OFF	Test is off.
------------------	----------	--------------

Example FUNC:TEST ON
 Turns the output on.

MEASure<x>

→ Query

Description Returns the test parameters & results of the tester in either MANU or AUTO mode.

MANU mode: Returns the test parameters & results of a MANU test.

AUTO mode: Returns the test parameters & results of the selected step (1-16) of the AUTO test.

Return parameters: function, judgment/status, test voltage, test current/resistance, test time (time of completed test) or ramp time (elapsed time of test that has not been completed).

Query Syntax MEASure<x>?

Parameter (MANU mode)		No parameter needed for MANU mode.
Parameter (AUTO mode)	<x>	<NR1>1~16. Step number.
Return parameter	<string>	Returns the test status of the test in the following format: function, judgment or status, test voltage, test current or resistance, test time or ramp time

Function	ACW, DCW, IR, GB
Judgment	PASS, FAIL
/Status	VIEW
Test voltage	voltage+unit
Test current	current+unit
/Test resistance	resistance+unit
Test time	T=time+S
/Ramp time	R=time+S

Example MEAS?

(in MANU mode) >ACW,FAIL,0.024kV,0.013 mA ,R=000.1S

Returns the test result of the current manual test.

Example MEAS?

(in MANU mode) >IR,TEST,0.250kV,----Mohm,T=000.2S

Returns ---- as the test result when the reading is invalid.

Example MEAS10?

(in AUTO mode) >IR,FAIL,0.250kV,999M ohm,T=010.3S

Returns step 10 of the current automatic result.

MAIN:FUNction

Set →

→ Query

Description Changes the mode between AUTO and MANU.

Syntax MAIN:FUNction {MANU|AUTO}

Query Syntax MAIN:FUNction ?

Parameter/	MANU	Puts the tester mode to MANU.
Return parameter	AUTO	Puts the tester mode to AUTO.

Example MAIN:FUNC MANU

 Sets the tester to MANU mode.



Manual Commands

MANU:STEP	154
MANU:NAME	155
MANU:INITial	155
MANU:RTIME.....	156
MANU:EDIT:MODE	157
MANU:ACW:VOLTage.....	157
MANU:ACW:CHISet	158
MANU:ACW:CLOSet	158
MANU:ACW:TTIME.....	159
MANU:ACW:FREQuency	160
MANU:ACW:REF	161
MANU:ACW:ARCCurrent	162
MANU:DCW:VOLTage	162
MANU:DCW:CHISet	163
MANU:DCW:CLOSet	164
MANU:DCW:TTIME	165
MANU:DCW:REF	165
MANU:DCW:ARCCurrent	166
MANU:IR:VOLTage	167
MANU:IR:RHISet	167
MANU:IR:RLOSet	168
MANU:IR:TTIME	169



MANU:IR:REF 170

MANU:GB:CURRent 171

MANU:GB:RHISet..... 171

MANU:GB:RLOSet..... 172

MANU:GB:TTime 172

MANU:GB:FREQuency..... 173

MANU:GB:REF 173

MANU:GB:ZEROCHECK..... 174

MANU:UTILity:ARCMode 174


MANU:UTILity:PASShold..... 175

MANU:UTILity:FAILmode 175

MANU:UTILity:MAXHold 176

MANU:UTILity:GROUNDMODE 177

MANU<x>:EDIT:SHOW 177



MANU:STEP

Description Sets the MANU test number.

Syntax MANU:STEP <NR1>

Query Syntax MANU:STEP?

Parameter/ <NR1> 0~100.

Return
parameter

Example MANU:STEP 100

 Sets the manual test number to 100.

MANU:NAME

Set →

→ Query

Description Sets or returns the test name for the selected manual test. The test must be in MANU mode before this command can be used. Note only alphanumeric characters (A-Z, a-z, 0-9) and the “_” underscore character can be used to set the MANU test name.

Syntax MANU:NAME <string>

Query Syntax MANU:NAME?

Parameter/Return parameter <string> 10 character string. (first character must be a letter)

Example MANU:NAME test1
Sets the manual test name to “test1”.

MANU:INITial

Set →

Description Loads the initial (default) settings for the selected MANU test number. The initial settings that are loaded depend on the test function (ACW, DCW, IR or GB).

Syntax MANU:INITial

Initial Settings	Parameter	Function			
		ACW	DCW	IR	GB
REF#	0.000mA	0.000mA	0000MΩ	000.0mΩ	
FREQ	60Hz	X	X	60Hz	




HI SET	1.000mA	1.000mA	∞MΩ	100.0mΩ
LO SET	0.000mA	0.000mA	0001MΩ	000.0mΩ
I or V	V=0.100kV	V=0.100kV	V=0.050kV	03.00A
TIMER	001.0S	001.0S	001.0S	001.0S
RAMP ↗	000.1S	000.1S	000.1S	X

Example MANU:INITial

Loads the initial settings for the selected MANU number.

MANU:RTIME



Description Sets or returns the Ramp Time for the test in seconds.

Note: A "TIME ERR" will result if the Ramp Time + Test Time is ≥ 240 seconds when the HI SET limit is over 30mA (IIT-2000/2010) or over 80mA (IIT-5010/5000). This applies to the ACW function only.

Syntax MANU:RTIME <NR2>

Query Syntax MANU:RTIME?


Parameter/ <NR2> 0.1~999.9 seconds

Return parameter

Example MANU:RTIM 0.5

Sets the ramp time to half a second.

MANU:EDIT:MODE



Description Sets or returns the mode (ACW, DCW, IR, GB) of the selected manual test.

Syntax MANU:EDIT:MODE {ACW|DCW|IR|GB}

Query Syntax MANU:EDIT:MODE?

Parameter/	ACW	AC Withstand mode
-------------------	-----	-------------------

Return	DCW	DC Withstand mode
---------------	-----	-------------------


parameter	IR	Insulation Resistance mode
------------------	----	----------------------------

	GB	Ground Bond mode
--	----	------------------

Example MANU:EDIT:MODE ACW

Sets the mode to ACW.

MANU:ACW:VOLTage



Description Sets or returns the ACW voltage in kV. The test must first be in ACW mode before this command can be used.

Syntax MANU:ACW:VOLTage <NR2>

Query Syntax MANU:ACW:VOLTage?

Parameter/	<NR2>	0.100 ~ 5.000 (kV)
-------------------	-------	--------------------

Return		
---------------	--	--

parameter		
------------------	--	--

Example MANU:ACW:VOLT 1

 Sets the ACW voltage to 1 kV.

MANU:ACW:CHISet

Set →
→ Query

Description Sets or returns the ACW HI SET current value in milliamps. The test must first be in ACW mode before this command can be used.

Syntax MANU:ACW:CHISet <NR2>

Query Syntax MANU:ACW:CHISet?

Parameter/ <NR2> 0.001 ~ 042.0 (IIT-2000/2010)

Return 0.001 ~ 110.0 (IIT-5010/5000)

parameter

Example MANU:ACW:CHIS 10.0

 Sets the ACW HI SET current to 10 mA.

MANU:ACW:CLOSet

Set →
→ Query

Description Sets or returns the ACW LO SET current value in milliamps. The LO SET value must be less than the HI SET value. The test must first be in ACW mode before this command can be used.

The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an error will be

produced. All digits outside the HI SET range are ignored and will not be used.

For example:

HI SET value: 12.34

LO SET value1: 0.005 → error


LO SET value2: 0.053 → no error

In the example above LO SET value1 will produce an error as all digits are outside the range of HI SET. LO SET value2 will not produce an error, but will return 0.05, not 0.053.

Syntax	MANU:ACW:CLOSet<NR2>
Query Syntax	MANU:ACW:CLOSet?
Parameter/ Return parameter	<NR2> 0.000 ~ 041.9 (IIT-2000/2010) 0.000 ~ 109.9 (IIT-5010/5000)

Example MANU:ACW:CLOS 20.0
Sets the ACW LO SET current to 20 mA.

MANU:ACW:TTIME



Description Sets or returns the ACW test time in seconds. The test must first be in ACW mode before this command can be used.


Note: A "TIME ERR" will result if the Ramp Time + Test Time is ≥

240 seconds when the HI SET limit is over 30mA (IIT-2000/2010) or over 80mA (IIT-5010/5000). This applies to the ACW function only.

In special MANU mode, the TIMER can be turned off.

Syntax	MANU:ACW:TTIME {<NR2> OFF}	
Query Syntax	MANU:ACW:TTIME?	
Parameter	<NR2>	0.5 ~ 999.9 seconds
	OFF	TIMER OFF (special MANU mode).
Return parameter	<NR2>	0.5 ~ 999.9 seconds
	TIME OFF	TIMER is OFF (special MANU mode).
Example	MANU:ACW:TTIM 1	
	Sets the ACW test time to 1 second.	

MANU:ACW:FREQUENCY




Description	Sets or returns the ACW test frequency in Hz. The test must first be in ACW mode before this command can be used.	
Syntax	MANU:ACW:FREQUENCY {50 60}	
Query Syntax	MANU:ACW:FREQUENCY?	
Parameter/	50	50 Hz
Return parameter	60	60 Hz

Example MANU:ACW:FREQ 50

 Sets the ACW test frequency to 50Hz.

MANU:ACW:REF



Description Sets or returns the ACW reference value in mA. The test must first be in ACW mode before this command can be used.

The ACW reference value must be less than the HI SET value.

The ACW reference value must use the same range as the HI SET value.

Syntax MANU:ACW:REF <NR2>


Query Syntax MANU:ACW:REF?

Parameter/	<NR2>	0.000 ~ 041.9 (IIT-2000/2010)
Return		0.000 ~ 109.9 (IIT-5010/5000)
parameter		

Example MANU:ACW:REF 0.01

 Sets the ACW reference to 0.01 mA.

MANU:ACW:ARCCurrent



Description Sets or returns the ACW ARC current value in mA. ARC must be enabled before the ARC current can be set. The test must first be in ACW mode before this command can be used.

ARC current uses the same range as the HI SET value. The ARC current is limited to 2X the HI SET value.

Syntax MANU:ACW:ARCCurrent <NR2>

Query Syntax MANU:ACW:ARCCurrent?


Parameter/ <NR2> 1.000 ~ 080.0 (IIT-2000/2010)

Return 2.000 ~ 200.0 (IIT-5010/5000)

parameter

Example MANU:ACW:ARCC 0.04

Sets the ACW ARC value to 0.04 mA.



MANU:DCW:VOLTage

Description Sets or returns the DCW voltage in kV. The test must first be in DCW mode before this command can be used.

Note: A “DC Over 50W” error will result if the DCW Voltage X HI SET value is > 50 watts (IIT-2000/2010).

Note: A “DC Over 100W” error will result if the DCW Voltage X HI

SET value is > 100 watts (IIT-5010/5000).

Syntax MANU:DCW:VOLTage <NR2>

Query Syntax MANU:DCW:VOLTage?


Parameter/ <NR2> 0.100 ~ 6.100 (kV)

Return

parameter

Example MANU:DCW:VOLT 6

Sets the DCW voltage to 6 kV.



MANU:DCW:CHISet

Description Sets or returns the DCW HI SET current value in milliamps. The test must first be in DCW mode before this command can be used.

Note: A “DC Over 50W” error will result if the DCW Voltage X HI SET value is > 50 watts.

Note: A “DC Over 100W” error will result if the DCW Voltage X HI SET value is > 100 watts (IIT-5010/5000)

Syntax MANU:DCW:CHISet <NR2>

Query Syntax MANU:DCW:CHISet?

Parameter/ <NR2> 0.001 ~ 011.0 (IIT-2000/2010)

Return 0.001 ~ 021.0 (IIT-5010/5000)

parameter

Example MANU:DCW:CHIS 5

 Sets the DCW HI SET current to 5mA.

MANU:DCW:CLOSet

Set →
 → Query

Description Sets or returns the DCW LO SET current value in milliamps. The LO SET value must be less than the HI SET value. The test must first be in DCW mode before this command can be used.

The LO SET range must use the HI SET range. If all the digits in the LO SET range are outside the HI SET range, an error will be produced. All digits outside the HI SET range are ignored and will not be used.

For example:

HI SET value: 12.34

LO SET value1: 0.005 → error

LO SET value2: 0.053 → no error

In the example above LO SET value1 will produce an error as all digits are outside the range of HI SET. LO SET value2 will not produce an error, but will return 0.05, not 0.053.

Syntax MANU:DCW:CLOSet<NR2>

Query Syntax MANU:DCW:CLOSet?

Parameter/ <NR2> 0.000 ~ 010.9 (IIT-2000/2010)

Return 0.000 ~ 020.9 (IIT-5010/5000)

parameter

Example MANU:DCW:CLOS 2.00
 Sets the DCW LO SET current to 2mA.

MANU:DCW:TTIME

Set →
 → Query

Description Sets or returns the DCW test time in seconds. The test must first be in DCW mode before this command can be used.

In special MANU mode, the TIMER can be turned off.

Syntax MANU:DCW:TTIME {<NR2>|OFF}

Query Syntax MANU:DCW:TTIME?

Parameter	<NR2>	0.5 ~ 999.9 seconds
	OFF	TIMER OFF (special MANU mode).

Return parameter	<NR2>	0.5 ~ 999.9 seconds
	TIME OFF	TIMER is OFF (special MANU mode).

Example MANU:DCW:TTIM 1
 Sets the DCW test time to 1 second.

Set →
 → Query

MANU:DCW:REF

Description Sets or returns the DCW reference value in mA. The test must first be in DCW mode before this command can be used.


The reference value must be less than the HI SET value.

The reference value uses the same range as the HI SET value.

Syntax	MANU:DCW:REF <NR2>	
Query Syntax	MANU:DCW:REF?	
Parameter/ Return parameter	<NR2>	0.000 ~ 010.9 (IIT-2000/2010) 0.000 ~ 020.9 (IIT-5010/5000)

Example MANU:DCW:REF 0.01

 Sets the DCW reference to 0.01 mA.



MANU:DCW:ARCCurrent

Description Sets or returns the DCW ARC current value in mA. ARC must be enabled to set the ARC current. The test must first be in DCW mode before this command can be used.


ARC current uses the same range as the HI SET value. The ARC current is limited to 2X the HI SET value.

Syntax	MANU:DCW:ARCCurrent <NR2>	
Query Syntax	MANU:DCW:ARCCurrent?	
Parameter/ Return parameter	<NR2>	1.000 ~ 20.00 (IIT-2000/2010) 2.000 ~ 040.0 (IIT-5010/5000)

Example MANU:DCW:ARCC 10

 Sets the DCW ARC value to 10mA.

MANU:IR:VOLTage



Description Sets or returns the IR voltage in kV. The test must first be in IR mode before this command can be used.


Syntax MANU:IR:VOLTage <NR2>

Query Syntax MANU:IR:VOLTage?

Parameter/Return parameter <NR2> 0.05 ~ 1 (0.05kV to 1kV: steps of .05)
 *IIT-5010 also includes a 0.125kV point.

Example MANU:IR:VOLT 1
 Sets the IR voltage to 1 kV.

MANU:IR:RHISet



Description Sets or returns the IR HI SET resistance value in MΩ (IIT-2010) or GΩ (IIT-5010). The test must first be in IR mode before this command can be used.

Syntax MANU:IR:RHISet <NR1>|NULL


Query Syntax MANU:IR:RHISet?

Parameter/ Return parameter	<NR1>	IIT-2010 only: 2 ~ 9999 (unit = MΩ) IIT-5010 only: Format A: 0.002 ~ 50.00 (unit = GΩ) Format B: 0.002G ~ 50.00G Format C: 2M ~ 50000M
	NULL	Sets the HI SET value to ∞.

Example MANU:IR:RHIS 10
(IIT-2000/2010) Sets the IR HI SET resistance to 10 MΩ.

Example MANU:IR:RHIS 0.010
(IIT-5000/5010) Sets the IR HI SET resistance to 10 MΩ.

MANU:IR:RLOSet



Description Sets or returns the IR LO SET resistance value in MΩ (IIT-2010) or GΩ (IIT-5010). The LO SET value must be less than the HI SET value. The test must first be in IR mode before this command can be used.

Syntax MANU:IR:RLOSet<NR1>


Query Syntax MANU:IR:RLOSet?

Parameter/ Return parameter	<NR1>	IIT-2010 only: 1 ~ 9999 (unit = MΩ) IIT-5010 only: Format A: 0.001 ~ 50.00 (unit = GΩ) Format B: 0.001G ~ 50.00G Format C: 1M ~ 50000M
-----------------------------------	-------	---

Example MANU:IR:RLOS 10
 (IIT-2000/2010) Sets the IR LO SET resistance to 10MΩ.

Example MANU:IR:RLOS 0.010
 (IIT-5000/5010) Sets the IR LO SET resistance to 10MΩ.

MANU:IR:TTIME



Description Sets or returns the IR test time in seconds. The test must first be in IR mode before this command can be used.


Syntax MANU:IR:TTIME <NR2>

Query Syntax MANU:IR:TTIME?

Parameter/ Return parameter	<NR2>	1.0 ~ 999.9 seconds
-----------------------------------	-------	---------------------

Example MANU:IR:TTIM 1
 Sets the IR test time to 1 second.

MANU:IR:REF



Description Sets or returns the IR reference value in MΩ (IIT-2010) or GΩ (IIT-5010). The test must first be in IR mode before this command can be used.

The reference value must be lower than the HI SET value.

Syntax MANU:IR:REF <NR1>


Query Syntax MANU:IR:REF?

Parameter/	<NR1>	IIT-2010 only:
Return		0000 ~ 9999 (unit = MΩ)
parameter		IIT-5010 only:
		Format A: 0 ~ 50.00 (unit = GΩ)
		Format B: 0G ~ 50.00G
		Format C: 0M ~ 50000M

Example MANU:IR:REF 900
(IIT-2000/2010) Sets the IR reference to 900 MΩ.

Example MANU:IR:REF 0.900
(IIT-5000/5010) Sets the IR reference to 900 MΩ.

MANU:GB:CURRent



Description Sets or returns the GB current in A. The test must first be in GB mode before this command can be used.


Syntax MANU:GB:CURRent <NR2>

Query Syntax MANU:GB:CURRent?

Parameter/	<NR2>	3.00~33.00 (IIT-2010)
Return		3.00~33.00 (IIT-5010)
parameter		

Example MANU:GB:CURR 3.00
Sets the GB current to 3.00A.

MANU:GB:RHISet




Description Sets or returns the GB HI SET resistance value in mΩ. The test must first be in GB mode before this command can be used.

Syntax MANU:GB:RHISet <NR2>

Query Syntax MANU:GB:RHISet?

Parameter/	<NR2>	000.1 ~ 650.0
Return		
parameter		

Example MANU:GB:RHIS 100.0
Sets the HI SET value to 100mΩ.

 **Note** If the (GB current x HI SET resistance) > 5.4V, then an error will be generated (“GBV > 5.4V”).

MANU:GB:RLOSet

Set →
→ Query

Description Sets or returns the GB LO SET resistance value in mΩ. The LO SET value must be less than the HI SET value. The test must first be in GB mode before this command can be used.

Syntax MANU:GB:RLOSet<NR2>

Query Syntax MANU:IR:RLOSet?

Parameter/ <NR2> 0.000 ~ 649.9
Return
parameter

Example MANU:GB:RLOS 50
Sets the GB LO SET resistance to 50mΩ.

Set →
→ Query

MANU:GB:TTIME

Description Sets or returns the GB test time in seconds. The test must first be in GB mode before this command can be used.

Syntax MANU:GB:TTIME <NR2>

Query Syntax MANU:GB:TTIME?

Parameter/ Return parameter	<NR2>	0.5 ~ 999.9 seconds
-----------------------------------	-------	---------------------

Example MANU:GB:TTIM 1

 Sets the GB test time to 1 second.

MANU:GB:FREQuency

Set →
→ Query

Description	Sets or returns the GB test frequency in Hz. The test must first be in GB mode before this command can be used.	
-------------	---	--

Syntax	MANU:GB:FREQuency {50 60}	
--------	---------------------------	--

Query Syntax	MANU:GB:FREQuency?	
--------------	--------------------	--

Parameter/	50	50 Hz
------------	----	-------

Return parameter	60	60 Hz
---------------------	----	-------

Example MANU:GB:FREQ 50

 Sets the GB test frequency to 50Hz.

MANU:GB:REF

Set →
→ Query

Description	Sets or returns the GB reference value in mΩ. The test must first be in GB mode before this command can be used.	
-------------	--	--


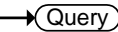
Syntax	MANU:GB:REF <NR2>	
--------	-------------------	--

Query Syntax	MANU:GB:REF?	
--------------	--------------	--

Parameter/ Return parameter	<NR2>	0.000 ~ 649.9
-----------------------------------	-------	---------------

Example MANU:GB:REF 100

 Sets the GB reference to 100 mΩ.

 →
 → 

MANU:GB:ZEROCHECK

Description Performs the zero check function. The test must first be in GB mode and in the Ready Status before this command can be used.

 See page 83 for details on the ZERO function.


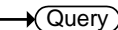
Syntax MANU:GB:ZEROCHECK {ON|OFF}

Query Syntax MANU:GB:ZEROCHECK?

Parameter/ Return parameter	ON	Zero function is active.
	OFF	Zero function is not active.

Example MANU:GB:ZEROCHECK OFF

 Activates the ZERO function.

 →
 → 

MANU:UTILity:ARCMode

Description Sets or returns the ARC mode status for the current test.


 The ARC mode cannot be set for the IR and GB function.

Syntax MANU:UTILity:ARCMODE {OFF|ON_CONT| ON_STOP}
 MANU:UTILity:ARCMODE?

Query Syntax

Parameter/	OFF	Turns ARC mode off.
Return	ON_CONT	Sets ARC mode to ON and CONTINUE.
parameter	ON_STOP	Sets ARC mode to ON and STOP.

Example MANU:UTIL:ARCM OFF
 Turns ARC mode OFF.



MANU:UTILity:PASShold


Description Sets or returns the PASS HOLD setting for the current test.

Syntax MANU:UTILity:PASShold {ON|OFF}

Query Syntax MANU:UTILity:PASShold?

Parameter/	OFF	Turns PASS HOLD off.
Return	ON	Turns PASS HOLD on.
parameter		

Example MANU:UTIL:PASS OFF
 Turns PASS HOLD OFF.



MANU:UTILity:FAILmode

Description Sets or returns the FAIL mode setting for the current test.

Syntax MANU:UTILity:FAILmode {CONT|HOLD|STOP}

Query Syntax MANU:UTILity:FAILmode?


Parameter/	CONT	Sets/returns the fail mode as continue.
------------	------	---

Return	HOLD	Sets/returns the fail mode as hold.
--------	------	-------------------------------------

parameter	STOP	Sets/returns the fail mode as stop.
-----------	------	-------------------------------------

Example MANU:UTIL:FAIL CONT

Sets the fail mode to CONT (continue).



MANU:UTILity:MAXHold

Description Sets or returns the MAX HOLD setting for the current test.

Syntax MANU:UTILity:MAXHold {ON|OFF}

Query Syntax MANU:UTILity:MAXHold?

Parameter/	OFF	Turns MAX HOLD off.
------------	-----	---------------------


Return	ON	Turns MAX HOLD on.
--------	----	--------------------

parameter		
-----------	--	--

Example MANU:UTIL:MAXH ON

Turns MAX HOLD on.

MANU:UTILity:GROUNDMODE



Description	Sets or returns the Grounding mode of the current test.	
	The Ground Mode setting cannot be turned on with the IR and GB function.	
Syntax	MANU:UTILity:GROUNDMODE {ON OFF}	
Query Syntax	MANU:UTILity:GROUNDMODE?	
Parameter/	OFF	Turns ground mode off.
Return	ON	Turns ground mode on.
parameter		
Example	MANU:UTIL:GROUNDMODE ON	
	Turns GROUND MODE on.	

MANU<x>:EDIT:SHOW



Description	Returns the test parameters of a manual test.	
Query Syntax	MANU<x>:EDIT:SHOW?	
Parameter/	<x>	<NR1> 000~100. Manual test number

<code><string></code>	Returns a string in the following format: Test function, test voltage, HI SET value, LO SET value, Ramp time, test time.
-----------------------------	--

Example`MANU1:EDIT:SHOW ?``> ACW,0.100kV,H=01.00mA,L=00.00mA,R=000.1S, >T=001.0S.`

Returns the test parameters of manual test number 1.

Sweep Commands

SWEEP:DATA:STATus	179
SWEEP<X>:DATA:SHOW	180
SWEEP:GRAPh:SHOW	181
SWEEP :GRAPh:LINE	182
SWEEP:STARt:TIME	183

SWEEP:DATA:STATus



Description Returns the sweep mode, the voltage and current settings and the number data points that are used in the last sweep. There can be a maximum of 190 data points, depending on the testing time.

The data is returned as a string in the following format:

SWEEP MODE,VSET,ISET,Get Data[#data points].

Query Syntax SWEEP:DATA:STATus?

Return parameter <string> SWEEP MODE, VSET+unit, ISET+units, Get Data=number of data points

Example SWEEP:DATA:STATus?
>ACW,V=0.108kV,HI=10.96 mA ,Get Data=011

SWEEP<X>:DATA:SHOW

→ Query

Description

Returns the data associated with a sweep graph.

Data can be returned in one of two ways; either all the data can be returned or only the data at a particular point in time.

The test points are evenly distributed. There can be up to 190 data points.

If only the data from a single point is returned then the data is returned in the following format*:

DATA POINT, VSET, ISET, TIME, CR+LF

If the all the data for the all the points is returned then the data is returned in the following format*:

ACW MODE,CR+LF

No.,V(kV),I(mA), T(S) ,CR+LF

001,0.071,0.032,0000.1,CR+LF

002,0.111,0.047,0000.2,CR+LF

.....

013,0.601,0.215,0001.3,CR+LF

END

*Where CR+LF is a carriage return and line feed code. Time is in seconds.

Query Syntax	SWEEP<X>:DATA:SHOW?	
Parameter	<X>	<NR1> 1~190 (single data point)
	<X>	<NR1> 0 (all data points)

Single Data Point Example	SWEEP10:DATA:SHOW?
	> 010,0.106,00.00,0001.0, CR+LF
	Returns the data at point 10, which is at the 1 second time for the sweep test.

All Data Points Example	SWEEP0:DATA:SHOW?
	>ACW MODE,CR+LF
	>No.,V(kV),I(mA), T(S) ,CR+LF
	>001,0.071,0.032,0000.1,CR+LF
	>002,0.111,0.047,0000.2,CR+LF
	>.....
	>013,0.601,0.215,0001.3,CR+LF
	>END
	This will return all the data from the sweep graph.

SWEEP:GRAPh:SHOW




Description	Turns the sweep graph on or off on the IIT-5010/5000 display.
Syntax	SWEEP:GRAPh:SHOW {ON OFF}
Query Syntax	SWEEP:GRAPh:SHOW?

Parameter/	ON	Turn the sweep graph on.
Return	OFF	Turn the sweep graph off.
parameter		

Example SWEEP:GRAP:SHOW ON

Displays the sweep graph on the LCD display.



SWEEP :GRAPh:LINE

Description Sets or returns which lines are shown on the sweep graph.


Syntax SWEEP:GRAPh:LINE <NR1>

Query Syntax SWEEP:GRAPh:LINE?

Parameter/	<NR1>	Description
Return	0	Turn all lines off/all lines are off.
parameter	1	Displays the graph line for the primary test item. See page 87 for details. For example: V for ACW, DCW and IR tests, I for GB tests.
	2	Displays the graph line for the secondary test items. For example: I for ACW and DCW tests, R for IR and GB tests.
	3	Turn all lines on/all lines are on.

Example SWEEP:GRAP:LINE 3
Turns all the graph lines on.

SWEEP:STARt:TIME



Description Sets or returns the start time (STA.t) of the sweep graph in milliseconds.

This setting will also set what the time will be for the first point for the sweep data that is returned in the SWEEP:DATA:SHOW query.

Syntax SWEEP:STARt:TIME <NR2>

Query Syntax SWEEP:STARt:TIME ?

Parameter/ Return parameter	<NR2>	0.1~1999.8 seconds
-----------------------------------	-------	--------------------


Example SWEEP:STARt:TIME 1000.0
Sets the sweep start time to 1000 seconds.



Auto Commands

AUTO:STEP	184
AUTO<x>:PAGE:SHOW	185
AUTO:PAGE:MOVE	185
AUTO:PAGE:SWAP	186
AUTO:PAGE:SKIP	187
AUTO:PAGE:DEL	187
AUTO:NAME	188
AUTO:EDIT:ADD	188
TESTok:RETurn.....	189
*SRE	190

AUTO:STEP



Description	Sets or queries the AUTO number (automatic test number).
-------------	--

Syntax	AUTO:STEP <NR1>
--------	-----------------

Query Syntax	AUTO:STEP?
--------------	------------

Parameter/	<NR1>	1~100.
------------	-------	--------

Return

parameter

Example AUTO:STEP 100
 Sets the current AUTO number to 100.

AUTO<x>:PAGE:SHOW → Query

Description Returns the Page View of the selected automatic test in the following format:
 step1:MANU number, step2: MANU number, step3....etc.

Query Syntax AUTO<x>:PAGE:SHOW?

Parameter/ <x> <NR1> 1~100

Example AUTO1:PAGE:SHOW?
 >01:011 ,02:004 ,03:003 ,04:014 ,
 >05:015 ,06:020* ,07:012 ,08:018 ,
 >09: ,10: ,11: ,12: ,
 >13: ,14: ,15: ,16: ,
 Shows the Page View for AUTO number 1.

AUTO:PAGE:MOVE Set →

Description Moves the source step to the desired destination.


Syntax AUTO:PAGE:MOVE <Value1>,<Value2>

Parameter/ <Value1> <NR1> 1~16 (source step)
 >

<Value2 <NR1> 1~16 (destination step)
>

Example AUTO:PAGE:MOVE 1, 4

Moves the contents of step 1 to the step 4.



AUTO:PAGE:SWAP




Description Swaps the source step with destination step.

Syntax AUTO:PAGE:SWAP <Value1>,<Value2>

Parameter/ <Vaue1 <NR1> 1~16 (source step)
>
<Value2 <NR1> 1~16 (destination step)
>

Example AUTO:PAGE:SWAP 1, 4

Swaps the contents of step 1 with step 4.



AUTO:PAGE:SKIP

Set →

Description Skips the selected step when an AUTO test is run. This is shown as an asterisk (*) when in the PAGE view.

Syntax AUTO:PAGE:SKIP <NR1>,{ON|OFF}

Parameter/

<NR1>	1~16 (step no.#)
ON	Skip the selected step.
OFF	Un-skip the selected step.

Example AUTO:PAGE:SKIP 1,ON

```
AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01:010 #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
```

Skips step number #1.

AUTO:PAGE:DEL

Set →

Description Deletes the selected step from the AUTO test. The remaining steps move up to replace the deleted step.

Syntax AUTO:PAGE:DEL <NR1>

Parameter/


<NR1>	1~16 (step no.#)
-------	------------------

Example AUTO:PAGE:DEL 3

Deletes the contents of step number #3.

```
AUTO=001-010 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01:010 #02:001 #03:003 #04:004
#05:007 #06:003 #07:038 #08:005
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
```

AUTO:NAME



Description Sets or returns the AUTO name for the selected automatic test. The test must be in AUTO mode before this command can be used.

Note only alphanumeric characters (A-Z, a-z, 0-9) and the “_” underscore character can be used to set the AUTO test name.

Syntax AUTO:NAME <string>

Query Syntax AUTO:NAME?

Parameter/ <string> 10 character string. (first character must be a letter)

**Return
parameter**

Example AUTO:NAME program1

Sets the AUTO name to “program1”.

AUTO:EDIT:ADD



Description Add the selected MANU test to the current AUTO number.

Syntax AUTO:EDIT:ADD <NR1>

Parameter/ <NR1> 1~100


Example AUTO:EDIT:ADD 7

Adds MANU-007 to the current AUTO number. I.e.,

```

AUTO=005-007 AUTO_NAME
MANU_NAME ACW=0.100kV HI_SET=01.00mA
#01:010 #02:001 #03:003 #04:004
#05:007 #06: #07: #08:
#09: #10: #11: #12:
#13: #14: #15: #16:
MOVE SWAP SKIP DEL
    
```

MANU test added
to last step



TESTok:RETurn

Description Allows “OK” to be displayed on the remote terminal when a test has stopped (PASS/FAIL or STOP). This applies for MANU and AUTO mode.

By default, TESTok:RETurn is set to OFF.

Syntax TESTok:RETurn {ON|OFF}

Query Syntax TESTok:RETurn?

Parameter/	ON	Enables the “OK” message to be displayed.
-------------------	----	---

Return	OFF	Disables the message
---------------	-----	----------------------

parameter

Example TEST:RET OFF

Disables the message.

***SRE**

→ Query

Description AUTO MODE only. Use this command to get measurement step number at the current point in time during AUTO MODE testing.

Example: User send command “*SRE” to IIT-20X0/50X0 during AUTO mode

Query Syntax *SRE?

Return parameter <NR1> 00~16

Example *SRE?

>5

The current test step is number 5. This indicates that steps 1~4 have already been completed and the results for those steps can now be retrieved.

Common Commands

*CLS.....	191
*IDN.....	191

*CLS (Set) →

Description The *CLS command clears the internal registers.

Syntax *CLS

*IDN → (Query)

Description Queries the model number, serial number, and firmware version of the tester.

Query Syntax *IDN?

Return parameter	<string>	Returns the instrument identification as a string in the following format: IIT-2000, XXXXXXXXXXXXX, V1.00 Model number : IIT-2000 Serial number :12 character serial number Firmware version : V1.00
------------------	----------	--



Remote Commands

*RMTOFF 192

*RMTOFF



Description This command can be used to terminate a remote session. When this command is used “RMT” will no longer be displayed on the front panel, indicating that remote mode has been terminated.

Syntax *RMTOFF

Special Functions

Inter Lock Key Open 192

Inter Lock Key Open



Description This special function is not a command. When in remote mode, the IIT-20X0/50X0 will send the message, “Inter Lock Key Open” if a test is started with INTERLOCK set to ON, but the

interlock signal I/O pins are not shorted (either with the included interlock key or manually).

This special function is analogous to the “INTERLOCK OPEN” message that is displayed on the front panel under the same conditions (page 119).

Error Messages

Background The possible error messages returned from SYST:ERR? query are listed below.

Error	Error Code
Command Error	0x14
Value Setting Error	0x15
String Setting Error	0x16
Query Error	0x17
MODE Setting Error	0x18
Time Error	0x19
DC Over 50W (IIT-2000/2010 only)	0x1A
DC Over 100W (IIT-5010/5000 only)	0x1A
GBV > 5.4V	0x1B

FAQ

- The tester will not turn on.
- The panel keys are not working.
- When I press the START button the tester will not start testing?
- The accuracy does not match the specification.

The tester will not turn on.

Ensure the power cord is connected. Ensure the line input is set to the correct line voltage. Check to make sure the fuse is not blown. See page 197.

The panel keys are not working.

Ensure the tester is not in remote mode, page 134.

Ensure the tester is not in SIGNAL I/O or Remote Connect mode, page 117.

When I press the START button the tester will not start testing?

The tester must first be in the READY status before a test can be started. Ensure the tester displays READY before pressing the START button, page 72 (manual test), 102(automatic test).

If “Double Action” is enabled, the START button must be pressed 0.5 seconds after the STOP button is pressed, otherwise the tester will not start testing.

If “Interlock” is enabled, the interlock key must be inserted into the signal I/O port on the rear before a test can be started. See page 127 for details.

Lastly, ensure that the Start Ctrl setting is correctly configured in the Common Utility menu. For example, to enable the START button to start a test, ensure that the Start Ctrl setting is set to FRONT PANEL. See page 117 for details.

The accuracy does not match the specification.

Make sure the tester is powered on for at least 30 minutes, within +15°C~+35°C. This is necessary to stabilize the unit to match the specification.


For more information, contact your local dealer or RS Components at www.rs-components.com

APPENDIX


Fuse Replacement

Steps


1. Turn the instrument off.




2. Remove the power cord.

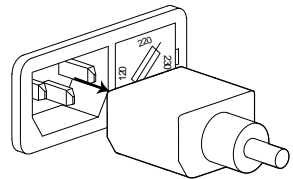


3. Remove the fuse socket using a flat screwdriver.

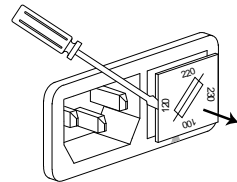

4. Replace the fuse in the fuse holder.



5. Ensure the correct line voltage is lined up with the arrow on the fuse holder. Insert the fuse socket.

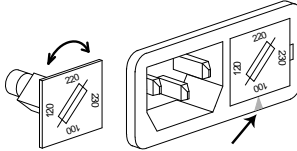

Rating

The fuse for the IIT-2000/2010 and the IIT-5010/5000 have different ratings:

IIT-2000/2010:

100V/120V	T5A 250V
220V/230V	T2.5A 250V

IIT-5010/5000:

100V/120V	T10A 250V
220V/230V	T6.3A 250V

Test Errors

The following error messages or messages may appear on the IIT screen when configuring or running tests.

Error Messages	Description
TIME ERR	<p>For ACW tests.</p> <p>IIT-2000/2010:</p> <p>TIME ERR is displayed when HI SET \geq 30.00mA~40.00mA and if the RAMP \nearrow time and the TEST TIME setting is > 240 seconds.</p> <p>IIT-5010/5000:</p> <p>TIME ERR is displayed when HI SET \geq 80.00mA~100.0mA and if the RAMP \nearrow time and the TEST TIME setting is > 240 seconds.</p>
OVER 50W (IIT-2000/2010)	<p>For DCW tests. OVER 50W is displayed if the HI SET setting multiplied by the Voltage setting is greater than 50W (IIT-2000/2010 only).</p>
OVER 100W (IIT-5010/5000)	<p>For DCW tests. OVER 100W is displayed if the HI SET setting multiplied by the Voltage setting is greater than 100W (IIT-5010/5000 only).</p>
I ERR	<p>For ACW, DCW tests. Shown when the current is set too high.</p>
SHORT	<p>Voltage is too low or there is no High Voltage output. Indicates that the DUT could be shorted.</p>
V ERR	<p>For ACW, DCW tests. Indicates that an abnormal voltage has been detected.</p>
V = 0	<p>For GB tests. Voltage is equal to 0. Check to see that the SENSE H or SOURCE H is not open.</p>

R ERR	For IR tests. The voltage is too high or resistance=0Ω. Check to see whether the DUT or test lead is shorting.
	For GB tests. The resistance is too high.
I<SET	For GB tests. Current too low. Indicates that the SOURCE L or SOURCE H test lead is open or poorly connected. Test the test lead connection with the DUT to confirm.
I>SET	For GB tests. Current is too high.
R=0	For GB tests. Resistance = 0. This error indicates that there is an error with the measured resistance (0Ω). Perform the zeroing function again.
GBV OVER	GBV > 5.4V

IIT-2000/2010/5000/5010 Specifications

The specifications apply when the IIT-2000/2010/5000/ 5010 is powered on for at least 30 minutes at 15°C~35°C.

Specifications

Environment

Range	Temperature	Humidity
Warranty	15°C ~ 35°C	≤70% (No condensation)
Operation	0°C ~ 40°C	≤70% (No condensation)
Storage	-10°C ~ 70°C	≤85% (No condensation)
Installation Location	Indoors at an amplitude of up to 2000m.	

AC Withstanding Voltage

Output Voltage Range	0.100kV~ 5.000kV
Output Voltage Resolution	2V
Output Voltage Accuracy	± (1% of setting +5V) with no load
Maximum Rated Load	200 VA (5kV/40mA) [IIT-2000/2010] 500 VA (5kV/100mA) [IIT-5010/5000]
Maximum Rated Current	40mA [IIT-2000/2010], 100mA [IIT-5010/5000] 0.001mA ~ 10mA(0.100kV≤V≤0.5kV) 0.001mA ~ 40mA(0.5kV<V≤5kV) [IIT-2000/2010] 0.001mA ~ 100mA(0.5kV<V≤5kV) [IIT-5000/5010]
Output Voltage Waveform	Sine wave
Frequency	50 Hz / 60 Hz

Voltage Regulation	$\pm 1\% +5V$ [Maximum rated load → no load]
Voltmeter Accuracy	$\pm (1\% \text{ of reading} + 5V)$
Current Measurement	0.001mA~040.0mA [IIT-2000/2010]
Range	0.001mA~100.0mA [IIT-5000/5010]
Current Best Resolution	IIT-2000/2010: 1uA 0.001mA(0.001mA~0.999mA) 0.01mA(01.00mA~09.99mA) 0.1mA(010.0~040.0mA) IIT-5000/5010: 1uA 0.001mA(0.001mA~1.100mA) 0.01mA(01.11mA~11.00mA) 0.1mA(011.1~100.0mA)
Current Measurement Accuracy	IIT-2000/2010: $\pm (1.5\% \text{ of rdg} + 30 \text{ counts})$ when HI SET<1.00mA $\pm (1.5\% \text{ of rdg} + 3 \text{ counts})$ when HI SET \geq 1.00mA IIT-5000/5010: $\pm (1.5\% \text{ of rdg} + 30 \text{ counts})$ when HI SET<1.11mA $\pm (1.5\% \text{ of rdg} + 3 \text{ counts})$ when HI SET \geq 1.11mA
Judgment Valid Range (ACW)	HI SET: 0.011mA to 1.100mA 00.11mA to 11.00mA 001.1mA to 040.0mA(IIT-5010/5000 is 100.0mA)

LOW SET:
 0.010mA to 1.099mA
 00.10mA to 10.99mA
 001.0mA to 039.9mA (IIT-5010/5000 is 099.9mA)

Window Comparator Method Yes

ARC DETECT Yes

Rise-time Control Function Yes

RAMP (Ramp Time) 0.1~999.9S

TIMER (Test Time) OFF¹, 0.5S~999.9S

GND ON/OFF

¹ The timer can only be turned off under special MANU mode (MANU=***-000).

DC Withstanding Voltage

Output Voltage Range 0.100kV ~ 6.000kV

Output Voltage Resolution 2V

Output Voltage Accuracy \pm (1% of setting +5V) with no load

Maximum Rated Load 50W (5kV/10mA)[IIT-2000/2010]
 100W (5kV/20mA)[IIT-5010/5000]

Maximum Rated Current 10mA [IIT-2000/2010, 20mA [IIT-5010/5000]
 0.001mA ~ 2mA (0.100kV \leq V \leq 0.5kV)
 0.001mA ~ 10mA (0.5kV<V \leq 6kV)[IIT-2000/2010]
 0.001mA ~ 20mA (0.5kV<V \leq 6kV)[IIT-5000/5010]

Voltmeter Accuracy \pm (1% of reading+ 5V)

Voltage Regulation \pm 1% +5V
 [Maximum rated load \rightarrow no load]

Current Measurement 0.001mA~010.0mA [IIT-2000/2010]

Range 0.001mA~020.0mA [IIT-5010/5000]

Current Best Resolution	<p>IIT-2000/2010:</p> <p>1μA</p> <p>0.001mA(0.001mA~0.999mA)</p> <p>0.01mA(01.00mA~09.99mA)</p> <p>0.1mA(010.0mA)</p> <p>IIT-5010/5000:</p> <p>1μA</p> <p>0.001mA(0.001mA~1.100mA)</p> <p>0.01mA(01.11mA~11.00mA)</p> <p>0.1mA(011.0mA~020.0mA)</p>
Current Measurement Accuracy	<p>IIT-2000/2010:</p> <p>\pm (1.5% of rdg + 30 counts) when HI SET <1.00mA</p> <p>(1.5% of rdg + 3 counts) when HI SET \geq1.00mA</p> <p>IIT-5010/5000:</p> <p>\pm (1.5% of rdg + 30 counts) when HI SET <1.11mA</p> <p>(1.5% of rdg + 3 counts) when HI SET \geq1.11mA</p>
Judgment Valid Range (DCW)	<p>HI SET:</p> <p>0.011mA to 1.100mA</p> <p>00.11mA to 10.00mA(IIT-5010/5000 11.00mA)</p> <p>001.1mA to 020.0mA(IIT-5010/5000 only)</p> <p>LOW SET:</p> <p>0.010mA to 1.099mA</p> <p>00.10mA to 09.99mA(IIT-5010/5000 10.99mA)</p> <p>001.0mA to 019.9mA(IIT-5010/5000 only)</p>
Window Comparator Method	Yes
ARC DETECT	Yes

Rise-time Control Function	Yes
RAMP (Ramp Time)	0.1~999.9S
TIMER (Test Time)	OFF ¹ , 0.5S~999.9S
GND	ON/OFF

¹ The timer can only be turned off under special MANU mode (MANU=***-000).

Insulation Resistance Test

Output Voltage	50V~1000V *IIT-5010 also includes a 125V test point.	
----------------	--	--

Output Voltage Resolution	50V	
---------------------------	-----	--

Output Voltage Accuracy	(1% of setting+5V) with no load	
-------------------------	---------------------------------	--

Resistance Measurement	1MΩ~ 9500MΩ (IIT-2010)	
------------------------	------------------------	--

Range	1MΩ~ 50GΩ (IIT-5010)	
-------	----------------------	--

Test Voltage	Measurement	Accuracy
	Range	

(IIT-2010)

50V≤V≤450V	1~50MΩ	±(5% of reading +1 count)
	51~2000MΩ	±(10% of reading +1 count)
500V≤V≤1000V	1~500MΩ	±(5% of reading +1 count)
	501~9500MΩ	±(10% of reading +1 count)

(IIT-5010)

50V≤V≤450V	0.001~0.050GΩ	±(5% of reading +1 count)
	0.051~2.000GΩ	±(10% of reading +1 count)
500V≤V≤1000V	0.001~0.500GΩ	±(5% of reading +1 count)
	0.501~9.999GΩ	±(10% of reading +1 count)
	10.00~50.00GΩ	±(20% of reading +1 count)

Output Impedance	600kΩ
------------------	-------


Window Comparator Method	Yes
--------------------------	-----

Rise-time Control Function	Yes
RAMP (Ramp Time)	0.1~999.9S
TIMER (Test Time)	1S~999.9S
GND	OFF


Ground Bond Test

Output Current Range	03.00A~30.00A (IIT-2010) 03.00A~32.00A (IIT-5010)
Output Current Accuracy	\pm (1% of setting +0.2A) when $3A \leq I \leq 8A$ \pm (1% of setting +0.05A) when $8A < I \leq 30A$ (IIT-2010) \pm (1% of setting +0.05A) when $8A < I \leq 32A$ (IIT-5010)
Output Current Resolution	0.01A
Frequency	50Hz/60Hz selectable
Ohmmeter Measurement Accuracy	\pm (1% of reading +2m Ω)
Ohmmeter Measurement Range	10m Ω ~650.0m Ω (depending on output current)

IIT-2010:

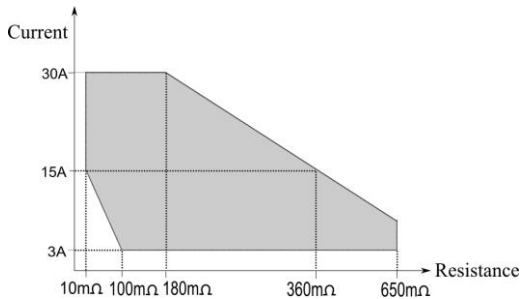

IIT-5010:

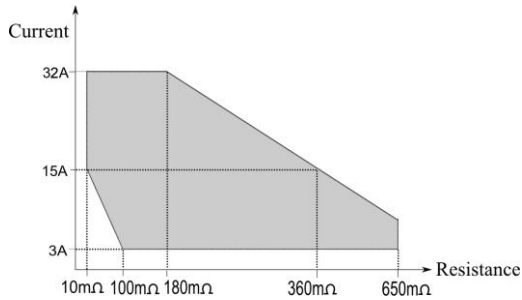

Test Voltage	Max. 6V(AC)open-circuit
--------------	-------------------------

Ohmmeter Measurement	0.1mΩ
----------------------	-------

Resolution	
------------	--

Windows Comparator	Yes
--------------------	-----

Method	
--------	--

TIMER (Test Time)	0.5S~999.9S
-------------------	-------------

GND	OFF
-----	-----

Interface

REMOTE (Remote terminal)	Yes
--------------------------	-----

SIGNAL IO	Yes
-----------	-----

RS232	Yes
-------	-----

USB (Device)	Yes
--------------	-----

GPIB	Yes (OPTION)
------	--------------

General

DISPLAY	240 x 64 dot matrix LED back light LCD
---------	--

MEMORY	AUTO/MANU mode 100 memory blocks total
--------	--

POWER SOURCE	AC100V/120V/220V/230V ±10%
--------------	----------------------------

	50Hz/60Hz
--	-----------



ACCESSORIES Power cord x1, Quick Start Guide x1
 User Manual x1 (CD)
 GHT-114x1 for IIT-2000/5000
 GHT-114x1, GTL-115x1 for IIT-2010/5010

DIMENSIONS & WEIGHT IIT-2000/2010: Approx. 330(W) x 148(H) x 452(D) mm (Max.),
 19kg(Max)
 IIT-5010: Approx. 330(W) x 148(H) x 587(D) mm (Max.),
 27kg(Max)
 IIT-5000: Approx. 330(W) x 148(H)
 x 482(D) mm(Max), 24kg(Max)

Table 1a: Output Limitation in Withstanding Voltage Testing (IIT-2000/2010)

	Upper Current	Pause	Output Time
AC	$30\text{mA} \leq I \leq 40\text{mA}$	At least as long as the output time	Maximum 240 seconds
	$0.001\text{mA} \leq I < 30\text{mA}$	Not necessary	Continuous output possible
DC	$0.001\text{mA} \leq I \leq 10\text{mA}$	Not necessary	Continuous output possible
GB	$15\text{A} < I \leq 30\text{A}$ (IIT-2010)	At least as long as the output time	999.9
	$3\text{A} \leq I \leq 15\text{A}$	Not necessary	999.9

NOTE: Output Time = Ramp Time + Test Time.

Table 1b: Output Limitation in Withstanding Voltage Testing (IIT-5010/5000)


	Upper Current	Pause	Output Time
--	---------------	-------	-------------






AC	80mA ≤ I ≤ 100mA	At least as long as the output time	Maximum 240 seconds
	0.001mA ≤ I < 80mA	Not necessary	Continuous output possible
DC	0.001mA ≤ I ≤ 20mA	Not necessary	Continuous output possible
GB	15A < I ≤ 32A (IIT-5010)	At least as long as the output time	999.9
	3A ≤ I ≤ 15A	Not necessary	999.9

NOTE: Output Time = Ramp Time + Test Time.


IIT-2000 Dimensions

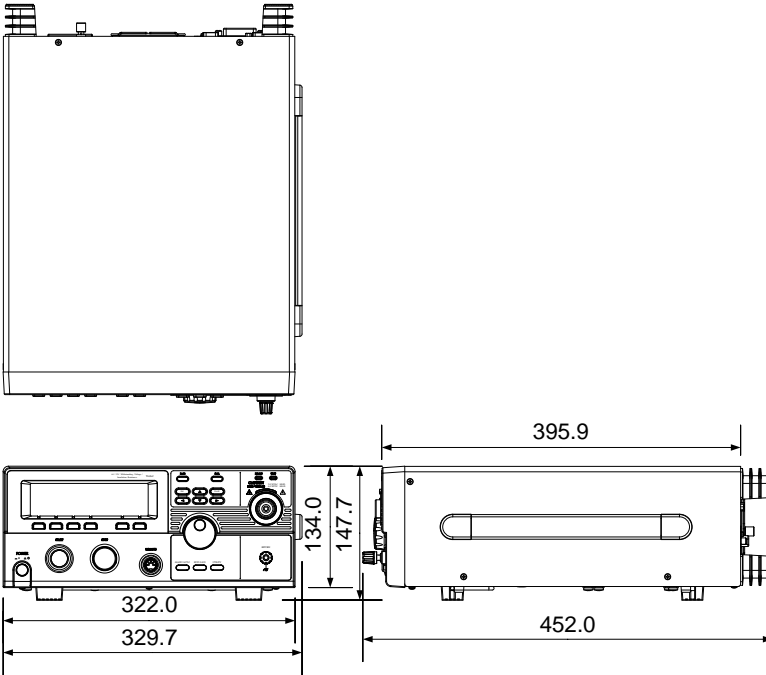



IIT-2010 Dimensions

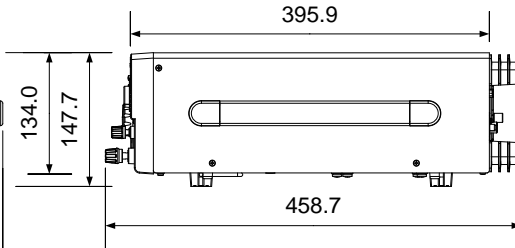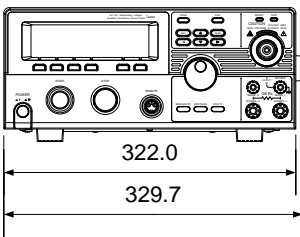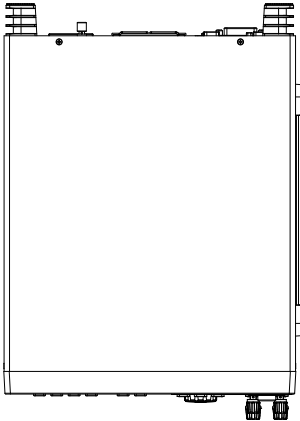

IIT-5010 Dimensions

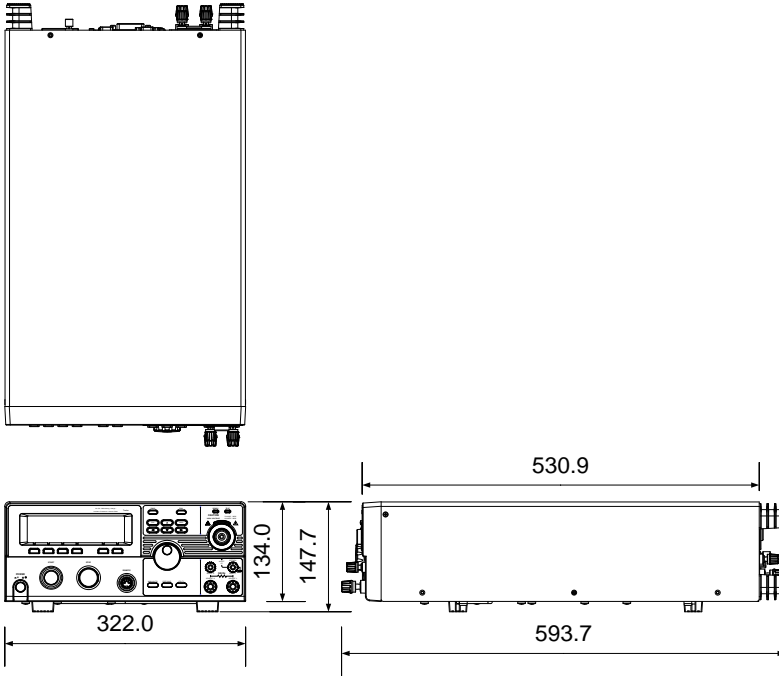

IIT-5000 Dimensions

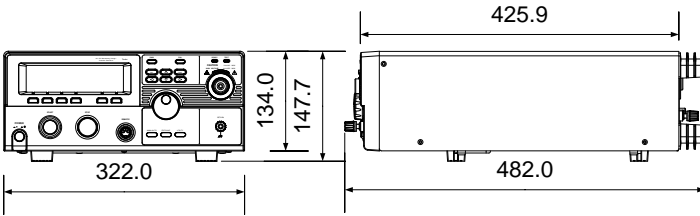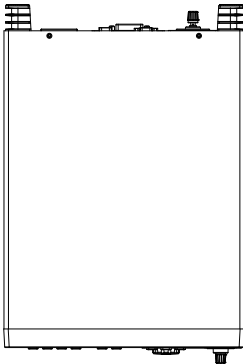

Declaration of Conformity

We

declare that the below mentioned product

Type of Product: Electrical Safety Tester

Model Number: IIT-2000, IIT-2010

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2014/30/EU) and Low Voltage Directive (2014/35/EU).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

⊙ EMC	
EN 61326-1 EN 61326-2-1	Electrical equipment for measurement, control and laboratory use — EMC requirements (2013)
Conducted Emission Radiated Emission EN55011: 2009+A1: 2010 Class A	Electrical Fast Transients EN 61000-4-4: 2012
Current Harmonics EN 61000-3-2: 2014	Surge Immunity EN 61000-4-5: 2006
Voltage Fluctuations EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010
Radiated Immunity EN 61000-4-3: 2006 +A2:2010	Voltage Dip/Interruption EN 61000-4-11: 2004

Low Voltage Equipment Directive 2014/35/EU	
Safety Requirements	EN 61010-1: 2010/ EN 61010-2-030: 2010

Declaration of Conformity

We

declare that the below mentioned product

Type of Product: Electrical Safety Tester

Model Number: IIT-5000, IIT-5010

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2014/30/EU) and Low Voltage Directive (2014/35/EU).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

◎ EMC	
EN 61326-1 EN 61326-2-1	Electrical equipment for measurement, control and laboratory use — EMC requirements (2013)
Conducted Emission Radiated Emission EN55011: 2009+A1: 2010 Class A	Electrical Fast Transients EN 61000-4-4: 2012
Current Harmonics EN 61000-3-2: 2006+A2:2009	Surge Immunity EN 61000-4-5: 2006
Voltage Fluctuations EN 61000-3-3: 2008	Conducted Susceptibility EN 61000-4-6: 2009
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010
Radiated Immunity EN 61000-4-3: 2006 +A2:2010	Voltage Dip/ Interruption EN 61000-4-11: 2004

Low Voltage Equipment Directive 2014/35/EU	
Safety Requirements	EN 61010-1: 2010/ EN 61010-2-030: 2010

INDEX

Accessories.....	12	overview.....	122
Automatic test		remote operation	123
add test.....	95	remote terminal.....	122
edit settings.....	94	signal I/O operation.....	127
load.....	93	signal I/O overview.....	124
page view	99	FAQ	195
results	107	Front panel diagram	15
running a test	102	GPIB installation	26
saving.....	98	Ground	
test file name.....	96	symbol.....	4
Caution symbol.....	3	Interlock key	128
Cleaning the instrument	5	Line voltage selection.....	24
Declaration of conformity	214, 215	List of features.....	11
Dimensions	210	Manual tests	
Disposal instructions.....	6	ARC mode.....	58
EN61010		fail mode	63
measurement category.....	4	ground mode.....	66
pollution degree	5	max hold	65
Environment		overview.....	42
safety instruction.....	5	pass hold	62
External control	121	ramp up time	55
Interlock key.....	128	results.....	77
		running a test	72



saving	71	Command syntax	136
special mode.....	86	function check.....	133
sweep	86	interface configuration	130
sweep graph	90	Service operation	
test filename.....	56	about disassembly	4
test frequency	48	contact	196
test function.....	46	Specifications	201
test limits	49	Sweep function.....	86
test reference.....	52	Test errors.....	198
test selection.....	44	UK power cord.....	7
test settings.....	45	Utility settings	
test time.....	53	buzzer	114
test voltage.....	47	Control settings.....	117
timing diagrams	78	double action.....	117
Marketing		GPIB.....	115
contact	196	interface.....	115
Menu tree	34	key lock.....	117
Operating precautions	28	LCD	112
Overview.....	10	RS232	115
Package contents.....	14	start control	117
Power on/off		USB.....	115
safety instruction	5	Warning symbol	3
Rear panel diagram	20	Workplace precautions.....	27
Remote control	129	Zeroing	83
Command list.....	139		



Limited Warranty

This meter is warranted to the original purchaser against defects in material and workmanship for 3 years from the date of purchase. During this warranty period, RS Components will, at its option, replace or repair the defective unit, subject to verification of the defect or malfunction. This warranty does not cover fuses, disposable batteries, or damage from abuse, neglect, accident, unauthorized repair, alteration, contamination, or abnormal conditions of operation or handling. Any implied warranties arising out of the sale of this product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. RS Components shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim or claims for such damage, expense or economic loss. Some states or countries laws vary, so the above limitations or exclusions may not apply to you. For full terms and conditions, refer to the RS website.



Africa

RS Components SA
P.O. Box 12182, Vorna Valley, 1686
20 Indianapolis Street, Kyalami Business Park,
Kyalami, Midrand, South Africa

Asia

RS Components Pte Ltd.
21 Tech Park Crescent
Singapore 638040

China

RS Components Ltd.
Suite 23 A-C
East Sea Business Centre
Phase 2
No. 618 Yan'an Eastern Road
Shanghai, 200001
China

Europe

RS Components Ltd.
PO Box 99, Corby, Northants NN17 9RS
United Kingdom

Japan

RS Components Ltd.
West Tower (12th Floor), Yokohama Business Park
134 Godocho, Hodogaya, Yokohama,
Kanagawa 240-0005 Japan

North America

Allied Electronics
7151 Jack Newell Blvd. S. Fort Worth,
Texas 76118
U.S.A.

South America

RS Components Limitada
Av. Pdte. Eduardo Frei M. 6001-71
Centro Empresas El Cortijo
Conchali, Santiago, Chile