

Battery

The battery is not fully charged when the device is purchased, but it contains enough energy to power on the device.

The charge level of the device has to be checked after 9 months at the latest in order to prevent deep discharge. If the battery is completely discharged, the phone will not switch on and the display will not show a charging process. Connect the phone to the charger.

After charging for a few minutes the display will appear again and you can then switch on the phone.

Warranty

Handset: 12 months warranty

Replaceable battery: 12 months warranty

Support

Warranty claims, service & repair, please approach manufacturer directly or our local distributors / resellers.

Note

Please also observe the safety requirements in the specific safety instructions and the information in the full user guide for your device.

Document No. 104HQSREV00

© 2025 HAEXC Mobile Pte. Ltd.

HAEXC Mobile Pte. Ltd.

2 Joo Koon Circle, Singapore 629031

Tel. +65 6100 9156

info@haexc-mobile.com

www.haexc-mobile.com

The content of this document is presented as it currently exists.

HAEXC Mobile Pte. Ltd. does not provide any explicit or tacit guarantee for the accuracy or completeness of the content of this document, including, but not restricted to, the tacit guarantee of market suitability or fitness for a specific purpose unless applicable laws or court decisions make liability mandatory.

HAEXC Mobile Pte. Ltd. reserves the right to make changes to this document or to withdraw it any time without prior notice. Changes, errors and misprints may not be used as a basis for any claim for damages. All rights reserved.

HAEXC Mobile Pte. Ltd. cannot be held responsible for any data or other loss and direct or indirect damages caused by any improper use of this device.

© 2025 HAEXC Mobile Pte. Ltd.

HAEXC Mobile Pte. Ltd.

2 Joo Koon Circle, Singapore 629031

www.haexc-mobile.com



SP104Ex

ATEX / IECEx  
ZONE 1/21


QUICK START GUIDE



- 1 Home
- 2 Return Key
- 3 Task Key
- 4 PTT Group change (For future use)
- 5 PTT Key
- 6 Power On / Off
- 7 Volume
- 8 Receiver
- 9 Light distance induction
- 10 LED Light
- 11 Touch Display
- 12 Front camera
- 13 SOS Key
- 14 Alarm Light
- 15 Rear camera
- 16 LED torch light
- 17 Speaker
- 18 Microphone
- 19 USB-C charging port
- 20 Wrist Strap Hole
- 21 Magnetic / Docking Charging Port




## How to insert the nano-SIM card, SD card, battery pack, and charging the phone

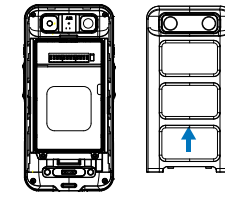


### Step 1

Push the battery cover upward to open.




### Step 2

Pull out the card tray from the slot.

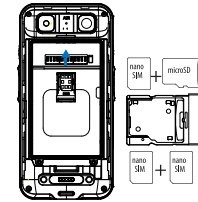


### Step 3

Insert the card with the contact pins facing out of the tray and push into the slot.

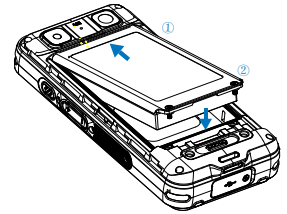


### Step 4

Insert the battery as illustrated in order. Hand-tight the 2 screws using the Torx T5 screwdriver.

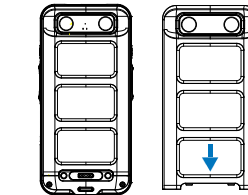

### Step 5

Close battery cover tightly as shown, Pop-up warning message shall display on the screen when not properly closed.

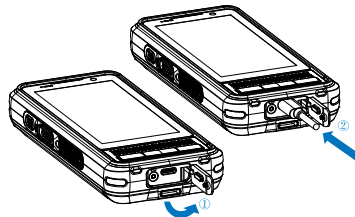

### Step 6

To charge the device after inserting the battery pack, unscrew using the Torx T5 screwdriver, open the USB-C cover to connect USB-C cable.