

[POWER COMMANDER V]

2010 MotoGuzzi V7

Installation Instructions



PARTS LIST

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 O2 optimizer
- 2 Velcro
- 1 Alcohol swab
- 1 Posi-tap

THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION!


YOU CAN ALSO DOWNLOAD THE POWER COMMANDER SOFTWARE AND LATEST MAPS FROM OUR WEB SITE AT:
www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

POWER COMMANDER V INPUT ACCESSORY GUIDE

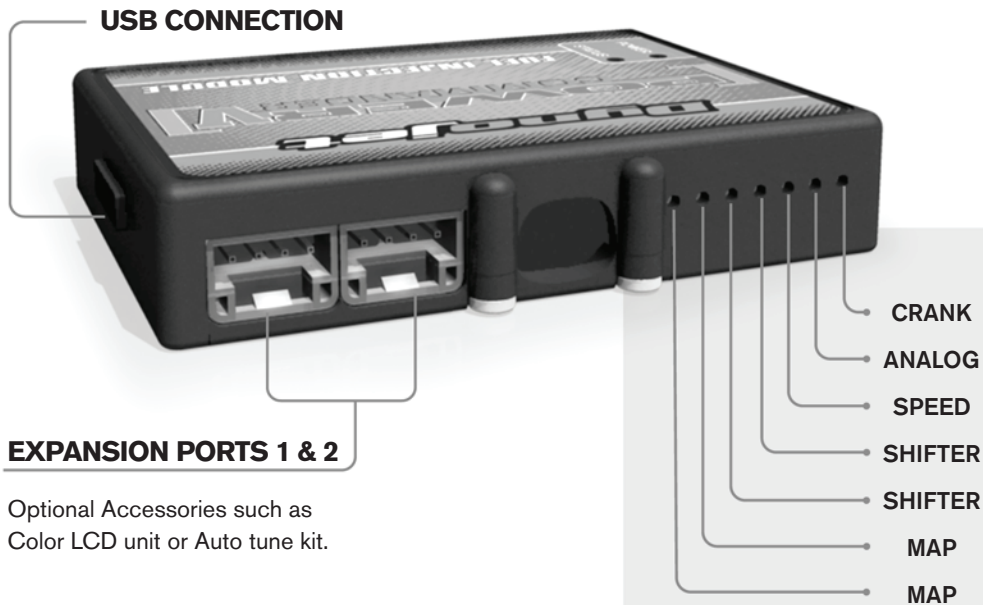

Wire connections:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



ACCESSORY INPUTS

Map -

The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated.

Shifter-

These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important.

Speed-


If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.

Analog-


This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.

Crank-


Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

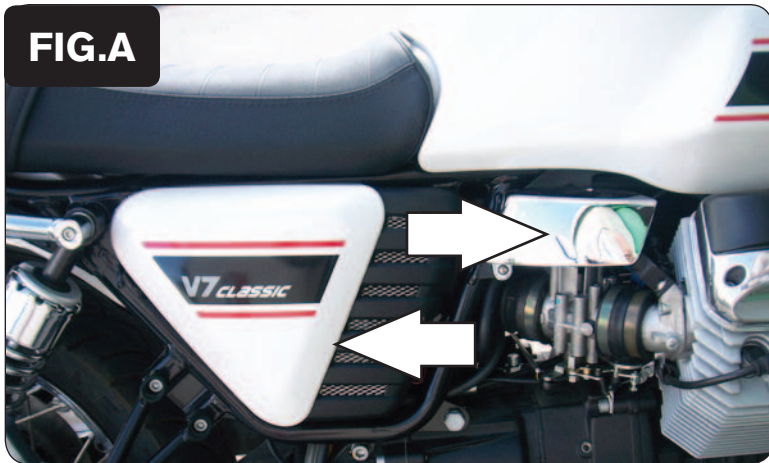


- 1 Remove the seat.
- 2 Remove the sidecovers and engine covers shown in Figure A on both sides of the bike.
- 3 Remove the battery.

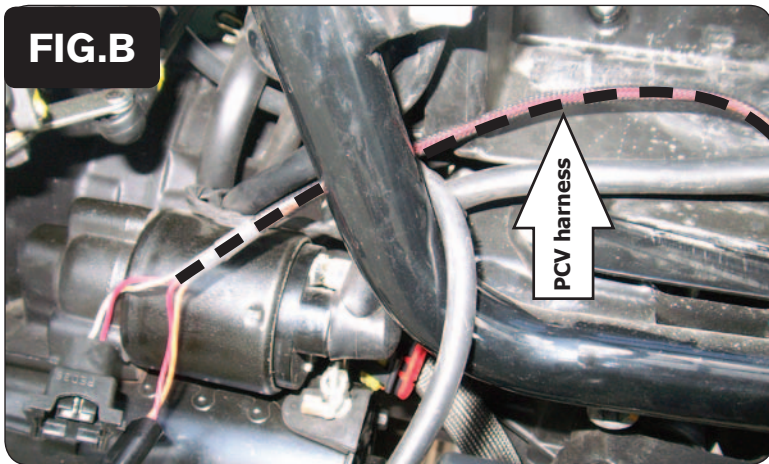


- 3 Lay the PCV in battery/inner fender area.
- 4 Route the ORANGE wires of the PCV to the LH throttle body. Go inside of the frame tube as shown in Figure B.

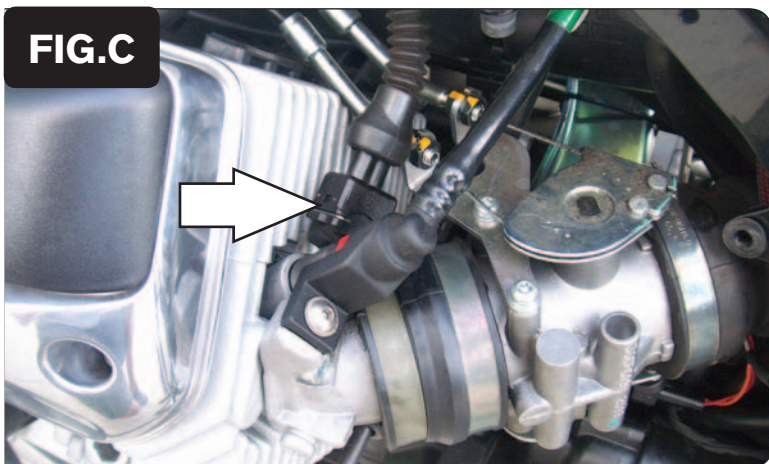


- 5 Unplug the stock wiring harness from the LH injector (Fig. C).

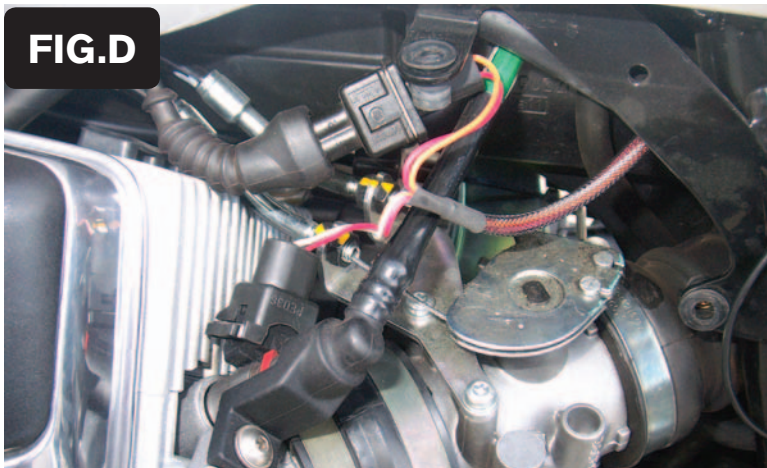

- 6 Connect the ORANGE wires from the PCV in-line of the stock wiring harness and stock injector (Fig. D).

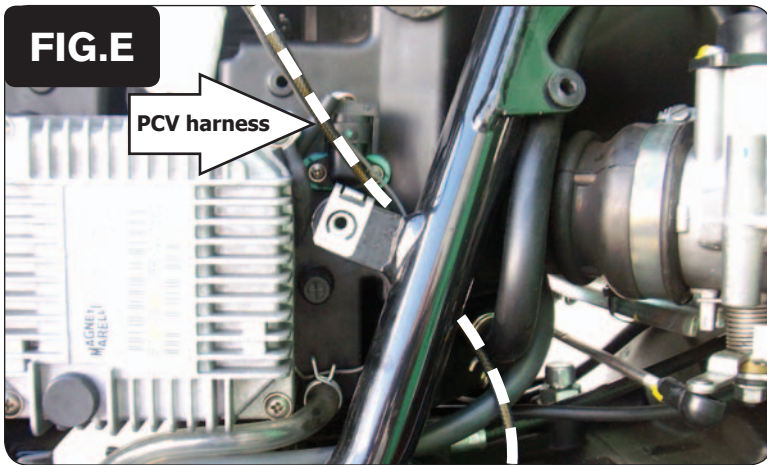

- 7 Route the YELLOW wires of the PCV to the RH throttle body. Go inside of the frame tube as shown in Figure E.

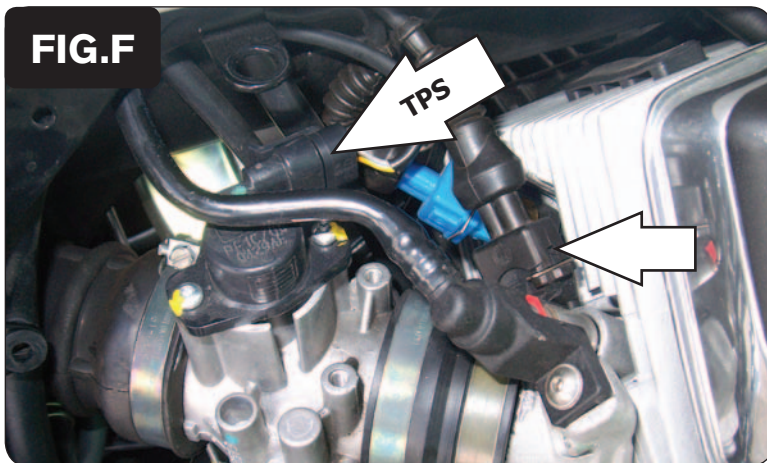


- 8 Unplug the stock wiring harness from the injector (Fig. F).

FIG.G



- 9 Plug the YELLOW colored wires from the PCV in-line of the stock wiring harness and injector.

FIG.H

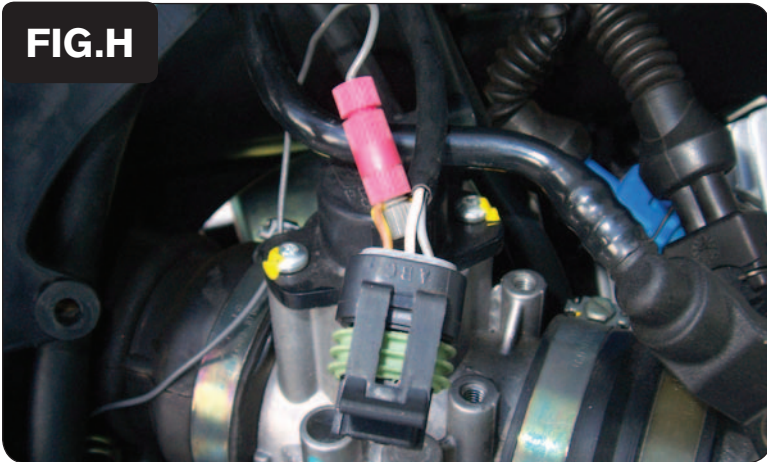

- 10 Locate the stock Throttle Position Sensor (shown in Figure F). Unplug the TPS harness to access the wires.
- 11 Using the supplied posi-tap attach the GREY wire of the PCV to the BRN/YEL wire of the TPS wiring harness (Fig. H).

This is position "C" on the stock connector.

- 12 Plug the TPS harness back onto the throttle body




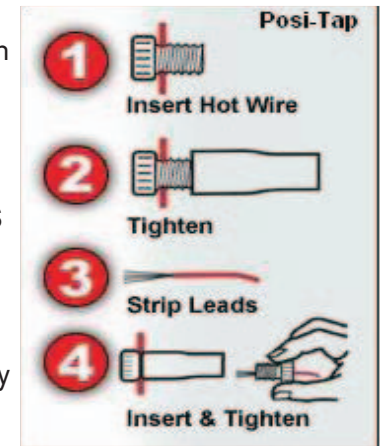


FIG.J

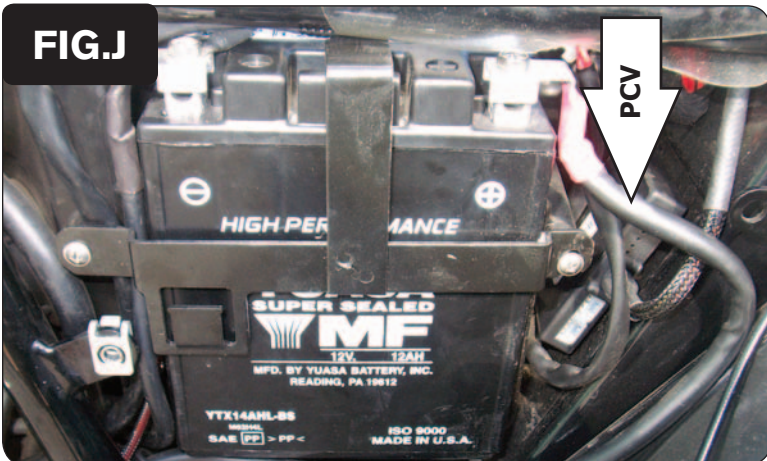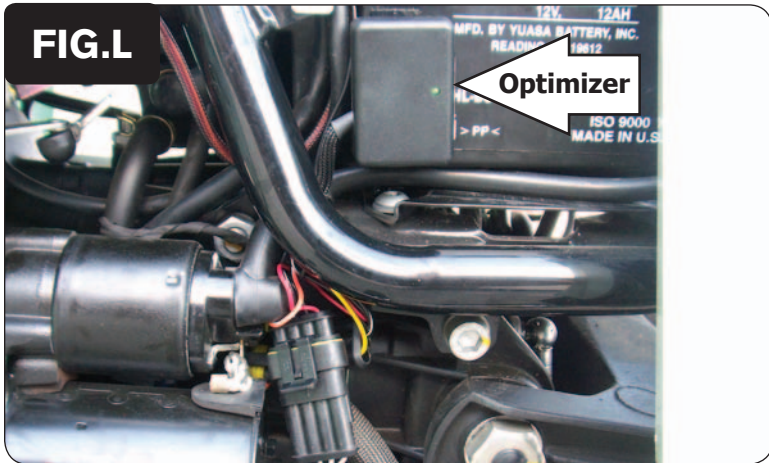

- 13 Reinstall the battery. When connecting the ground wire attach the BLACK wire of the PCV to the negative side of the battery.
- 14 Using the supplied velcro attach the PCV to the inner rear fender behind the battery. Make sure to clean the surface with the alcohol swab before attaching.

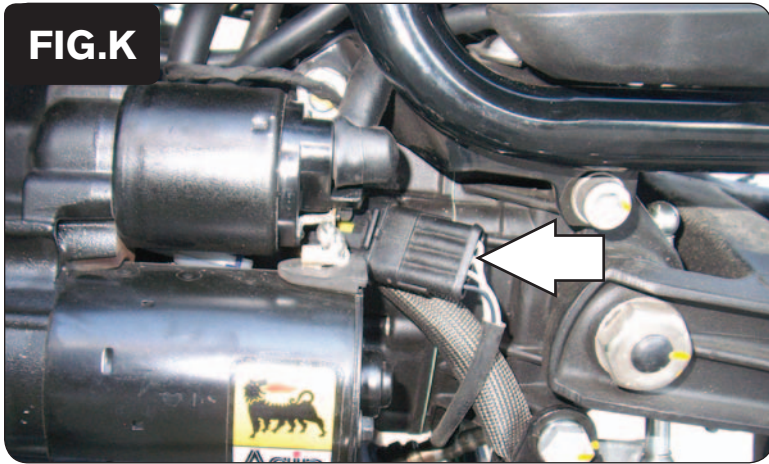

| | 2 | 5 | 10 | 15 | 20 | 40 | 60 | 80 | 100 |
|------|---|---|----|----|----|----|----|----|-----|
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 1500 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 1750 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 2000 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 2250 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 2500 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 2750 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 3000 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 3250 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 3500 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 3750 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 4000 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 4250 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 4500 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 4750 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 5000 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 5250 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 5500 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 5750 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 6000 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 6250 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 6500 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 6750 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 7000 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

15 Unplug the stock O2 sensor connection on the left side of the engine.
This is a BLACK, flat, 4 pin connector near the starter.

- 16 Route the connectors for the O2 Optimizer behind the frame tube and plug in-line of the stock wiring harness and O2 sensor (Fig. L).
- 17 Attach the O2 Optimizer to the side of the battery using the supplied velcro. Make sure to clean the surface with the alcohol swab before attaching.
- 18 Reinstall side covers and seat.

The O2 optimizer for this model controls the stock closed loop area. This area is represented by the highlighted cells shown in Figure M. The optimizer is designed to achieve a target AFR of 13.6:1. To use this optimizer you must retain your stock O2 sensor.

It is not necessary to alter the values in the highlighted area. If using the Auto tune system do NOT input values in this area in your Target AFR table.

The Optimizer will blink while the sensor is being heated up. The unit is not functioning until the light is lit up solid.