

**KEISER®**

**STRENGTH | CARDIO | FUNCTIONAL**



**AIR300**

**BELT SQUAT**

**MODELS: 001550BP, 001550XP**

**OPERATION MANUAL**

## **CONTENTS**

### **03 – GENERAL INFORMATION**

03\_INTRODUCTION

03\_REGISTER YOUR PURCHASE

03\_SERIAL NUMBER INFORMATION

### **04 – IMPORTANT SAFETY INFORMATION**

05\_CONVENTIONS USED

05\_SAFETY AND NOTIFICATION LABELS

06\_CONTRAINDICATIONS

### **07 – TECHNICAL SPECIFICATIONS**

07\_EQUIPMENT SPECIFICATIONS

07\_TECHNICAL DATA

### **08 – INSTALLATION AND PLACEMENT**

08\_TRAINING SPACE

### **09 – OPERATION**

09\_EQUIPMENT OVERVIEW

10\_POWER DISPLAY

12\_PROPER OPERATION CHECK

13\_HOW TO USE THE AIR300 BELT SQUAT

15\_POWER TEST

### **16 – MAINTENANCE**

16\_PREVENTATIVE MAINTENANCE SCHEDULE

17\_BATTERY REPLACEMENT

18\_ANNUAL MAINTENANCE

### **19 – REGULATORY AND COMPLIANCE NOTICES**

19\_SAFETY NOTIFICATIONS

20\_ELECTROMAGNETIC COMPATIBILITY (EMC)

20\_US FCC COMPLIANCE STATEMENT

20\_DISPOSAL

### **21 – WARRANTY STATEMENT**

Keiser, the Keiser logo, and other trademarks associated with Keiser products referred to in this publication are trademarks of Keiser Corporation.  
© 2023 Keiser Corporation. All rights reserved.

Distribution and copying of this document, use and communication of its contents is not permitted without written authorization from Keiser Corporation. The content of this document is furnished for informational use only, may be subject to change without notice, and should not be construed as a commitment by Keiser Corporation. Every effort has been made to ensure that the information in this manual is accurate. Keiser Corporation is not responsible for printing or clerical errors.

## GENERAL INFORMATION

### INTRODUCTION

Congratulations on the purchase of your new Keiser Air300 Belt Squat and welcome to the Keiser family. Keiser's Dynamic Variable Resistance safely builds strength at any speed, which is key to building maximum power.

For your safety, and to ensure the best experience and maximum gains, it is critical that you read and understand this manual before you begin using the Air300 Belt Squat. If you have any questions regarding the operation of the Air300 Belt Squat after reading this manual, our Keiser Customer Support team will be happy to assist by telephone at 1 559 256 8000 and via live chat at [keiser.com/support](https://www.keiser.com/support) (Monday–Friday, 7 am to 5:30 pm Pacific Standard Time), or by email at [service@keiser.com](mailto:service@keiser.com).

Yours in Health,  
Keiser Corporation

### REGISTER YOUR PURCHASE

Register your Air300 Belt Squat to stay informed of safety notifications and for faster, more accurate warranty service.

Scan the QR Code to the right to access the interactive online warranty registration form or visit:

<https://www.keiser.com/forms/warrantyregistration>




SCAN

### SERIAL NUMBER INFORMATION

Please take a moment at this time to record the serial number in the space provided below.

Serial No.: \_\_\_\_\_

| Serial Number Information |                                       |
|---------------------------|---------------------------------------|
| A                         | Manufacturer name, logo, and address  |
| B                         | Country of manufacture                |
| C                         | Patent information notification       |
| D                         | WEEE Directive mark                   |
| E                         | CE mark                               |
| F                         | TÜV SÜD mark                          |
| G                         | Unique Device Identification (UDI)    |
| H                         | ISO Accuracy and Usage Classes        |
| I                         | Maximum User Weight Limit             |
| J                         | Directive and standards compliance    |
| K                         | European Authorized Representative    |
| L                         | UK Responsible Person                 |
| M                         | Serial number and date of manufacture |
| N                         | Model number and product description  |
| O                         | UK Conformity Assessed mark           |

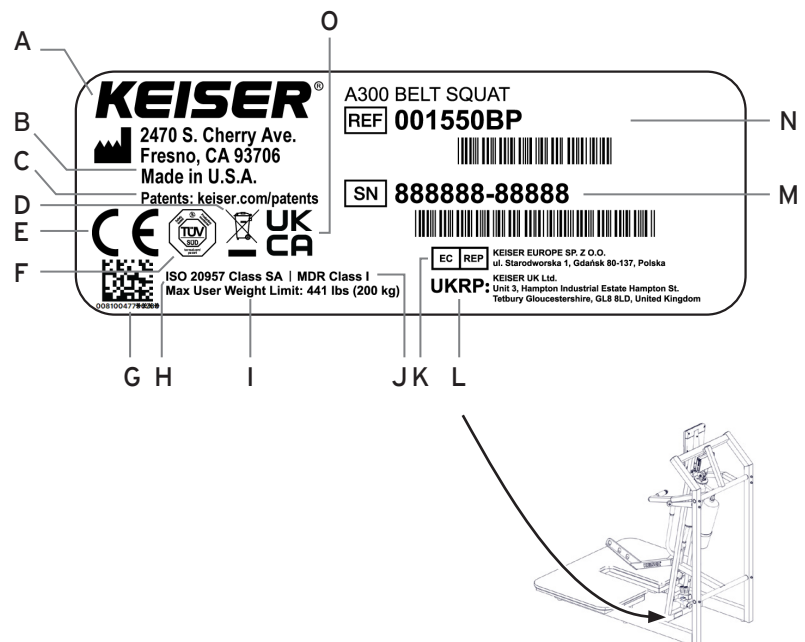

Marking plate illustration is for reference only. Refer to the marking plate attached to the equipment for specific product information.

Figure 1. Serial Number Location and Information

**IMPORTANT SAFETY INFORMATION**

It is the sole responsibility of the purchaser of Keiser Corporation equipment to instruct all individuals, whether they are the end-user or supervising personnel, on proper usage of the equipment. Keiser Corporation recommends that all users of its equipment be informed of the following information before use.

1.  Read these instructions.
2. Heed all warnings.
3. Follow these instructions.
4. Intended use of the Air300 Belt Squat is for physical activity or Physiotherapy (sometimes referred to as physical therapy).
5. The Air300 Belt Squat is intended for individuals aiming to maintain and restore maximum movement and functional ability throughout their lifespan, including circumstances where movement and function are limited by aging, injury, pain, disease, disorders, conditions, or environmental factors, especially in case of using the Air300 Belt Squat in physical therapy.
6. Consult your physician before beginning any exercise program.
7. The Air300 Belt Squat is intended for use in training areas of organizations where access and control are specifically regulated by a person responsible for determining the suitability of use and maintenance.
8. Maximum user weight limit: 441 lbs (200 kg).
9. Use the Air300 Belt Squat indoor in a climate-controlled environment only. Keep away from areas of extreme humidity.
10. The use of this Air300 Belt Squat for any purpose not explicitly specified by the manufacturer in this manual is prohibited.
11. Wear proper exercise clothing and shoes for exercise. Avoid wearing loose clothing that might catch on any moving parts. Tie long hair back.
12. The Air300 Belt Squat is not a toy. Children shall not play with the Air300 Belt Squat. Children under 14 years old should not use the Air300 Belt Squat. Keep children and pets clear from the Air300 Belt Squat at all times, especially while in use. Cleaning and user maintenance shall not be performed by children.
13. The Air300 Belt Squat can be used by children age 14 years and above. Persons with mental disabilities, reduced physical, mental, or sensory capabilities, or lack of experience or knowledge should not use the Air300 Belt Squat without constant supervision by a spotter/supervisor.
14. Proper warm-up required to help prevent injury. This Air300 Belt Squat should only be used with proper instructions. Always maintain good form and control during exercise. If you feel pain or are unable to maintain good form, stop immediately. Failure to follow these instructions could result in injury.
15. Always maintain control of the Exercise Arm during exercise. The sudden release of the Exercise Arm during exercise will cause the Exercise Arm to recoil uncontrollably toward the user and could result in serious injury or property damage. Bring the Exercise Arm to the start position in a controlled manner to safely end exercise. If at any time you are not able to control the amount of resistance during exercise, push the left ("–") Thumb Button to reduce the resistance.
16. Never perform Power Test without a proper warm-up. This high resistance/high-speed test should only be performed with proper instructions (see page 15 "Power Test" for complete instruction). Always maintain good form and control during the test. If you feel pain or are unable to maintain good form, stop immediately. Failure to follow these instructions could result in injury.
17. Never make adjustments to the machine during exercise as this may cause muscle strain. Always return the Exercise Arm to the start position before making any adjustments to help prevent injury.
18. The highest level of safety can only be ensured if the equipment is regularly inspected for damage and wear. Always check the equipment before use for proper function and any damaged, worn, or broken parts. Immediately replace damaged, worn, or broken parts. Do not use the Air300 Belt Squat until all repairs have been completed and tested by a Keiser-certified technician.
19. Use only replacement parts supplied/recommended by Keiser Corporation. Attempting to repair or replace any damaged, worn, or broken parts on your own is not recommended. A Keiser-certified technician should be consulted.
20. The use of any exercise equipment, including, without limitation, Keiser's strength training equipment in which resistance can be changed at any time during the repetition, without proper instruction and supervision violates the terms of the agreement for the purchase of such products. The ability to add resistance anytime during a repetition, including, without limitation, the ability to do a heavy negative may be dangerous, especially for anyone that does not recognize or respect the potential danger.
21. Users, agents, and/or anyone directing the use of the Air300 Belt Squat shall determine the suitability of the Air300 Belt Squat for its intended use, and said parties are specifically put on notice that they shall assume all risk and liability in connection herewith.
22. If you do not understand these instructions or have doubts about the safety of the installation, assembly, or use of this product, contact Keiser Customer Support:

 1 559 256 8000

 service@keiser.com

 keiser.com/support

Telephone and Live Chat  
Monday–Friday 7 am to 5:30 pm PST



## IMPORTANT SAFETY INFORMATION

### CONVENTIONS USED

This Operation Manual contains the following marks:

- ⚠ WARNING:** Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
- ⚠ CAUTION:** Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
- ❗ IMPORTANT:** Indicates information considered critical, but not hazard-related.

### SAFETY AND NOTIFICATION LABELS

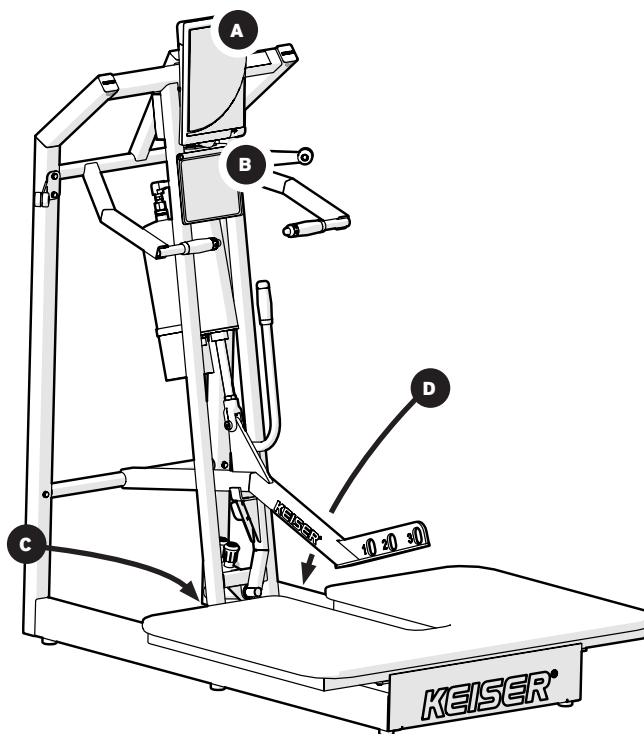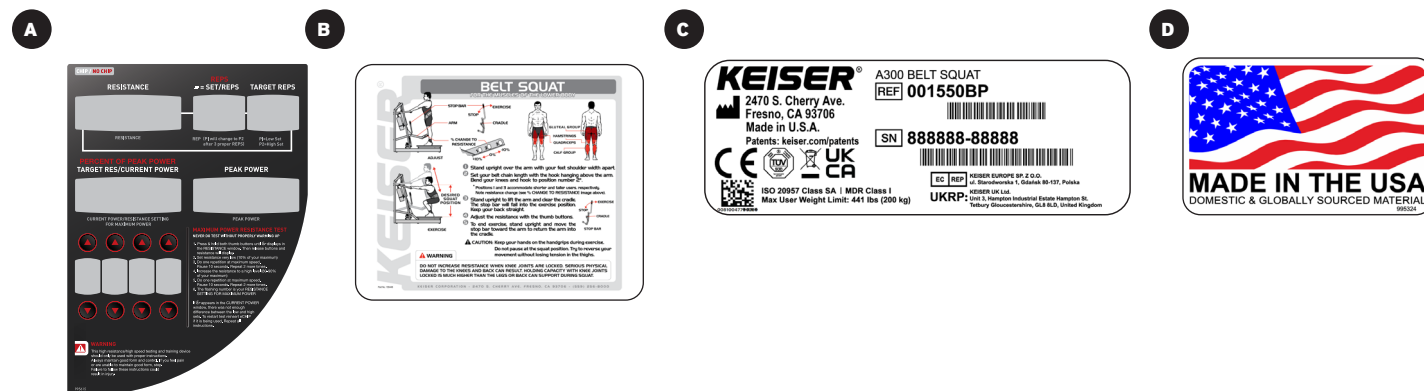

Maintain and do not remove safety or notification labels for any reason. They contain important information. If unreadable or missing, contact Keiser Corporation for a replacement (see back cover for contact information).

**IMPORTANT SAFETY INFORMATION****CONTRAINDICATIONS**

There are a number of contraindications in the context of the relevant fields of the Air300 Belt Squat use. In rehabilitation, only the medical staff can determine the form and extent of therapy. Medications can have an influence on the rehabilitation (e.g. neuroleptics, benzodiazepines, barbiturates, anti-epileptics, etc.). In the following cases, Air300 Belt Squat training may only be carried out after consultation with a doctor:

- Pregnancy
- Acute thrombosis
- Fresh wounds (e.g. after surgery)
- Artificial joints or prosthetics
- Bone fractures
- Spinal disc damage
- Traumatic injury to the spine
- Diabetes
- Epilepsy
- Inflammation
- Acute migraine headache
- Chronic illnesses
- Cancer
- Acute myocardial infarction or unstable angina pectoris (determined by a stress test)
- Cardiovascular diseases e.g. severe high blood pressure at rest, carditis, congestive heart failure, severe valvular heart disease, dangerous heart arrhythmias at rest, or aortic aneurysm

If the patient is experiencing acute illness, febrile condition (i.e. fever), or newly occurring pain, this represents an absolute contraindication for physical stress. In such situations, it is necessary to postpone training until the patient's health has improved sufficiently.

In some situations (especially in patients with coronary heart disease or lung disease) overtraining can lead to an acute intensification of the patient's symptoms. In such situations, an exercise ECG is essential and training is only possible under medical supervision.

The use of the automated operation (pulse automatic, preset programs, external control via computer or other device) is prohibited, unless the strain was authorized by a physician in accordance with the patient's capacity/health.

For applications in endurance training, diagnostics and performance testing of patients, performance diagnostics, and stress tests, the same contraindications apply (among others) as with all physical stress. If there is doubt, it is important that a physician be consulted before using the Air300 Belt Squat.

**TECHNICAL SPECIFICATIONS**

| Model No. | Device Label (Short Description) | Device Full Description                                                 |
|-----------|----------------------------------|-------------------------------------------------------------------------|
| 001550BP  | A300 BELT SQUAT-BLK-PWR          | Air 300 Belt Squat, Black (color), Power (additional display feature)   |
| 001550XP  | A300 BELT SQUAT-SPC-PWR          | Air 300 Belt Squat, Special (color), Power (additional display feature) |

**EQUIPMENT SPECIFICATIONS**

See Figure 2 for Air300 Belt Squat dimensions and weight.

- Resistance Range 0 -800 lbs (0 - 363 kg)  
change resistance in 1 lb/kg increments
- Multiple anchor points for Belt or Deadlift Bar.
- Maximum user weight limit:  
441 lbs (200 kg)

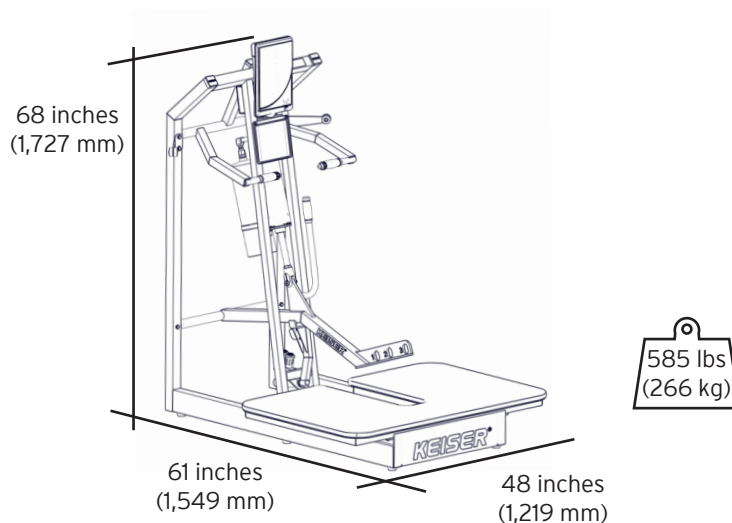


Figure 2. Air300 Belt Squat Equipment Specifications

**TECHNICAL DATA****AIR STORAGE TANK**

The equipment contains an air storage tank (air accumulator) with the following operating parameters:

|                              |                              |
|------------------------------|------------------------------|
| Maximum working pressure:    | 125 psi (8.6 bar)            |
| Maximum working temperature: | 104°F (40°C)                 |
| Minimum working temperature: | 32°F (0°C)                   |
| Maximum vessel capacity:     | 300 in <sup>3</sup> (4.92 L) |

**POWER**

- 1.5V D Alkaline Batteries (quantity 2, Keiser PN 966500)
- 3V CR2032 Lithium Coin Cell Battery (quantity 1)  
*Permanently attached, not serviceable. Contact Keiser Customer Support for service.*



## INSTALLATION AND PLACEMENT

No assembly required. Place the Air300 Belt Squat on a flat, level surface. Make sure the base of the frame makes full contact with the floor. If gaps are present, relocate the equipment to an even surface.

### CONNECT THE EQUIPMENT TO THE KEISER AIR SYSTEM

**⚠ WARNING: Never connect equipment to an air source capable of exceeding 120 psi / 8.27 bar.** Over pressurizing Keiser pneumatic equipment may cause tubing to burst, breakage of equipment, abnormal operation, or serious injury. Use only clean, dry, regulated compressed air at the rated pressure range of 100-120 psi / 6.89-8.27 bar.

1. Plug the Compressor into the appropriate power source to power the Compressor ON (allow the Compressor to build up to a minimum of 100 psi / 6.89 bar; Keiser Compressor and Keiser Air System not included, sold separately).
2. Connect the 1/4-inch Quick Disconnect (QD) from the equipment into the Keiser Air Supply (see Figure 3).

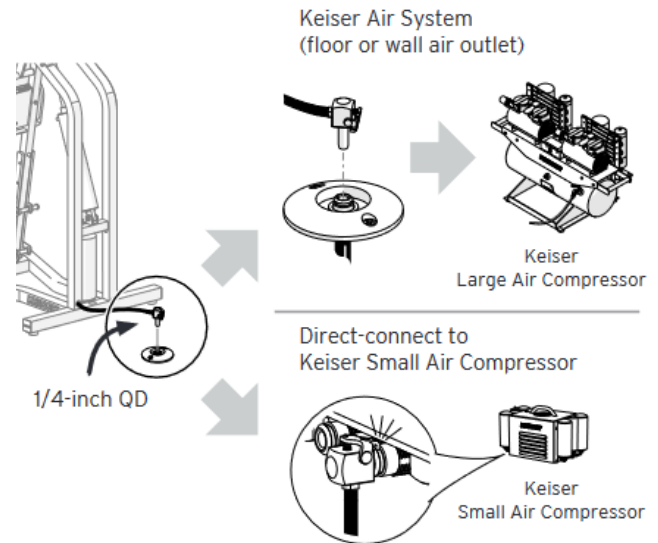


Figure 3. How to Connect the Equipment to the Keiser Air Supply

## TRAINING SPACE

The equipment footprint is 61 inches x 48 inches (1,549 mm x 1,219 mm). The minimum recommended free space around the platform is 24 inches (610 mm) for the front and sides.

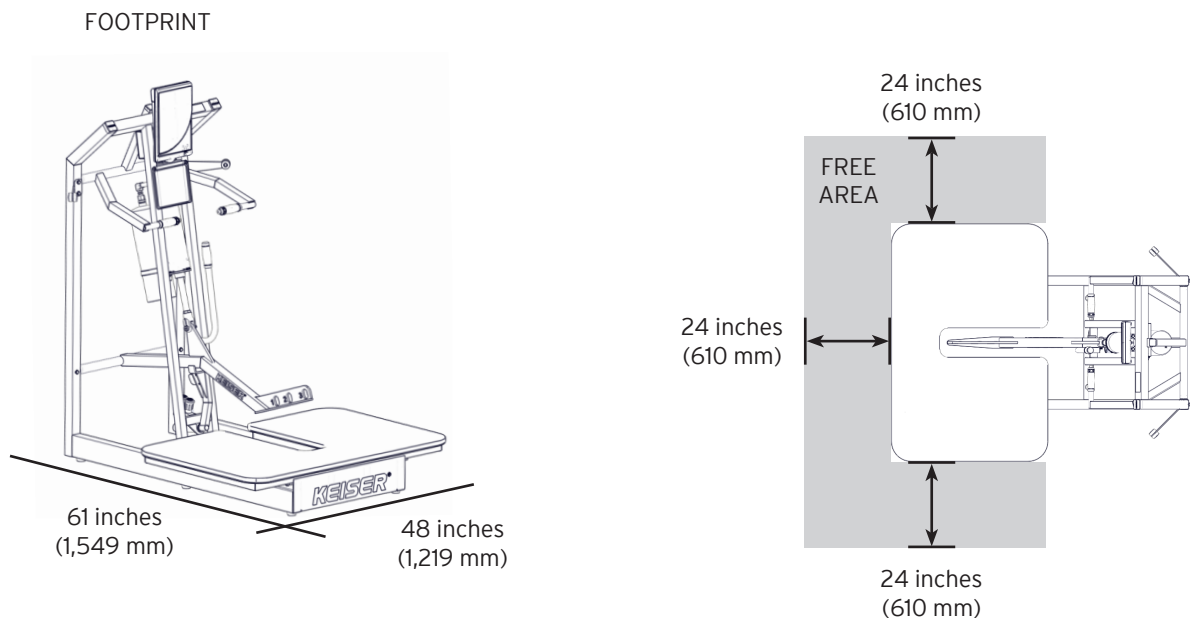


Figure 4. Training Space for the Air300 Belt Squat

Note: Additional Free Space may be required to accommodate mobility device access.



## OPERATION

## EQUIPMENT OVERVIEW



Figure 5. Air300 Belt Squat

|   |                                 |    |                                       |
|---|---------------------------------|----|---------------------------------------|
| 1 | Power Display                   | 7  | Exercise Arm Cradle                   |
| 2 | Cylinder                        | 8  | Stop Bar                              |
| 3 | Air Tank                        | 9  | Increase/Decrease (+/-) Thumb Buttons |
| 4 | Quick Disconnect (QD) with Tube | 10 | Belt Hanger                           |
| 5 | Platform                        | 11 | Processor Box (rear)                  |
| 6 | Exercise Arm                    | 12 | Instruction Placard (not shown)       |

## POWER DISPLAY

## DISPLAY FEATURES

Resistance, Reps, and Power workout data output on the Power Display are shown below.

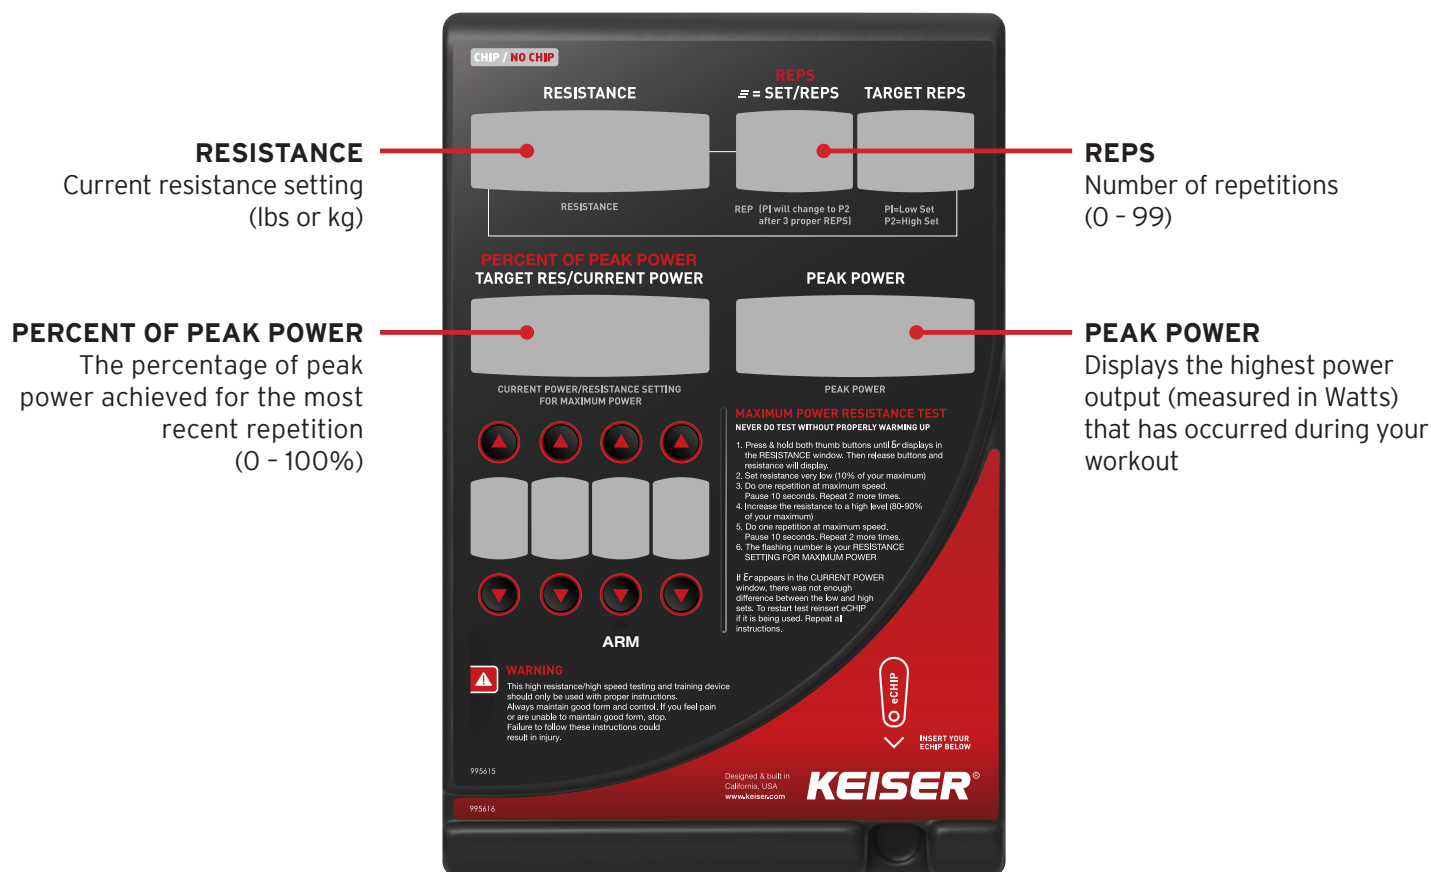


Figure 6. Power Display Overview

## OPERATION

## How to Adjust the Resistance

- Increase the resistance using the Positive “+” Thumb Button.
- Decrease the resistance using the Negative “-” Thumb Button.

## How to Reset/Clear Workout Data (Reps, Percent of Peak Power, and Peak Power)

- Press and hold the Thumb Buttons simultaneously, release when “CLER” appears in the RESISTANCE window.
- eChip Users: “CLER” also deletes the current workout data from the eChip.

## System Messages (appear in the RESISTANCE window)

- “OFF” = low-power consumption sleep mode.  
Sleep mode occurs after 60 seconds of machine inactivity to help prolong battery life. To wake, press either Thumb Button and resume operation.
- “Lo-bA” (Low Battery) = weak batteries, replace soon.  
If the batteries are dead (depleted), the Power Display remains blank. See page 17 “Battery Replacement” section for procedure.

## POWER DISPLAY

## POWER DISPLAY FEATURES WITH eCHIP

The Keiser eChip\* is an optional digital workout log that records and recalls your workout data. Additional workout data made available when using the Power Display with an eChip are shown below.

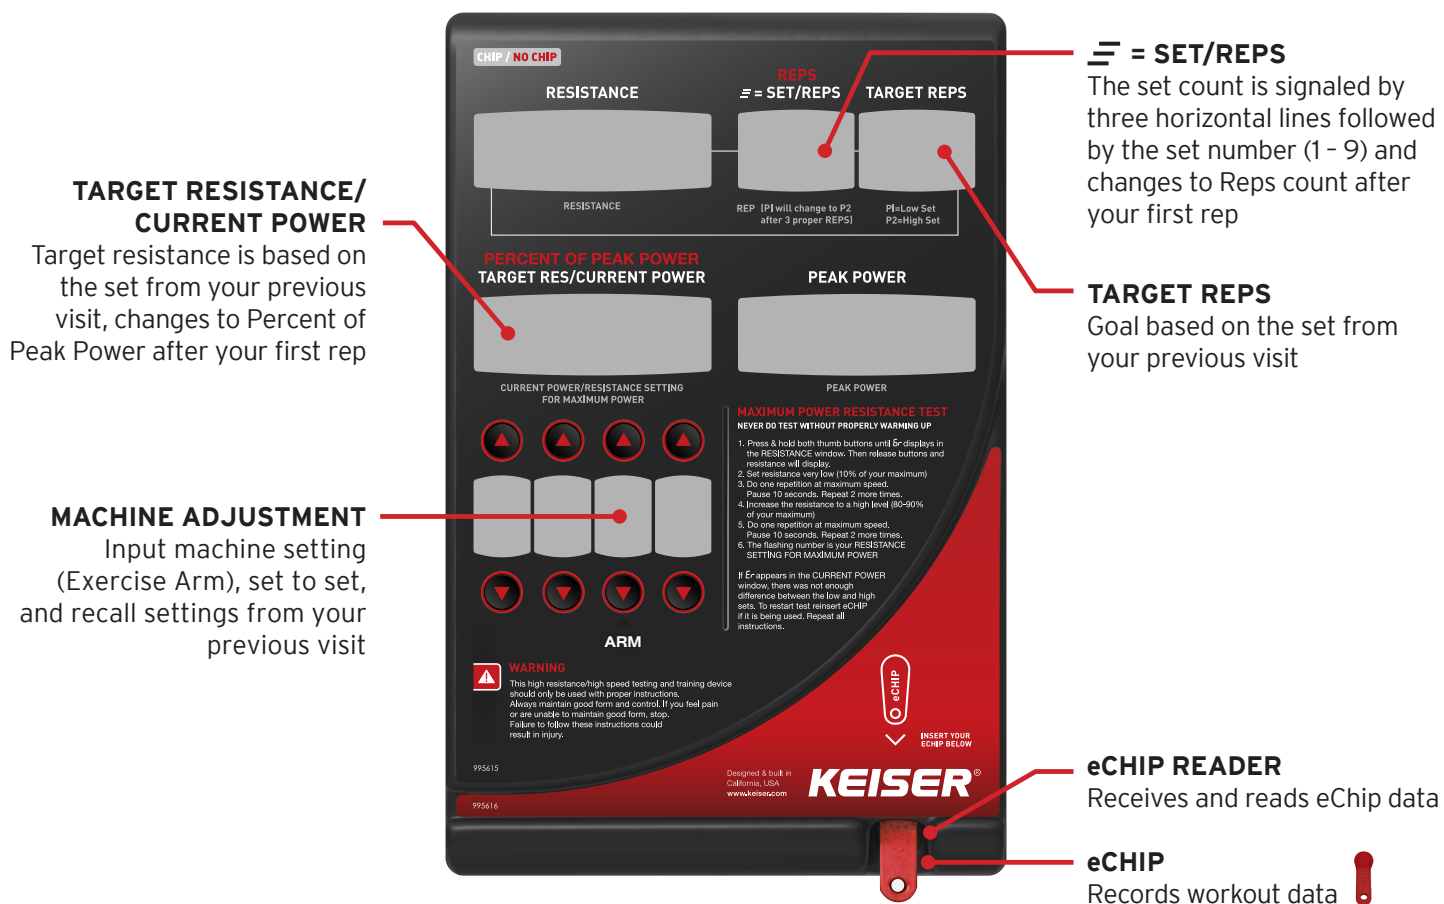


Figure 7. Power Display with eChip Overview

## OPERATION

## How to Record Workout Data on the eChip

1. Insert the eChip into the eChip Reader.
2. Prepare the machine for your workout:
  - Set the Resistance using the "+/-" Thumb Buttons.
  - Input Machine Adjustment setting using the buttons on the display.
3. Start your exercise:
  - Minimum 3 reps required to record a set.
  - Remove and re-insert the eChip to change Set number.

## System Notes

- eChip Storage: Up to 24 machine models, up to 240 separate workout sets. Set count range is 1-9, rep count range is 0-99 per machine per visit. A visit is defined as multiple workouts that occur within a four-hour period.
- No workout data ("----") indicates the eChip was not previously utilized on the machine.
- Machine Adjustment: No Machine Adjustment data indicates no data was input to record. Settings can only be changed immediately after the eChip is inserted and before your third rep. After three reps are performed, the setting cannot be changed until the eChip is removed and reinserted. Settings are not saved in Power Tests (Keiser 6-Rep test) mode.

\* eChip not included. Contact Keiser Customer Support for order information.

**PROPER OPERATION CHECK**

Check equipment condition and function before every workout:

- A. **Thumb Buttons and Display** – press Thumb Buttons to check for proper “+ / -” operation and the Display powers on\*.
- B. **Exercise Arm** – move freely; no loose parts in the linkage system.
- C. **Platform** – Rubber covering has no excessive wear and are free of rips or tears.
- D. **Stop Arm** – Stop arm functions and engages the Exercise Arm properly.
- E. **Stability** – equipment is level to a solid, flat surface.
- F. **Air Leaks** – no air leaks audible in the system.



Figure 8. Proper Operation Check Illustration

Immediately replace damaged, worn, or broken parts. Do not use the Air300 Belt Squat until all repairs have been completed and tested by a Keiser-certified technician.

\* “Lo-bA” = Batteries are low, replace immediately. If batteries are dead (depleted), the Power Display remains blank (see Battery Replacement procedure, page 17).

## HOW TO USE THE AIR300 BELT SQUAT

**⚠ CAUTION: Keep hands on handgrips during exercise.**

- 1 With the Belt secured around your waist, hook the Belt onto the desired position on the Exercise Arm.
- 2 Set your feet shoulder width apart, over the Exercise Belt.
- 3 Hold the Handles for support, lift with your legs (Stop Bar opens to the Exercise position).
- 4 Adjust the resistance with the Thumb Buttons (located on the Handles).
- 5 To end exercise, stand upright and move the Stop Bar toward the Exercise Arm to return it into the Cradle.

## ADJUST

## EXERCISE



Figure 9. How to Use the Air300 Belt Squat

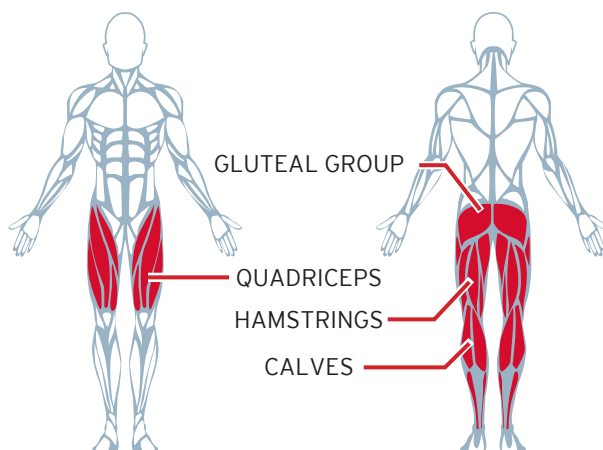


Figure 10. Air300 Belt Squat Target Muscles

## HOW TO USE THE AIR300 BELT SQUAT (CONTINUED)

**⚠ CAUTION**

- Consult your physician before beginning any exercise program.
- This equipment should only be used with proper instructions.
- Proper warm-up required to help prevent serious injury.
- Always maintain good form and control during exercise.
- If you feel pain, faintness, or are unable to maintain good form, stop immediately.
- Use caution when increasing/decreasing resistance during exercise.
- Never make adjustments to the machine during exercise. Failure to do so could result in serious injury.

**CONCENTRIC PHASE (UPWARD MOVEMENT)**

- Push through the ground to begin the movement.
- Extend the legs fully without locking the knees (keep a slight bend in the knees).
- Keep your hands on the Handles for stability.
- Maintain stability and keep eyes forward during the movement.

**ECCENTRIC PHASE (DOWNWARD MOVEMENT)**

- Squat down to desired position while maintaining stable position in a smooth, controlled manner.
- Slower speed during downward movement is recommended.
- Maintain control of the load throughout the exercise.

**BREATHING**

- Exhale during the concentric phase (upward movement).
- Inhale during the eccentric phase (downward movement).

**UPON COMPLETE OF EXERCISE**

1. Stand; decrease the resistance if needed for control.
2. Return the Stop Bar back to the original position.
3. Allow for the Exercise Arm to rest in the Cradle.
4. Unhook your Belt from the Exercise Arm to exit the machine.

**TRAINING TIPS**

- Ensure your feet are on the floor, throughout the exercise.
- Maintain the natural curvature of your spine; engage your core.
- Avoid rocking your body to create momentum when moving heavy loads.

## POWER TEST

**⚠ CAUTION:** Test should only be performed with proper instruction. Never perform Power Test without proper warm-up.

The purpose of the Power Test (KEISER 6-Rep Test) is to determine your RESISTANCE SETTING FOR MAXIMUM POWER. Use your RESISTANCE SETTING FOR MAXIMUM POWER as a baseline measurement to program safe and effective training sessions. The test consists of two sets:



Three repetitions  
Low resistance, high speed  
10% of your maximum



Three repetitions  
High resistance, high speed  
80-90% of your maximum


Speed is essential in power output. Perform all repetitions at maximum speed at the given resistance.

## POWER TEST PROCEDURE

**Before you begin:** Warm-up and estimate your maximum resistance setting. During testing, you can adjust the resistance in either Set before rep "3" if needed (REPS resets to "0"). Note: Test may be performed with or without the eChip inserted.

**1 START TEST**


Press and hold both Thumb Buttons, release when "6 r" appears in the RESISTANCE window.

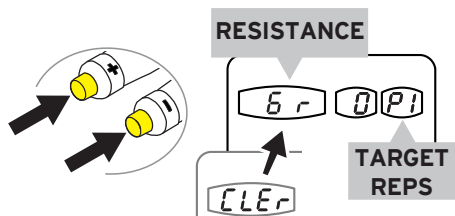


"P1" in the TARGET REPS window indicates Power Test, Set 1 initiated.

**2 SET RESISTANCE, LOW LEVEL**

Set the resistance to a low level (10% of your maximum).

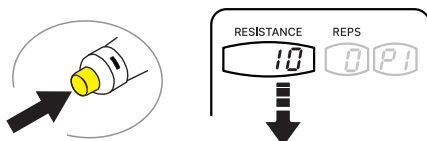**3 POWER TEST, SET 1 ("P1")**

Perform one repetition at maximum speed. Pause briefly, then perform two repetitions at maximum speed.

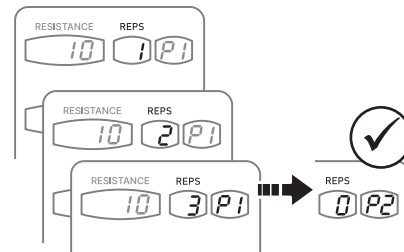


Note: Test advances to "P2" (Power Test, Set 2).

**4 SET RESISTANCE, HIGH LEVEL**


Increase the resistance to a high level (80-90% of your maximum).

**5 POWER TEST, SET 2 ("P2")**

Perform one repetition at maximum speed. Pause briefly, then perform two repetitions at maximum speed.

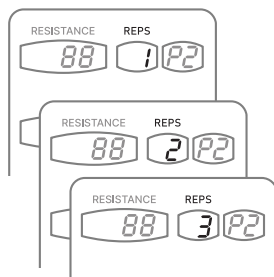**6 TEST RESULT**

After your last rep, your **RESISTANCE SETTING FOR MAXIMUM POWER** value is displayed.

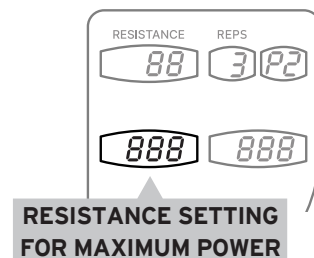

**TEST COMPLETE.** Exit Power Test to resume normal operation.

**How to exit the Power Test:** Press and hold the Thumb Buttons simultaneously, release when "CLER" appears in the RESISTANCE window (eChip users: Remove the eChip).

**Troubleshoot:** "Er" 1 - 4 indicates not enough difference in resistance between the low and high sets. Try again with a greater difference in resistance between the low and high sets. To restart the Power Test at any time, begin at Step 1 (eChip users: Remove and reinsert the eChip before attempting to restart the test).



## MAINTENANCE



**CAUTION: SERVICE AND REPAIR SHALL ONLY BE PERFORMED BY KEISER-CERTIFIED TECHNICIANS.** Failure to follow these instructions can result in serious injury.

## PREVENTATIVE MAINTENANCE SCHEDULE



**CAUTION: THE HIGHEST LEVEL OF EQUIPMENT SAFETY CAN ONLY BE ENSURED IF THE EQUIPMENT IS REGULARLY INSPECTED FOR DAMAGE AND WEAR.** Immediately replace damaged, worn, or broken parts. Do not use the Air300 Belt Squat until all repairs have been completed and tested by a Keiser-certified technician.

|                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Daily                                   | <ul style="list-style-type: none"> <li>• Check for safe and proper function of the equipment (perform "Proper Operation Check," page 12).</li> <li>• Clean the chrome and paint where applicable.</li> <li>• Wipe down the equipment with a clean cloth. If necessary, use water and mild soap (neutral, non-caustic). Target areas that come in contact with sweat. Wipe dry the equipment.</li> </ul>                                                                                                                                                                                                                             |
| Weekly                                  | <ul style="list-style-type: none"> <li>• Check parts most susceptible to wear are not damaged or broken: <ul style="list-style-type: none"> <li>- Platform Rubber, Linkage System, Thumb Buttons, and Hand Grips.</li> </ul> </li> <li>• Wax chrome and paint where applicable.</li> <li>• Clean Hand Grips.</li> <li>• Inspect Air Line Filter.</li> </ul>                                                                                                                                                                                                                                                                         |
| Monthly                                 | <ul style="list-style-type: none"> <li>• Check externally visible screws are fastened properly with no looseness.</li> <li>• Clean and lubricate the Cylinder Rod.</li> <li>• Inspect Air Line for kinks, tears, or breaks.</li> <li>• Inspect Frame for any weakening in weld areas, and other connected areas.</li> </ul>                                                                                                                                                                                                                                                                                                         |
| Quarterly                               | <ul style="list-style-type: none"> <li>• Lubricate Pivot Bushings.</li> <li>• Inspect Exhaust Mufflers and Air Filter for discoloration; replace if necessary.</li> <li>• Verify compressor(s) cycle on/off between 100-120 psi (6.89-8.27 bar).</li> </ul>                                                                                                                                                                                                                                                                                                                                                                         |
| Annually and other Required Maintenance | <ul style="list-style-type: none"> <li>• For complete instructions, see page 18 "Annual Maintenance."</li> <li>• Battery Replacement. The low battery signal ("Lo-bA") will appear on the Power Display when it is time to replace the batteries. Refer to page 17 "Battery Replacement" for complete instructions.</li> </ul> <p>NOTE: Your Keiser Air Compressor (not included with your Air300 Belt Squat) requires basic annual maintenance. Contact Keiser Customer Support for Air Compressor operator manual or download at <a href="http://keiser.com/support">keiser.com/support</a> (search: Air Compressor manuals).</p> |

**❗ IMPORTANT:** Do not use household or industrial cleaners as they contain caustic chemicals that can destroy the paint finish and cause corrosion. Use only mild soap/detergent (neutral, non-caustic) to clean.

Contact Keiser Customer Support for replacement parts order, or for any matters regarding the safe operation of your Air300 Belt Squat (see back cover for contact information).

## BATTERY REPLACEMENT

Do not operate the equipment during battery replacement procedure. “Lo-bA” = Batteries are low, replace immediately. NOTE: If batteries are dead (depleted), the Power Display remains blank. To replace the batteries, refer to Figure 11 and follow the instructions below (no tools required).

1. Unscrew the Brass Nut on the Processor Box. Pull and remove the cover.
2. Remove the 2 D batteries by carefully pulling out the Battery Sleeve (follow manufacturer's recommendations for handling, maintaining, and disposing of batteries).
3. Observe the correct polarity position (see +/- marking inside the battery compartment), insert the 2 new D batteries into the battery sleeve and install.
  - The Power Display will enter a brief test sequence (you will see a series of numbers flashing).
4. Replace the Processor Box cover and screw the Brass Nut finger tight.

**❗ IMPORTANT:** Once the test sequence ends (numbers stop flashing), press either the increase or decrease Thumb Button and allow the machine to enter sleep mode (“OFF”) to resume normal operation.

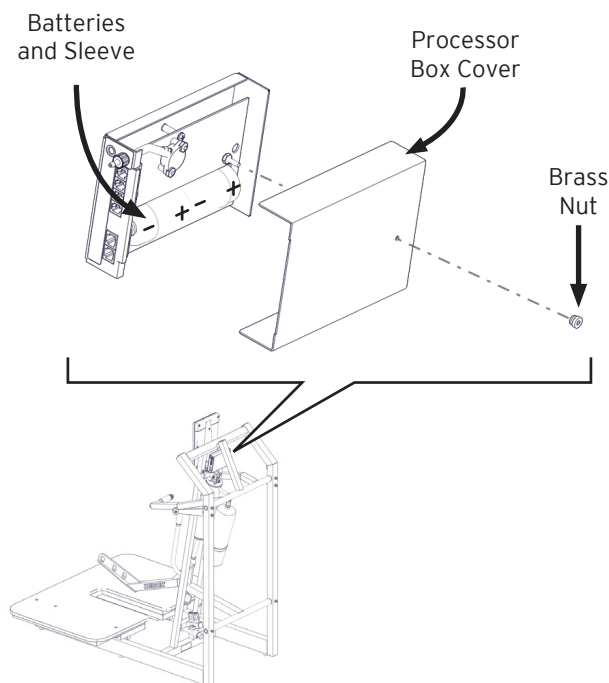


Figure 11. Battery Replacement

### ⚠ CAUTION

Do not dispose of batteries in a fire. The batteries may explode.

Do not open or mutilate batteries. They contain an electrolyte which is toxic and harmful to the skin and eyes.

Replace batteries with the same number and type of batteries as originally installed in the equipment.

Recycle batteries in accordance with local recycling procedures.

**ANNUAL MAINTENANCE**

The following routine maintenance is recommended annually or at the time batteries are replaced:

- 1 Clean:
  - Wipe any accumulated dust around the Frame and the Linkage System, including the Air Tank and Cylinder, using a clean shop cloth.
- 2 Visual inspection of the Linkage System:
  - Move freely and no loose parts; all externally visible nuts and bolts are tightened properly.
- 3 Visual inspection of Air Lines and Communication Wires:
  - Air Lines have no kinks, tears, or breaks; Communication Wires have no exposed wires or visible damage.
- 4 Replace the Mufflers (located on the rear of the Cylinder) if discoloration is present:
  - Tool required: 11/16 inch Wrench or Adjustable Wrench.
- 5 Replace the Air Filter located under the Cradle if element is dirty (element turns a bright pink or red color):
  - Tools required: Small Needle Nose Pliers, Cutter Tool (to cut off flared end of tubes).
- 6 Lubricate Cylinder Rod:
  - Wipe the Cylinder Rod clean and coat lightly with clean, SAE 30 motor oil, or with a silicon-based spray.
- 7 Visual inspection of moving components:
  - Exercise Arm and Stop Bar/Cradle function and engage properly. Check Exercise Arm is fully functional; all externally visible nuts and bolts are tightened properly.

**⚠ WARNING: HIGH-PRESSURE AIR. DISCONNECT THE EQUIPMENT FROM THE AIR SUPPLY AND RELEASE ALL THE AIR IN THE EQUIPMENT ("–" THUMB BUTTON) BEFORE PERFORMING ROUTINE MAINTENANCE.**

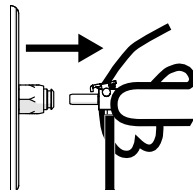


Figure 12. Annual Routine Maintenance Illustration

Contact Keiser Customer Support for replacement part(s) order, or for any matters regarding the safe operation of your Air300 Belt Squat (see back cover for contact information).

## REGULATORY AND COMPLIANCE NOTICES

|           |                                                                                                                                                                                                                                                                                                                                         |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Standards | ISO/EN 20957-1 Accuracy Class A (High accuracy) and Usage Class S (Studio, commercial use); IEC/EN 60601-1 and IEC/EN 60601-1-2.                                                                                                                                                                                                        |
| Marks     |     |

## SAFETY NOTIFICATIONS

**Displayed watts testing parameters:** “Current Power,” “Peak Power,” and “Percent of Peak Power” are not suitable for use in applications where the health and safety of a patient may be dependent on the accuracy of those parameters.

**Clinical Settings Note:** In clinical settings, patients may operate this equipment in accordance with this user manual and the instructions and guidance provided by the healthcare personnel responsible for supervising their treatment and care. However, patients shall not perform preventive maintenance, repairs or replace batteries on equipment installed in clinical facilities.

| TYPE/DEGREE OF PROTECTION                                                                                                                           | CLASSIFICATION/IDENTIFICATION/WARNINGS                                                                                                                                                                                | SYMBOL                                                                                |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| The degree of protection against electric shock                                                                                                     | Device is powered by 2 alkaline D cell batteries. Electrical safety evaluation conducted by TÜV SÜD per IEC/EN 60601-1 requirement.                                                                                   |  |
| The degree of protection against the ingress of liquids                                                                                             | Not protected                                                                                                                                                                                                         | N/A                                                                                   |
| The degree of safety in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide                                     | Not suitable                                                                                                                                                                                                          | N/A                                                                                   |
| The mode of operation                                                                                                                               | Continuous                                                                                                                                                                                                            | N/A                                                                                   |
| Information regarding potential electromagnetic or other interference and advice regarding avoidance                                                | The Air300 Belt Squat use electromagnetic and RF energy only for its internal function. Therefore, its EMC and RF emissions are very low and are not likely to cause any interference in nearby electronic equipment. | N/A                                                                                   |
| EMC Notices, Statement of Compliance                                                                                                                | See Electromagnetic Compatibility (EMC) section, page 20.                                                                                                                                                             | N/A                                                                                   |
| ID of specified optional external power supplies or battery chargers                                                                                | The Air300 Belt Squat does not require an external power supply.                                                                                                                                                      | N/A                                                                                   |
| ID of any risks associated with the disposal of waste products, residues, including disposal of the equipment itself at the end of its useful life. | The Air300 Belt Squat contains electronic circuit assemblies, 2 alkaline D cell batteries, and a sealed lithium coin cell battery that may require compliance with specific local disposal or recycling procedures.   |  |
| The specification of the environmental conditions of transport and storage                                                                          | Use indoor in climate-controlled environment only.<br>Keep away from areas of extreme humidity.<br>NOTICE: Equipment not tested at extreme high/low temperatures.                                                     | N/A                                                                                   |

## ELECTROMAGNETIC COMPATIBILITY (EMC)

### EMC Notices – Statement of Compliance

This product has been determined to be compliant with the applicable standards, regulations, and directives for the countries where the product is marketed.

Compliance documentation, such as Declaration of Compliance for the product, are available upon request by contacting [service@keiser.com](mailto:service@keiser.com). Please include the product, model number identifiers, and serial number and country that compliance information is needed in request.

Korea

이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

“This equipment is for home use and has acquired electromagnetic conformity registration, so it can be used not only in residential areas but also other areas.”

## US FCC COMPLIANCE STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## DISPOSAL



This equipment contains electrical or electronic components, alkaline batteries, and a sealed lithium coin cell battery that must be disposed of properly to comply with the EU Directive on disposal of waste electrical and electronic equipment (EU WEEE Directive 2002/96/EC).

Contact an appropriate waste disposal company upon the equipment's end of service life. Disposal must be in accordance with respective national regulation.

Wear parts: After being replaced, wear parts must be disposed of according to country-specific waste laws.

If you have any questions about equipment disposal, please contact your local dealer or Keiser Customer Support (see back cover for contact information).

## **WARRANTY STATEMENT**

View or print your Air300 Belt Squat warranty online at [keiser.com/support/warranty](http://keiser.com/support/warranty).

If you have any questions about your warranty, please contact Keiser Customer Support at 1 559 256 8000 and via live chat at [keiser.com/support](http://keiser.com/support) (Monday–Friday, 7 am to 5:30 pm Pacific Standard Time), or by email at [service@keiser.com](mailto:service@keiser.com).

Customers outside the United States may obtain warranty information directly through a Keiser international distributor or dealer in the country of installation, or direct from Keiser's international division.

### **European Authorized Representative**



**KEISER EUROPE SP. Z O.O.**

ul. Starodworska 1  
Gdańsk 80-137  
Polska

### **UK Responsible Person (UKRP)**

**KEISER UK Ltd.**

Unit 3, Hampton Industrial Estate  
Hampton St., Tetbury  
Gloucestershire, GL8 8LD  
United Kingdom

This page intentionally left blank.



This page intentionally left blank.

**CUSTOMER SUPPORT**

If you have any questions regarding the operation of the Air300 Belt Squat after reading this manual, contact Keiser Customer Support:

 1 559 256 8000

 [service@keiser.com](mailto:service@keiser.com)

 [keiser.com/support](https://keiser.com/support)

Telephone and Live Chat  
Monday–Friday 7 am to 5:30 pm PST

**Manufactured in the USA**  
**KEISER CORPORATION**

 2470 S. Cherry Ave.  
Fresno, CA 93706