

MANUAL DEL USUARIO **OWNER'S MANUAL**

DAP-10.4



**Before attempting to connect, operate or adjust this product, please read these instructions completely.
Antes de conectar e iniciar el uso de esta unidad, favor de leer las instrucciones detenidamente.**

Rev: 1.0-DAP 03/2015

DAP Series

PROFESSIONAL POWER AMPLIFIER



Congratulations for choosing **Soundbarrier DAP Series** professional power amplifier. You purchased one of the finest stereo amplifiers on the market today. This unit was developed using the expertise of professional sound engineers and working musicians. You will find that your new **Soundbarrier DAP Series** amplifier has superior performance and greater flexibility than any other amplifiers in its price range. Please read this manual carefully to get the most out of your new unit.

FEATURES

Offering top power, superior performance and full professional operating features in a roadworthy compact chassis, the **DAP Series** are perfect for even the most demanding sound reinforcement installation and touring applications.

The operating amplifier instruction in this manual are for all the **DAP Series** professional power amplifiers. The operation and functions of these units are the same, except as noted.

- . Full operating features: detent volume controls; balanced XLR inputs; stereo (four channel), bridged mono operating modes with selector switch; Independent user defeatable clip limiters (compressor) 3 selectable input sensitivities, and speakon outputs.
- . Full safety/re liability features: 2 dual speed fans for cooling; soft start turn on, noise-free on-off; independent DC and thermal overload protection on each channel; short circuit and speaker protection; built-in current limiter.
- . Front panel led indicators: Power,Signal,Clip,Protectio,Bridge.
- . Roadworthy, rugged double rack space (3U) housing Series
- . AC select switch and IEC cord power

Table of contents

FEATURES	1
WARNING	2
FRONT & REAR PANEL CONNECTIONS	3
CONNECTIONS	5
BLOCK DIAGRAM	7
SPECIFICATIONS	8

For your records

Date of Purchase _____

Dealer's Name _____

City _____

State _____ Zip _____

Model # _____

Serial # _____

WARNING



An equilateral triangle enclosing a lightning flash/arrowhead symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure which may be of sufficient magnitude to constitute a risk of electric shock.



An equilateral triangle enclosing an exclamation point is intended to alert the user to the presence of important operating and service instructions in the literature enclosed with this unit.

IMPORTANT SAFETY INSTRUCTIONS

When using this electronic device, basic precautions should always be taken, including the following:

1. Read all instructions before using the product.
2. Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, etc.).
3. This product should be used only with a cart or stand that will keep it level and stable and prevent wobbling.
4. This product, in combination with headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
5. The product should be positioned so that proper ventilation is maintained.
6. The product should be located away from heat sources such as radiators, heat vents, or other devices (including amplifiers) that produce heat.
7. The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product. Replace the fuse only with one of the specified type, size, and correct rating.
8. The power supply cord should: (1) be undamaged, (2) never share an outlet or extension cord with other devices so that the outlet's or extension cord's power rating is exceeded, and (3) never be left plugged into the outlet when not being used for a long period of time.
9. Care should be taken so that objects do not fall into, and liquids are not spilled through, the enclosure's openings.
10. The product should be serviced by qualified service personnel if:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen into, or liquid has been spilled onto the product.
 - C. The product has been exposed to rain.
 - D. The product does not appear to operate normally or exhibits a marked change in performance.
 - E. The product has been dropped, or the enclosure damaged.
11. Do not attempt to service the product beyond what is described in the user maintenance instructions. All other servicing should be referred to qualified service personnel.

INSTALLATION

This manual contains important information on operating your **Soundbarrier** amplifier correctly and safety. Please read it carefully before operating your amplifier. If you have any questions, contact your **Soundbarrier** dealer.

UNPACKING

Carefully open the shipping carton and check for any noticeable damage. Every **Soundbarrier** DAP Series amplifier is completely tested and inspected before leaving the factory and should arrive in perfect condition. If you find any damage, notify the shipping company immediately. Be sure to save the carton and all packing materials for carrier inspection.

CONTENTS

- . Owner's manual
- . DAP Series amplifier (verify that the unit's serial number is same as shown on shipping carton)
- . AC Power cord

RACK MOUNTING

The DAP Series amplifiers are designed for standard 19" rack mounting as well as "stack" mounting without a cabinet. Use 4 screws and washers for mounting to the front rack rails. It is also a good idea to support the amps also in the rear, especially for mobile use where the amps will be subjected to strong vibrations.


AMPLIFIER COOLING

Also pay close attention to the cooling requirements. Never block the air vents in the back side and front of the amplifier.

Do not install the amplifier in a location that is exposed to direct rays of the sun, or near hot appliances or radiators. Excessive heat can adversely affect the cabinet and the internal components. Installation of the amplifier in a damp or dust environment may result in malfunction or accident.

If installed in a rack please be sure to open completely the back door. Periodically remove the internal dust by using compressed air through the external ventilation holes.

FRONT & REAR CONNECTIONS

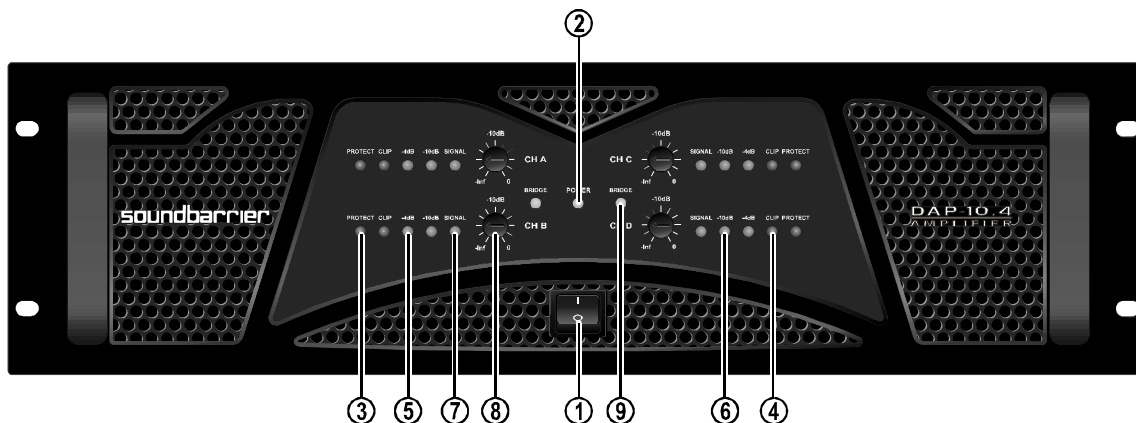

FRONT PANEL

1. POWER SWITCH

To turn the unit ON or OFF, press the upper or lower portion of this button. Before turning on the amplifier, check all connections and turn down the level controls. A momentary muting is normal when turning the amplifier on or off.

(Caution: Always turn on your power amplifier last, after all your other connected equipment, and always turn off your power amplifier before your other connected equipment.)

2. POWER LED INDICATORS

These LEDs illuminate when the power is turned "ON".

3. PROTECT LED INDICATORS

These LEDs illuminate if the power amplifier's output connection is shorted, the load impedance is too low. Or if there is an internal malfunction. When either of these LEDs is lit up, turn OFF the power and check the output's connection to verify that it is correct, then turn ON the power again.

4. CLIP LED INDICATORS

These LEDs illuminate if any section of the power amplifier's output are within 3dB of clipping. Occasional blinking of the LEDs are acceptable, but if they remain on more than intermittently you should turn down either the power amplifier's level controls or

reduce the output level of the preceding component to avoid audible distortion.

5. -4dB LED INDICATORS

6. -10dB LED INDICATORS

7. SIGNAL LED INDICATORS


These LEDs illuminate to confirm the presence of an input signal greater than 100 mV at that channel of the amplifier

8. LEVEL CONTROLS

These control the level of signal coming into each channel. The actual voltage attenuation of the amplifier is shown in dB. Turn these controls counterclockwise if the Limit LEDs illuminate steadily (indicating a too strong input signal).

9. BRIDGE LED INDICATORS

These LEDs illuminate when the MODE is turned "BRIDGE".

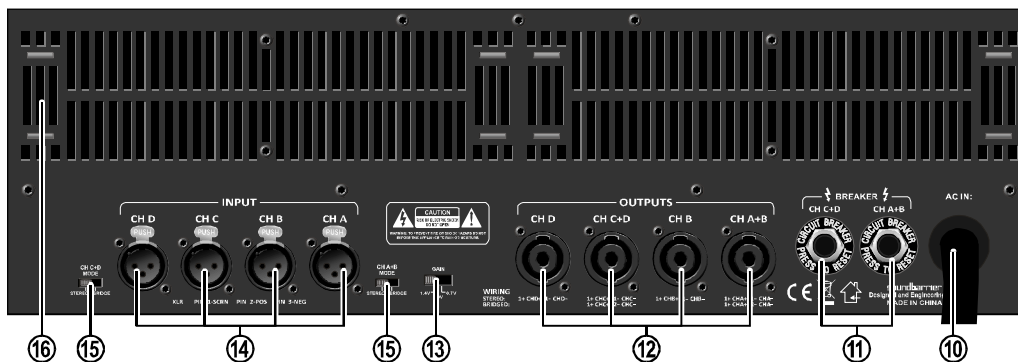

REAR PANEL

10. POWER CONNECTOR

The cord connector is used to connect the AC power source to your power amplifier.

(CAUTION : Always operate the unit with the AC ground wire connected to the electrical system ground)

11. BREAKER


AC circuit breaker. If the breaker continuously blow, shut off the unit and have it serviced by qualified service personnel.

12. L/R CHANNEL OUTPUT CONNECTORS

Connections are as described on the rear panel and in the CONNECTIONS section on page 5 of this manual.

13. GAIN SELECTOR

A switch on the rear of the DAP series allows the maximum amplification attainable to be set directly in the input stage

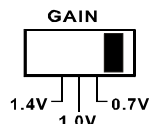

The DAP series amplifier has a 1.0V and 0.7V voltage gain setting along with a 1.4V sensitivity setting.

FRONT & REAR CONNECTIONS

14. BALANCED INPUT CONNECTORS (XLR)

The XLR connector is compatible with balanced inputs. Balanced connections are recommended as they are less prone to AC hum. For long cable runs a source output impedance of less than 600 ohms is needed to avoid signal loss. For short cable runs an unbalanced signal input should be suitable. For stereo (four-channel) operation, use the inputs for both CH-A, CH-B, CH-C and CH-B; for bridged operation, use only CH-A and CH-C input.

(See MODE SELECTOR SWITCH below for more explanation.)

15. MODE SELECTOR SWITCH

The DAP series amplifiers offer 2 modes of operation:

STEREO & BRIDGED. Slide the switch to one of the two positions for your application.

. **STEREO INPUT** - This is the most common mode generally used, and allows independent control of 4 separate signals such as stereo playback, main and monitor live mixes, and bi-amp operation (highs in one channel and lows in the other).

. **BRIDGE** - This mode combines the power of both channels to drive a single speaker. In this mode the amp produces 4 times the peak power and 3 times the sustained power into a 4 or 8 ohm speaker than each channel can deliver separately in stereo or parallel mode.

(CAUTION: In this mode the amplifier can deliver high power into a speaker. Make sure that the speaker, connectors and wiring can handle this output. Note that for prolonged overdriven outputs into a 4 ohm speaker the mains fuse may blow, so care must be taken not to overload the amplifier in such operation.)

Connect the input signal to CH-A and CH-C input for bridged operation.


16. VENTILATION HOLES

The fan speed is varied automatically to maintain the proper internal operating temperature.

CONNECTIONS


The following instructions describe the most common ways to install your amplifier into a sound system.

- 1. Turn off the amplifier power switch before making any connections.
 - 2. The **DAP** Series amplifiers may be operated in one of three modes (stereo, bridged-mono, and parallel mono). Refer to the following wiring diagrams for the speaker connections you wish to make.
- (Note: **Soundbarrier** Systems assumes no liability for damaged speakers resulting from improper wiring, careless amplifier use, or over powering.)

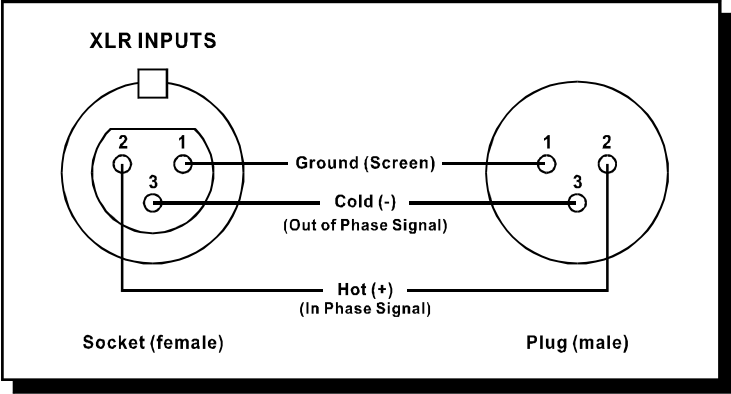

. Stereo (Four-Channel) Mode

To put the amplifier into stereo mode, first turn the amplifier off, then slide the **MODE SELECTOR SWITCH (15)** to the right "STEREO" position, and properly connect the input/output wiring as shown.

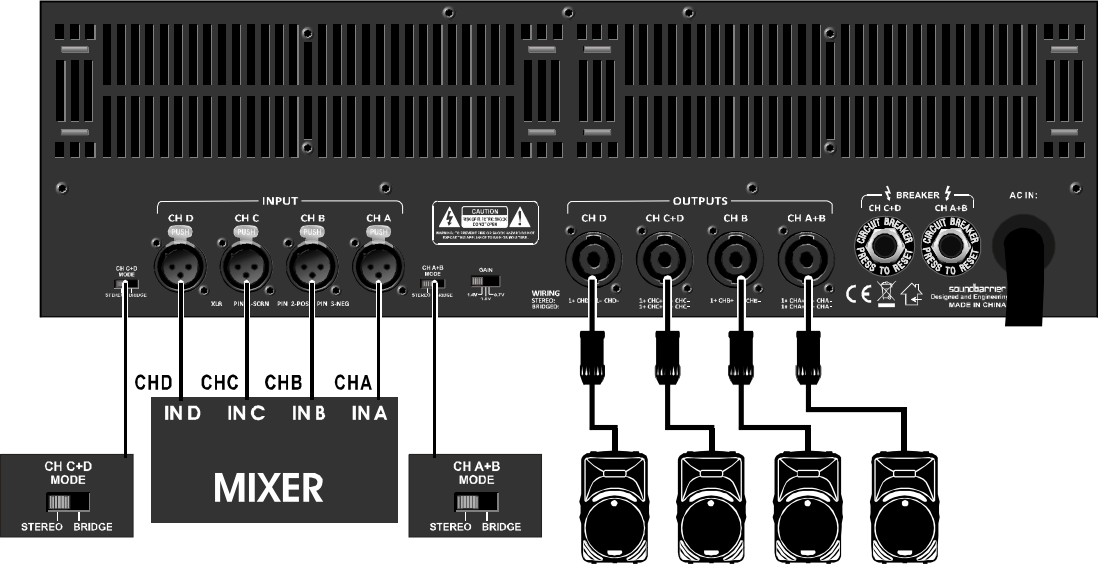

CONNECTIONS


Bridged Mode

To put the amplifier in bridged mode, turn the amplifier off and slide the **MODE SELECTOR SWITCH (15)** toward the left "BRIDGE" position and properly connect the input/output wiring as shown. The signal is input into CH-A and CH-C. Keep the level control of channel "B" and "D" turned completely down (counter clock wise).

(Note: This mode produces a large amount of power. Be sure that your wiring and speaker can handle it.)



BLOCK DIAGRAM

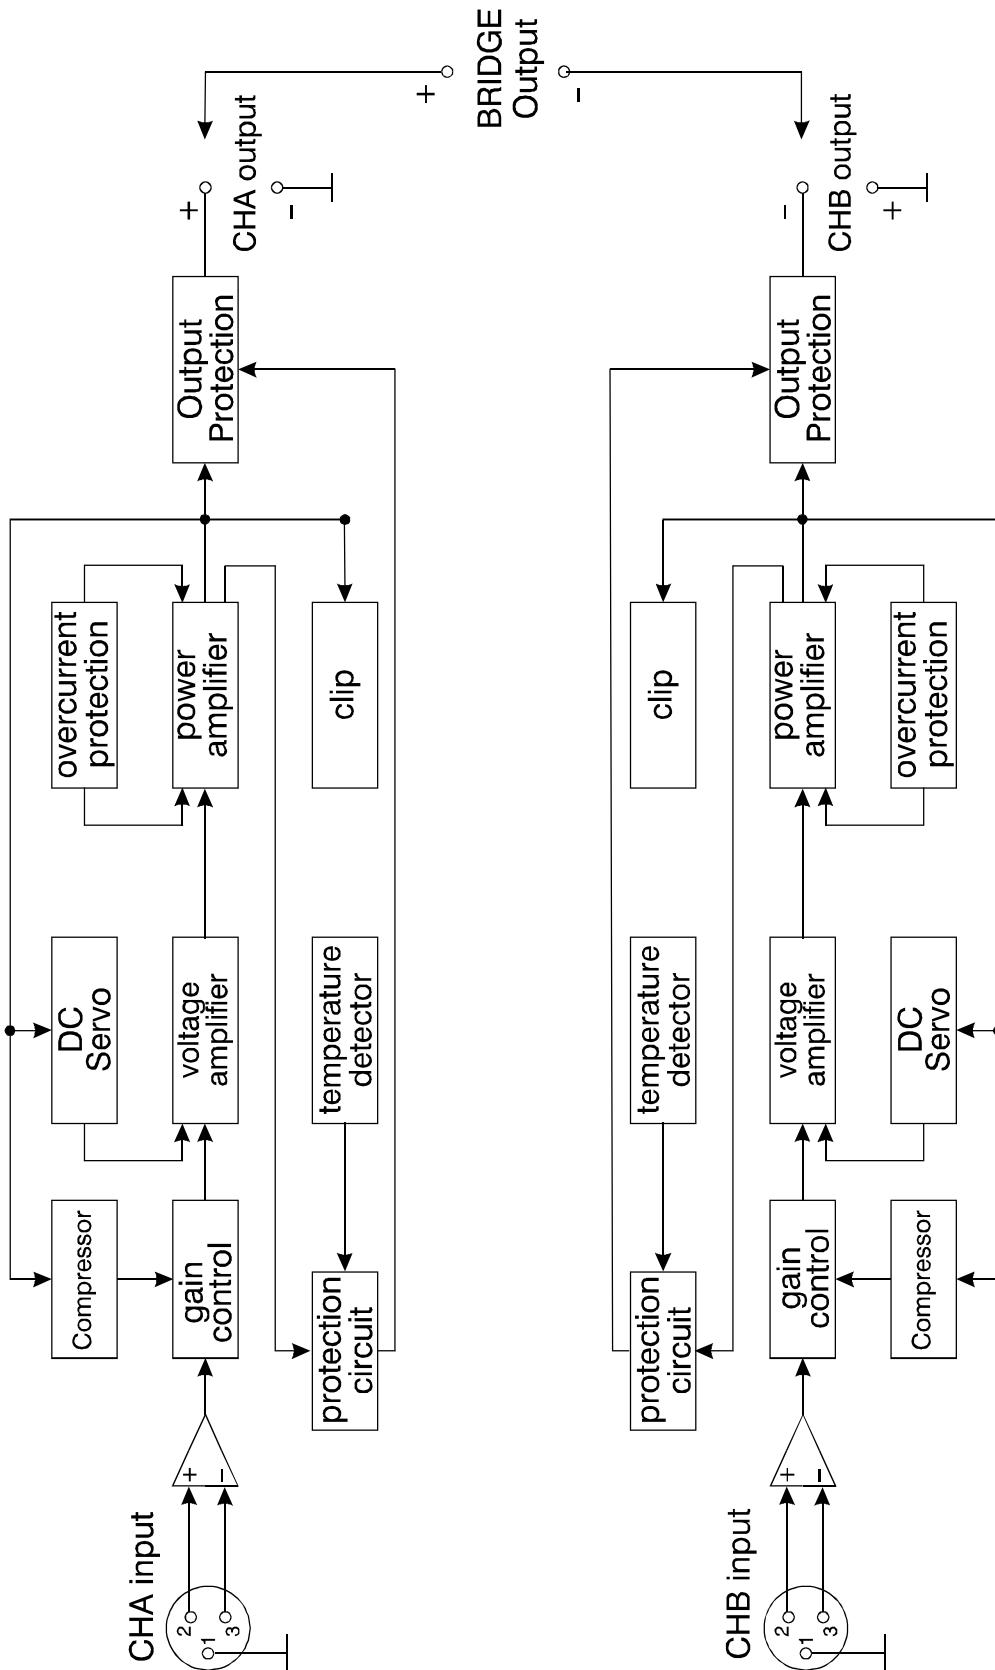

✦ CHC & CHD bridged output circuit diagram is the same with this.

SPECIFICATIONS

MODEL CHARACTERISTIC	DAP-10.4
Out Power (8Ω)	1200W
Out Power (4Ω)	1800W
Out Power (2Ω)	2200W
Out Power(BRIDGE) (8Ω)	3600W
Out Power(BRIDGE) (4Ω)	4000W
FREQUENCY RESPONSE(1W into 8ohms)	20 Hz - 20 kHz (±0.5dB)
THD 20 Hz - 20 kHz FOR 1W	< 0.1%
THD AT 1 kHz AND 1dB BELOW CLIPPING	< 0.05%
SIGNAL TO NOISE RATIO	> 108 dBA
INPUT SENSITIVITY	SELECTABLE (0.7V / 1.0V / 1.4V)
INPUT IMPEDANCE	20 kOhm
INPUT CONNECTORS	Female XLR-3
OUTPUT CIRCUIT TYPE	Class TD
OUTPUT CONNECTORS	4 Pole SPEAKON
PROTECTIONS	Full short-circuit, Open-circuit, Thermal, Soft-start, DC voltage
LED INDICATORS (per channel)	Bridge, Power, Signal, Clip, Protect
PANEL CONTROLS	REAR-Ground lift, mode selection, compressor
COOLING	Two fans, front-to rear airflow. temperature controlled speed
POWER SUPPLY VOLTAGE	115V AC/60Hz
DIMENSION(mm)	482 x 505 x132mm
N WEIGHT /G WEIGHT (Kg)	34kg

The specifications above are correct at the time of printing of this manual. For improvement purposes, all specifications for this unit, including design and appearance, are subject to change without prior notice.

