
IMPORTANT

DO NOT USE ANY AFTERMARKET RELEASE BEARING SHIMS!

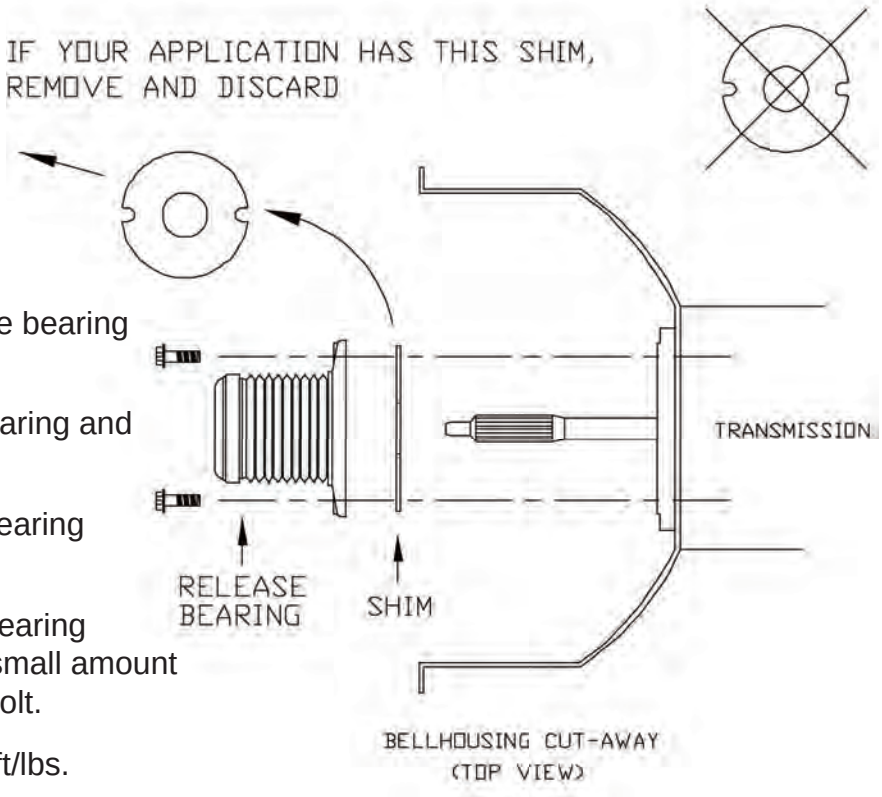

1) Remove the two release bearing retaining bolts.
2) Remove the release bearing and shim.
3) Re-install the release bearing without the shim.
4) Re-Install the release bearing retaining bolts using a small amount of threadlock on each bolt.
5) Torque each bolt to 20 ft/lbs.

"NOTE" Centerforce tip sheets are for general reference only. Please refer to your owners manual for vehicle specifications.

IMPORTANT