


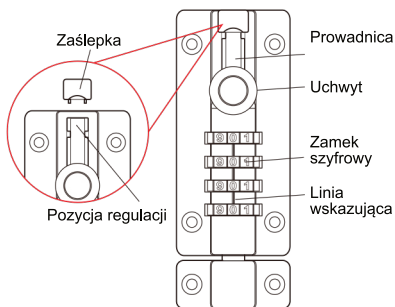


Instrukcja użytkowania



Ustawianie szyfru

Przed pierwszym użyciem ustaw swoją kombinację cyfr.

1. Zdejmij zaślepkę podważając ją. Ustaw aktualny kod (fabrycznie 0-0-0-0), a następnie przesunij uchwyt na zewnątrz, aż poczujesz opór. W tej pozycji podnieś uchwyt do góry i przesunij maksymalnie na zewnątrz, w miejsce wyjętej zaślepki.
2. Ustaw nową kombinację cyfr.
3. Przesunij uchwyt do pozycji wyjściowej i załóż zaślepkę.

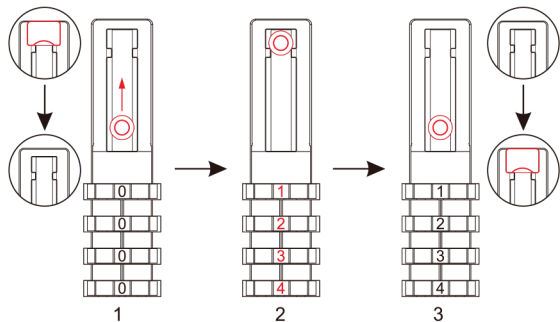

Wymiary

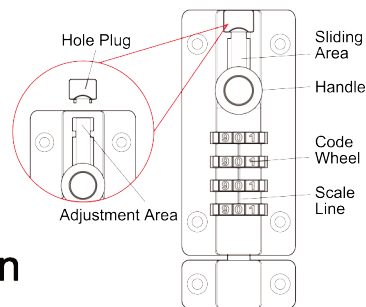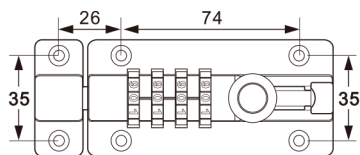


Instruction Manual

Reset Password

Please set your own password for the first use!

The unified original password of the factory products is "0-0-0-0".

1. Use the tool to remove the **Hole Plug** from the **Adjustment Area**. Turn the code wheel to 0-0-0-0, then pull the handle outward and lift it up to the **Adjustment Area**. (Note: pull the handle outwards first and then lift it upwards)
2. Turn the password wheel in turn to the position of the password that needs to be set, and align with the **Scale Line**.
3. Pull the handle outwards and move it down from the **Adjustment Area** to the **Sliding Area**, and the password setting is now complete. (Remember to put the hole plug back)

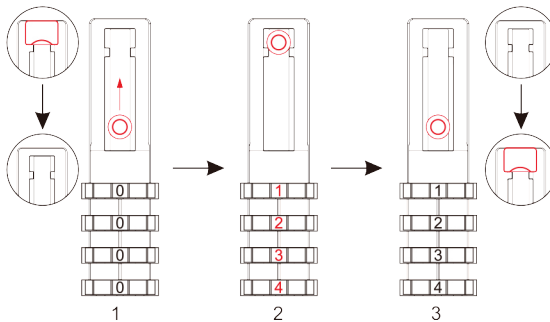

How to use

Unlock: Align the corresponding numeric passwords to the scale line, then pull the handle.

Lock: Keeping the code wheel in the correct position, insert the bolt into the keyhole, then disrupt the code wheel.

Dimension

