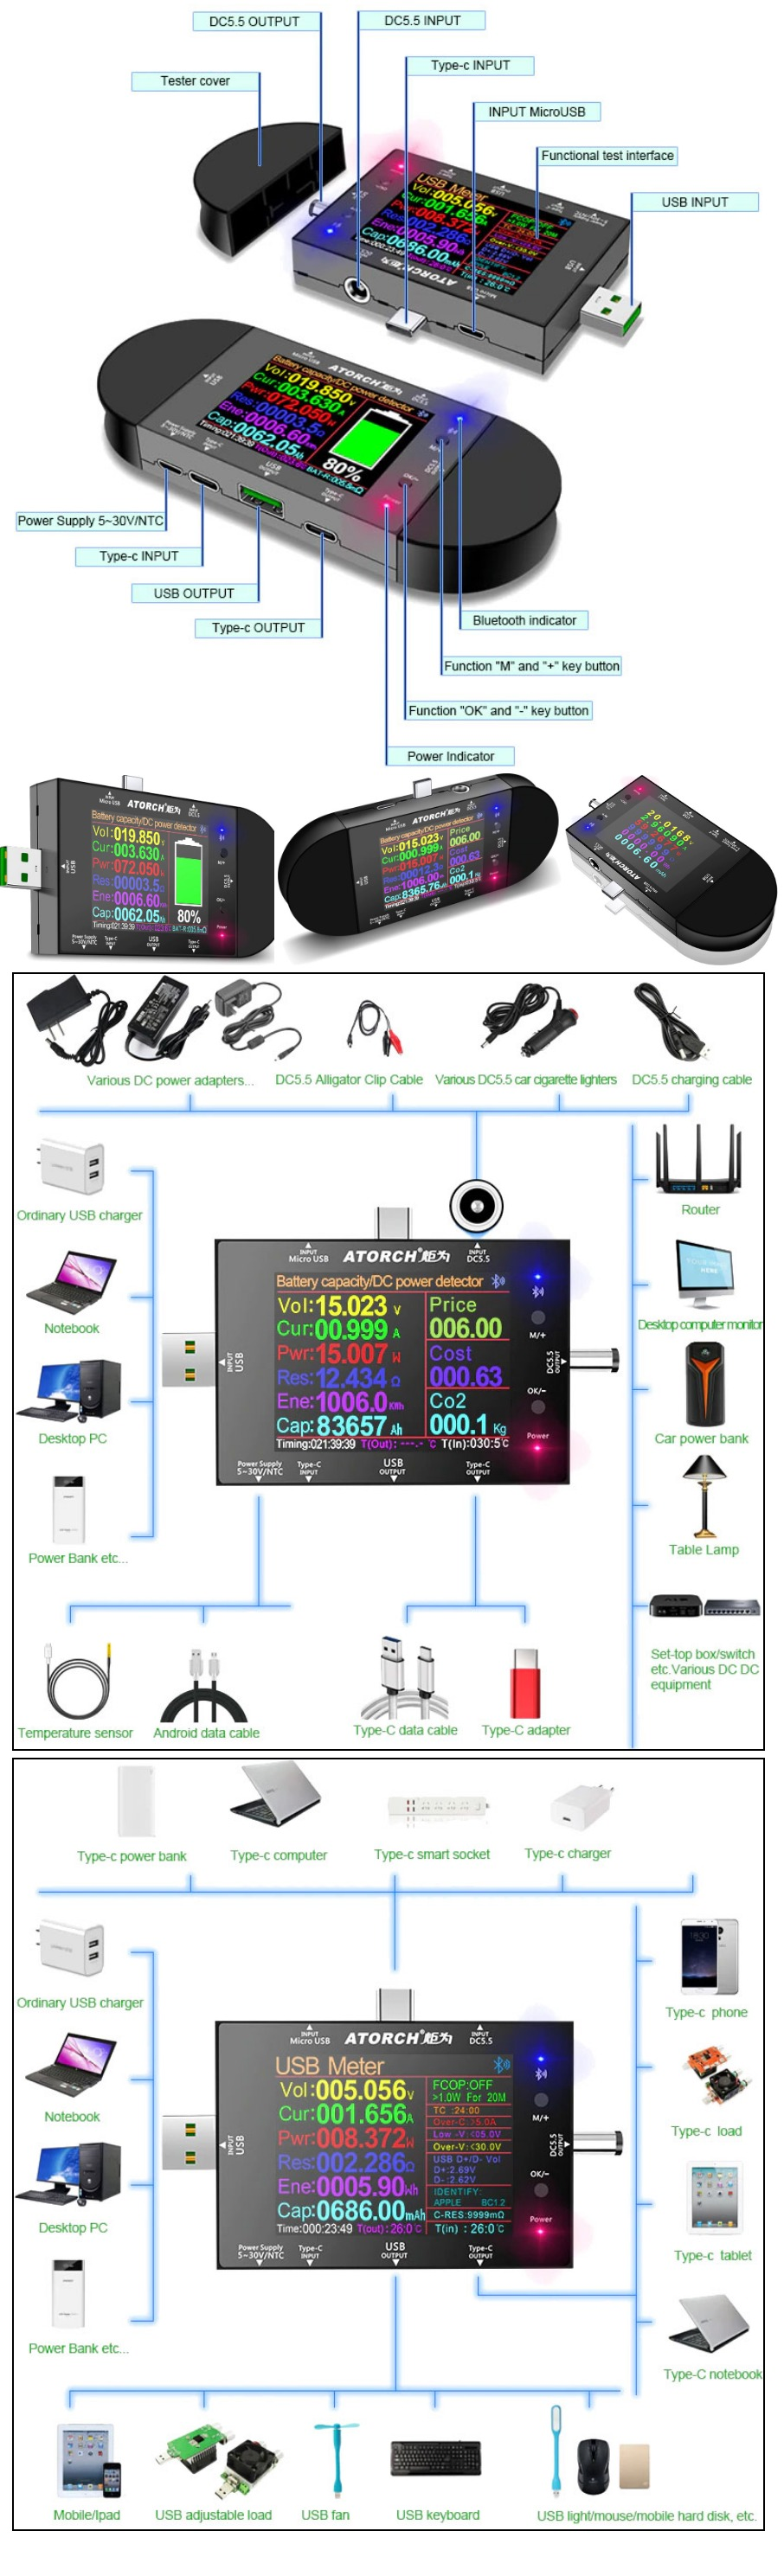

zdjęcia:

About FCOP, TC, Over-C, Over-V, Low-V Function Settings

1. **FCOP** Means Device charging Full power Cut OFF(ON/OFF)
   FCOP: OFF < 1W For 20M Means FCOP Means Device charging Full power function is invalid
   FCOP: ON < 1W For 20M Means you can set it yourself when the power is < 1W for 1 minute, it will Power Supply Cut OFF!
2. **TC: Timed charging (ON/OFF), you can set the time period of 01:00-24:00 to charge regularly when it reaches the setting, it will automatically power cut off!**
3. **Overcurrent protection : 0.0A-5.1A range can be set by yourself**
4. **Over voltage protection: 01V-32.0V range can be set by yourself**
5. **Low voltage protection : 00V-30.0V range can be set by yourself**

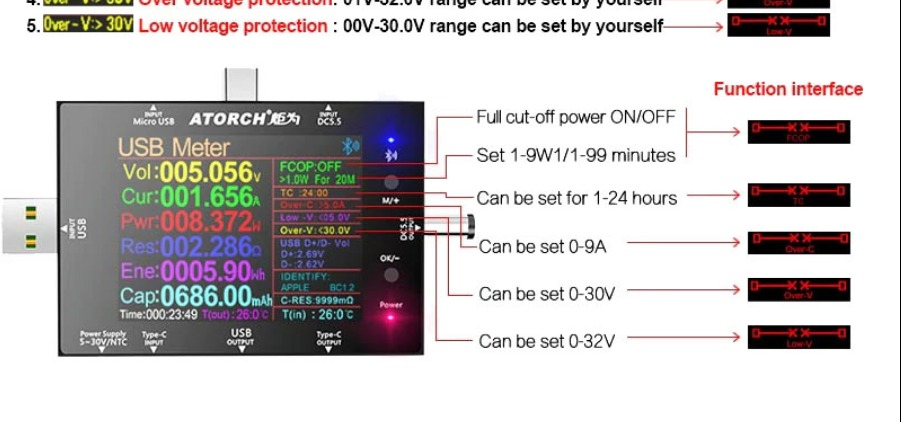

Key button operation

1.Long time press the **"M"** key, the **OFF** on the screen will flash, click the button **"-" or "+"**, set **FCOP: ON or OFF**, Long time press the **"OK!"** key again, the screen will appear: **"OK!"**, the setting is complete!

2.Press this operation to set other parameters, wait a few seconds, the screen will appear: **"OK!"**, the setting is complete!

3.Or long time press the **"M"** key, the numbers on the screen will flash, you can freely choose to set the parameters!

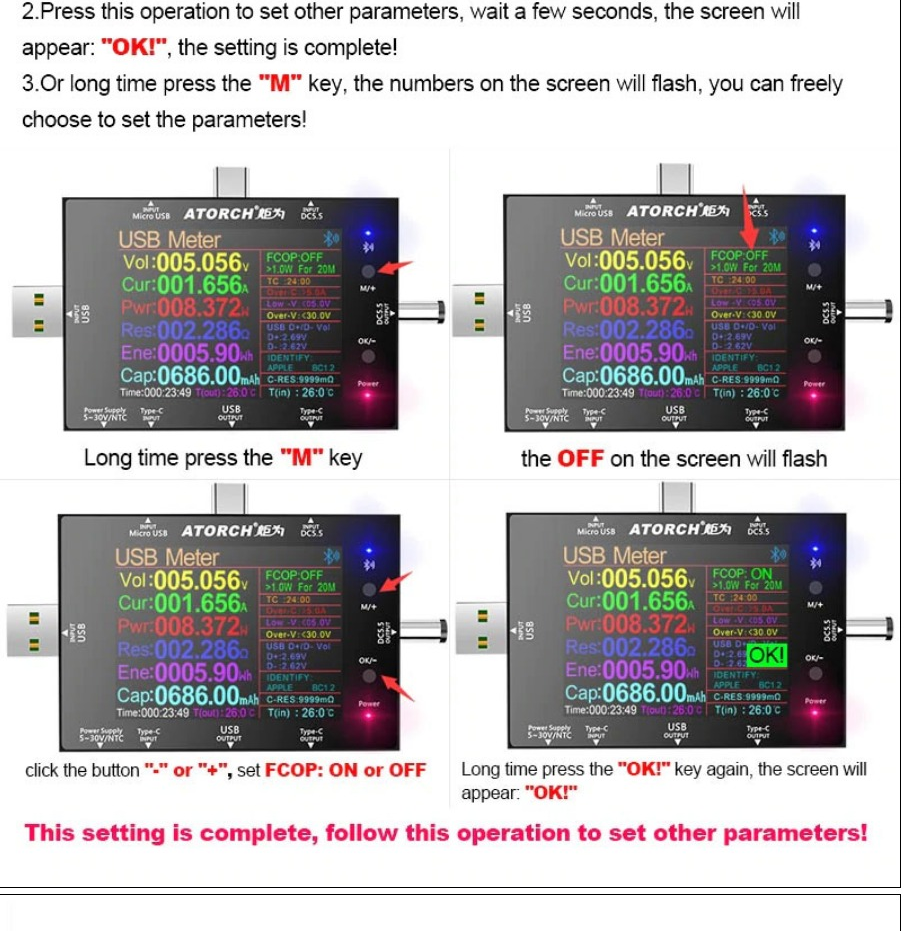

This setting is complete, follow this operation to set other parameters!

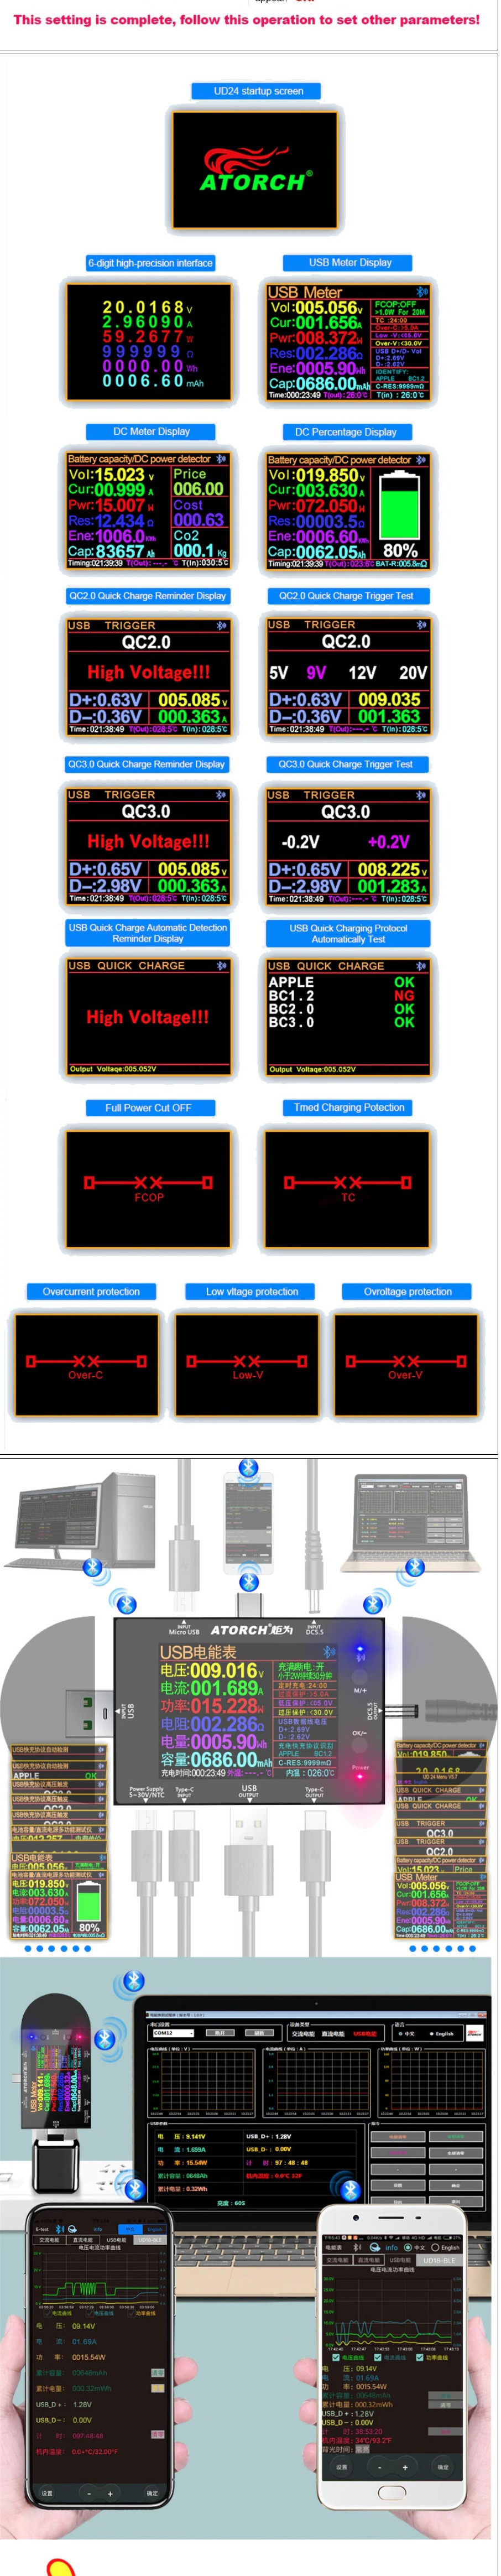

1.New addition iPhone App,In the Apple Store, search for: E_Test,Click Download to install it.
2.Android APP:http://www.mediafire.com/folder/31bc15uhq8odb/E-meter

Mobile APP interface function introduction

Use the mobile phone Bluetooth function to wirelessly connect the product, with the included mobile APP software.Achieve more measurement and control details, leaving measurement technology without boundaries

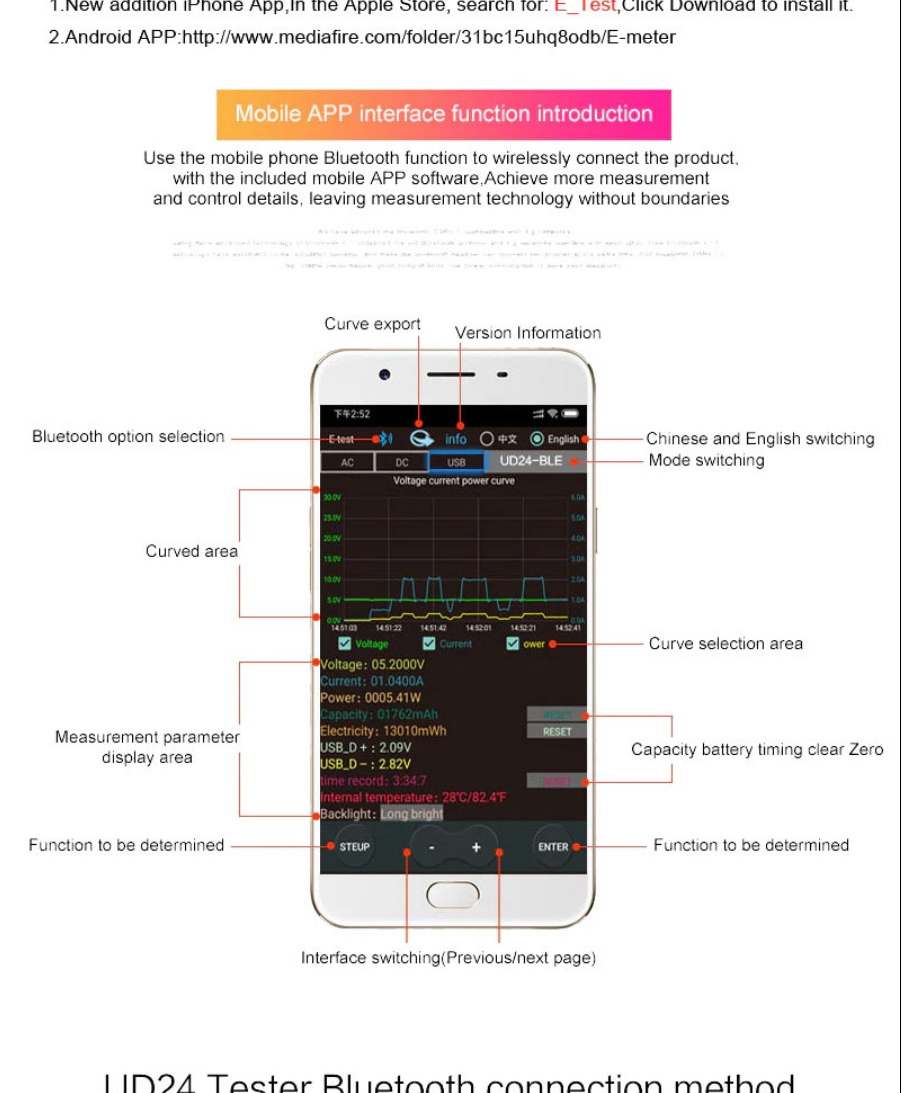

UD24 Tester Bluetooth connection method

1. Please connect the product as shown on the right.

2.Please download the mobile app software,only support Android 5.0 and above.
https://www.mediafire.com/folder/31bc15uhq8odb/E-meter
Then install the E-meter APP software on the phone.

3.Bluetooth on the phone needs to be turned on,Then open E-test APP on the phone

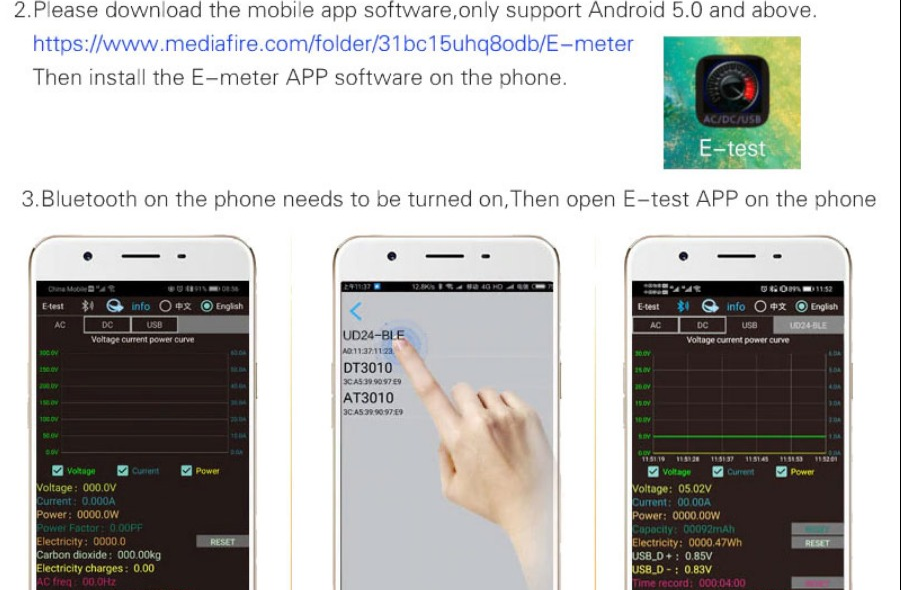

1. When the USB tester is powered on, the Bluetooth indicator is flashing, turn on the E-test App softare icon, and allow Bluetooth to turn on.
2. Click the Bluetooth icon in the upper left corner of the APP to pop up the menu for selecting the USB tester model. UD24-BLE return to the main APP interface.
3. During the measurement, the upper right corner shows the model currently online. UD24-BLE The bluetooth icon in the upper left corner turns blue, indicating that the measurement is in online communication.

How to find the Bluetooth symbol in E-Test APP

This operating instruction applies to all the company's Bluetooth products (UD18/DT24/DL24/AT3010/DPT3010/T18... etc.)

Please open your phone, **Setting**>>find the **Apps**>>manage the **Permissions**>>**Location**>>find our **E-test app**>>find the **storage information** and **location information**>>open the permissions **allow**, you can find us bluetooth symbol In the E-test list.

⚠ Please open your phone settings

Click settings

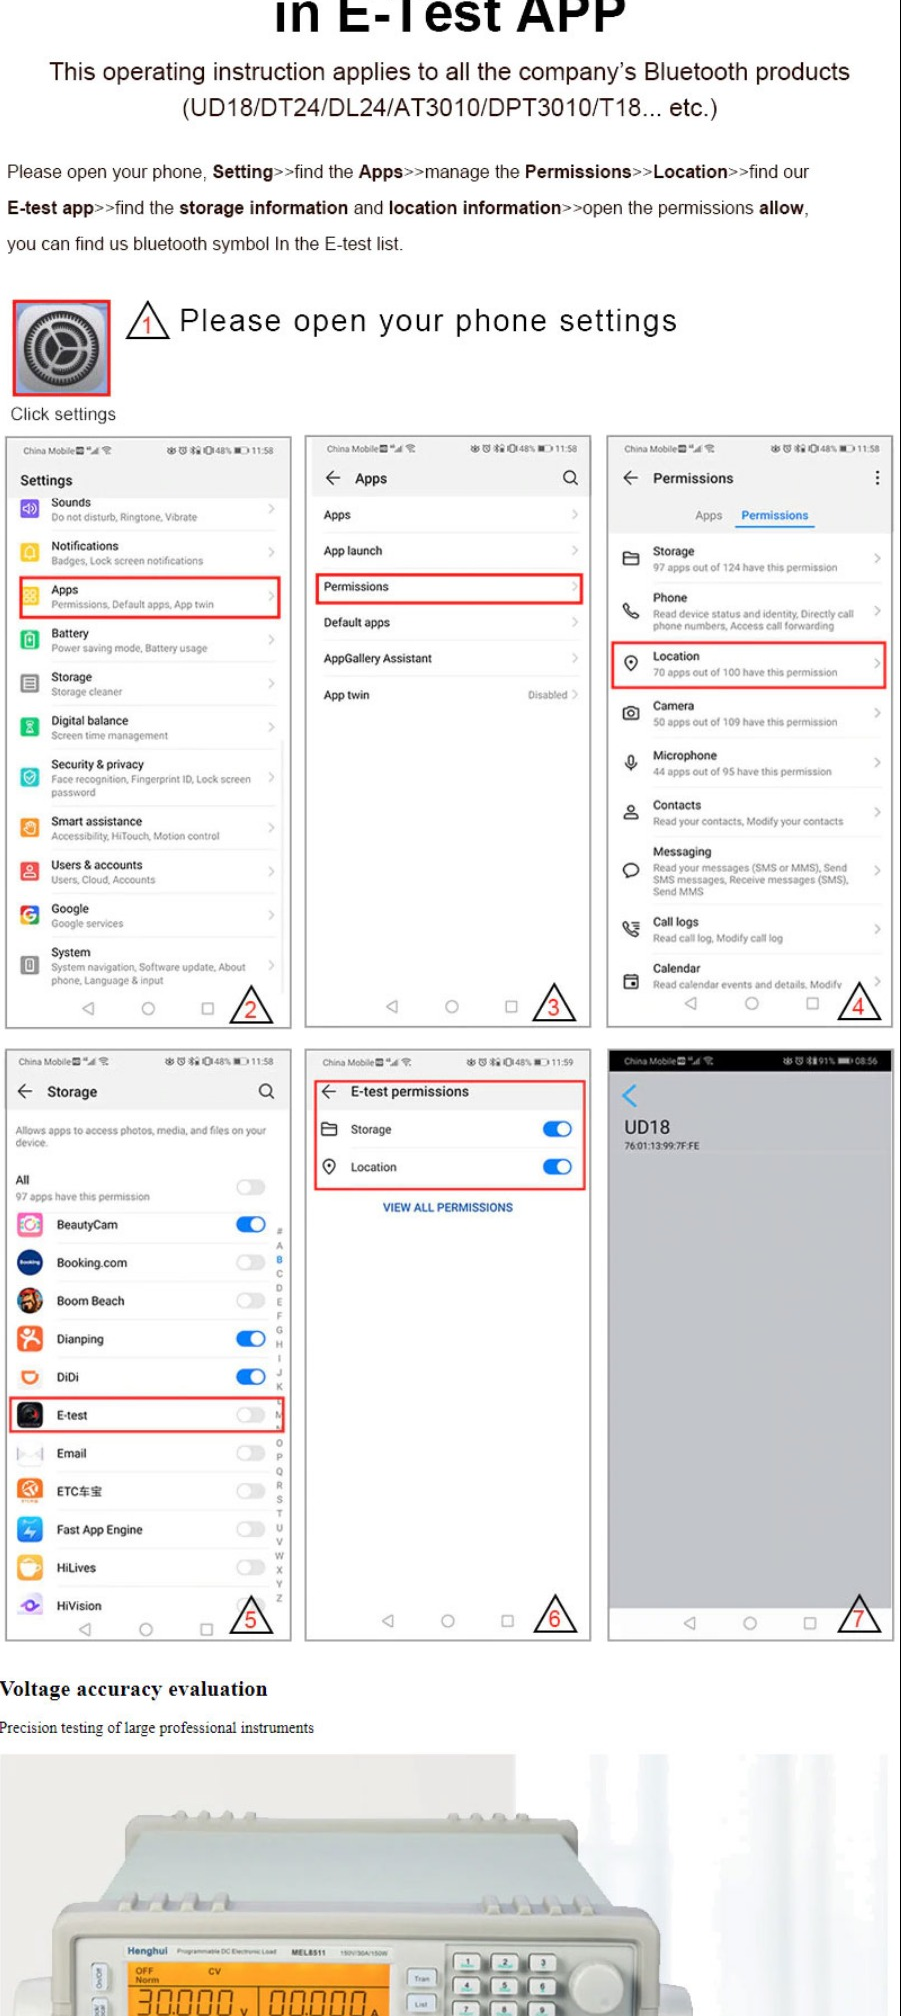

Voltage accuracy evaluation

Precision testing of large professional instruments

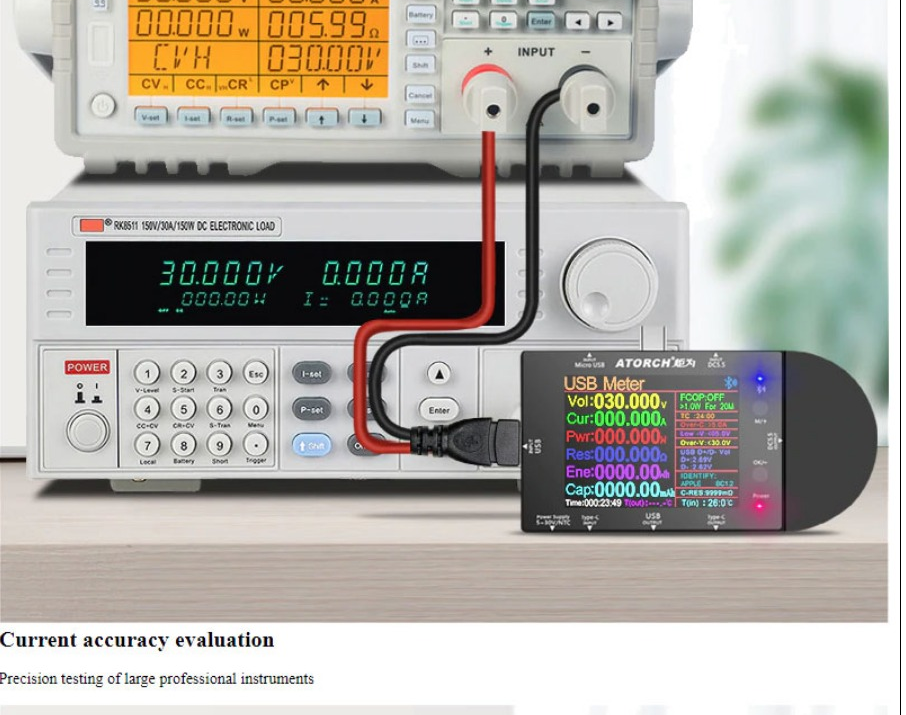

Current accuracy evaluation

Precision testing of large professional instruments

Product background parameter setting
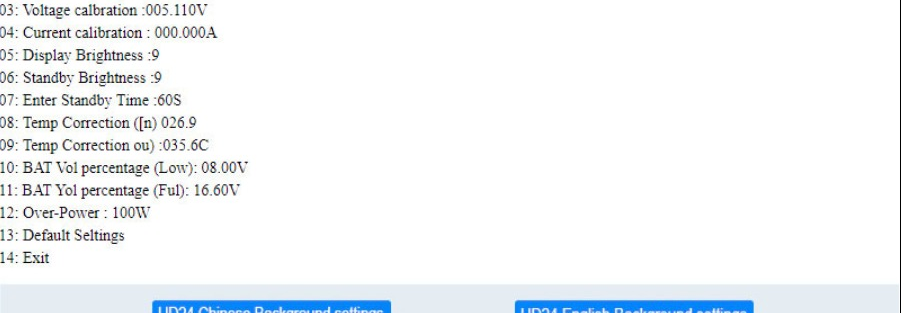
UD 24 Menu V5.7
01:Chinese English
02:Clear cumulative data
03: Voltage calibration :005.110V
04: Current calibration : 000.000A
05: Display Brightness :9
06: Standby Brightness :9
07: Enter Standby Time :60S
08: Temp Correction (In) :026.9
09: Temp Correction ou) :035.6C
10: BAT Vol percentage (Low): 08.00V
11: BAT Vol percentage (Full): 16.60V
12: Over-Power : 100W
13: Default Settings
14: Exit