

High Definition Digital Terrestrial Receiver
H.265 DVB-T2 TV Stick



Simply Upgrade your TV to DVB-T2

Happy? Tell the whole world

Unhappy? Contact us to get help

1. Packing list



x1

x1

x1

2

2. Functional Port



HDMI OUT

ANT IN


DC 5V IN

IR IN

USB

3

3. Upgrade to DVB-T2

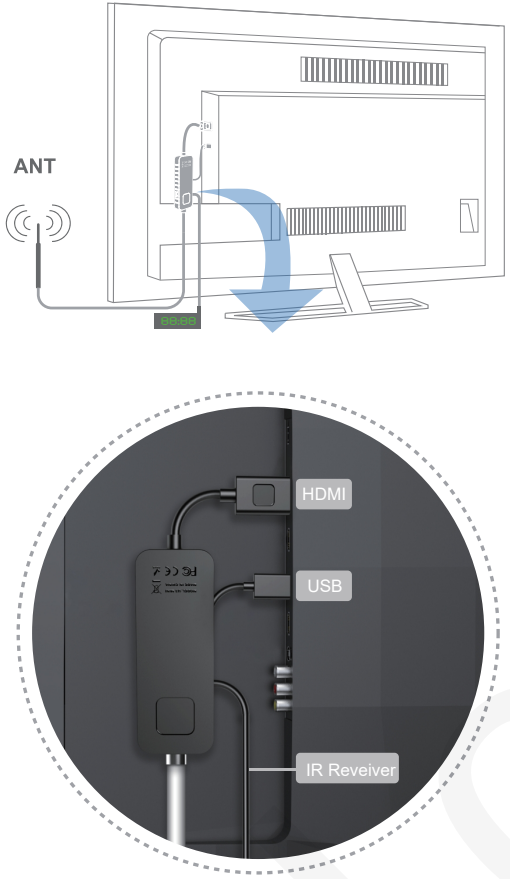

ANT

HDMI


USB

IR Receiver


4

4. Attention

1.Place the IR Receiver in front of your TV
Not behind it

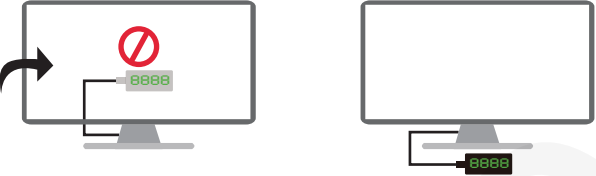

2.Insert 2 AAA batteries (not included) into your remote

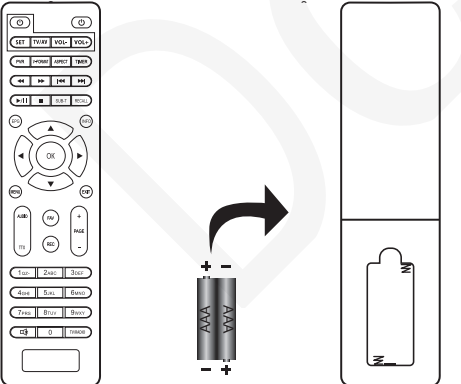

5

5. DVB Remote Control



POWER: turn ON/OFF the DVB device

TV Control

POWER: turn ON/OFF the TV

SET: auto-learning setting

MEDIA Control

REC: Show the REC media via the USB device

720P: Switch 720P or 1080P

16:9: Switch 16:9 or 4:3

Book: Book listing control

Sub: Show the subtitles (if available)

Prev: Skips to the previous channel

MENU Control

Electronic guide (if available)

Info: Info of the channel

MENU: open the main menu

EXIT: Exit from a menu

MORE Control

AUDIO: selects the language of the channel

TTX: teletext (if available)

FAV: creates and shows the list of the favorite channels

REC: start recording in the USB device


PAGE: navigate inside the menu

CHANNEL Control:

TV/RADIO: switch TV or Radio channel

6

6. Remote Auto -learning Set

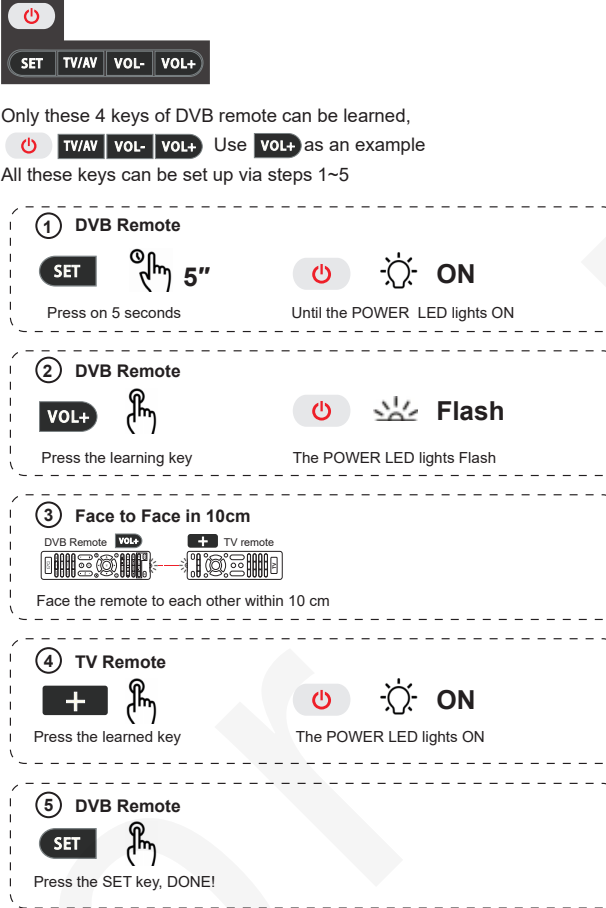

Only these 4 keys of DVB remote can be learned,
Use VOL+ as an example
All these keys can be set up via steps 1~5

1 DVB Remote

Press on 5 seconds

Until the POWER LED lights ON

2 DVB Remote

Press the learning key

The POWER LED lights Flash

3 Face to Face in 10cm

Face the remote to each other within 10 cm

4 TV Remote

Press the learned key

The POWER LED lights ON

5 DVB Remote

Press the SET key, DONE!

7

7. Troubleshooting

Problem	Possible cause	Solutions
The front panel display does not turn on	Lack of tension	Make sure the power cord is properly inserted into a powered outlet. Verify that the switch is turned on.
No image or sound	The cables connecting the TV and the decoder are not connected correctly	Check that the output signal cable is well connected (HDMI). Also check the antenna cable.
	TV mode is incorrect	Press the source button on your TV remote control (some are also AV / TV buttons) and select the HDMI signal source.
	Incorrect video definition	Press V-FORMAT on the remote control and select a video resolution that allows correct viewing
Intermittent picture and audio	Insufficient signal strength	Check that the antenna cable is well connected, and that the quality of the video signal is adequate.
	Electrical interference	Check that the antenna cable is completely shielded
No audio	The receiver or TV is in silent mode	Disable silent mode using the MUTE button
	Volume level too low	Check that the volume level of the set-top box and television are adequate
	Audio CODEC is not supported	While watching multimedia content, audio encoding may not be supported (while video encoding may be) and movies may appear without audio. The file is not completely readable.
Remote control not working	Batteries not inserted	Insert the batteries into the remote control
	Low battery	Replace the batteries
	Polarity reversal of batteries	Check that the batteries have been inserted according to their correct polarity, as indicated on the bottom of the battery compartment.
	The remote control is out of its operating range	Approach and point the remote control directly at the appliance.
Media files on the USB stick are not played	The files are not of the supported format	Only some formats are supported
	The compression codec is not supported	Only some codecs are supported

8

Polski

DEKODER TUNER TV NAZIEMNEJ
DVB-T2 HEVC H.265 MINI



Po prostu zaktualizuj swój telewizor do DVB-T2

Szczęśliwy? Powiedz całemu światu

nieszczęśliwy? Skontaktuj się z nami, aby uzyskać pomoc

1. Lista rzeczy do spakowania



x1

x1

x1

2

2. Funkcjonalny port



HDMI OUT

ANT IN


DC 5V IN

IR IN

USB

3

3. Uaktualnij do DVB-T2

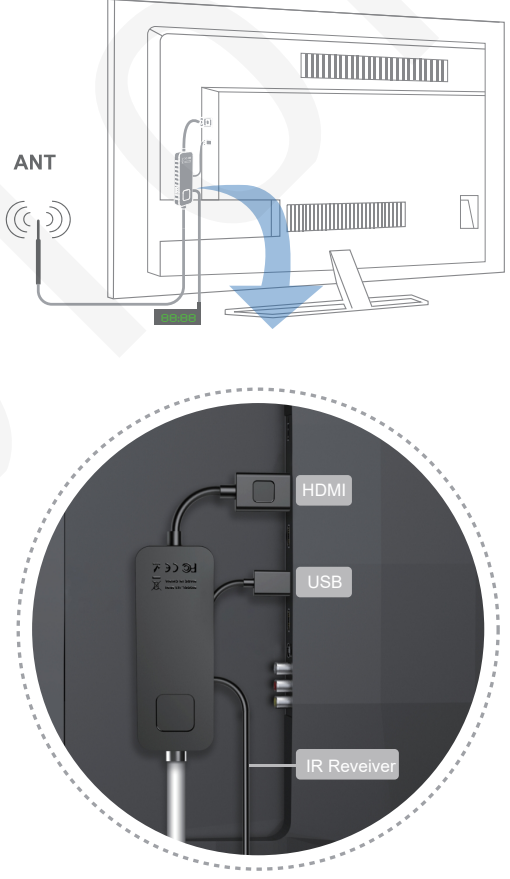

ANT

HDMI

USB

IR Receiver


4

4. Uwaga

1. Umieść odbiornik podczerwieni przed telewizorem
Nie za tym



2. Włóż 2 baterie AAA (brak w zestawie) do twój pilot

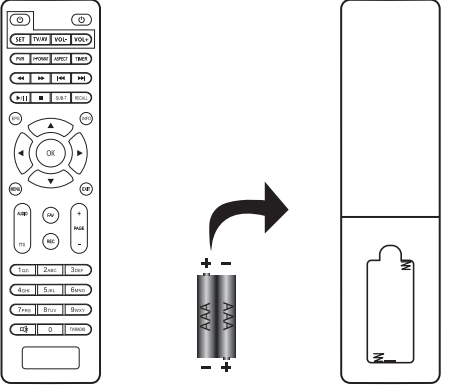

5

5. Zdalne sterowanie DVB



ZASILANIE: włącz/wyłącz urządzenie DVB

Sterowanie telewizorem

ZASILANIE: włącz/wyłącz telewizor

ZESTAW: ustawienie automatycznego uczenia

Sterowanie multimediami

REC: Pokaż nośnik REC przez urządzenie USB

720P: Przełącz 720P lub 1080P

16:9: Przełącz 16:9 lub 4:3

Book: Kontrola listy książek

Sub: Pokaż napisy (jeśli są dostępne)

Prev: Przeskakuje do poprzedniego kanału

Sterowanie MENU

Przewodnik elektroniczny (jeśli jest dostępny)

Info: Informacje o kanale

MENU: otwórz menu główne

EXIT: Wyjście z menu

WIĘCEJ Kontroli

AUDIO: wybiera język kanału

TTX: teletext (jeśli jest dostępny)

FAV: tworzy i wyświetla listę ulubionych kanałów

REC: rozpoczyna nagrywanie na urządzeniu USB


PAGE: poruszanie się po menu

Kontrola KANAŁU:

TV/RADIO: przełącza kanał telewizyjny lub radiowy

6

6. Zdalny zestaw automatycznego uczenia się

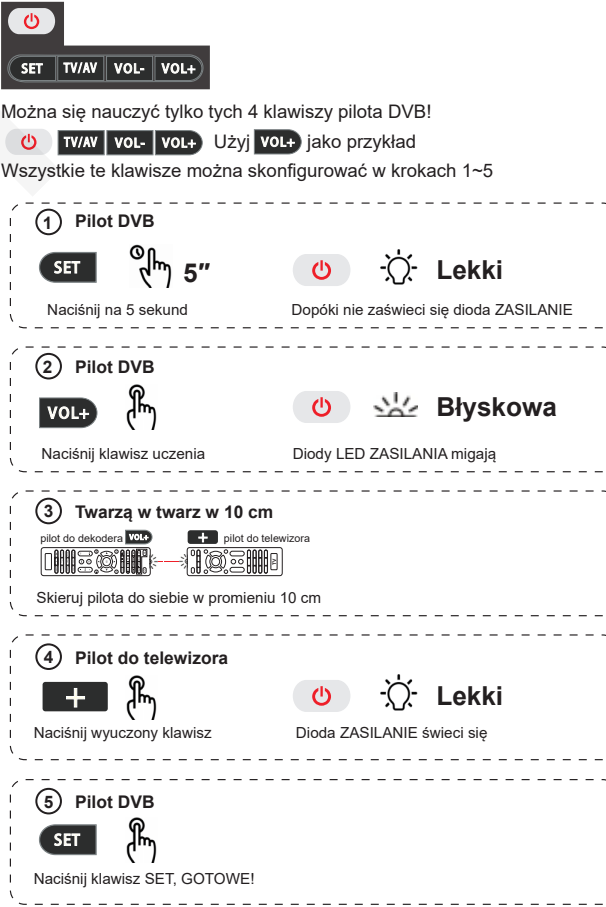

Można się nauczyć tylko tych 4 klawiszy pilota DVB!
Użyj VOL+ jako przykład
Wszystkie te klawisze można skonfigurować w krokach 1-5

1 Pilot DVB

Naciśnij na 5 sekund

Dopóki nie zaświeci się dioda ZASILANIE

2 Pilot DVB

Naciśnij klawisz uczenia

Dioda LED ZASILANIE miga

3 Tworzą w twarz w 10 cm

Steruj pilotem do siebie w promieniu 10 cm

4 Pilot do telewizora

Naciśnij wyznaczony klawisz

Dioda ZASILANIE świeci się

5 Pilot DVB

Naciśnij klawisz SET, GOTOWE!

7

7. Rozwiązywanie problemów

Problem	Możliwa przyczyna	Rozwiązania
Wyświetlacz na panelu przednim nie włącza się	Brak napięcia	Upewnij się, że przewód zasilający jest prawidłowo włożony do gniazdka elektrycznego, sprawdź, czy przełącznik jest włączony
Brak obrazu lub dźwięku	Kable między telewizorem a dekodernie nie są prawidłowo podłączone	Sprawdź, czy kabel wyjścia sygnału jest prawidłowo podłączony (HDMI). Sprawdź również kabel antenowy.
	Tryb telewizora jest nieprawidłowy	Naciśnij przycisk źródła sygnału na pilocie telewizora (niektóre są również przyciskami AV/TV) i wybierz źródło sygnału HDMI
	Nieprawidłowa definicja wideo	Naciśnij V-FORMAT na pilocie i wybierz rozdzielczość wideo, która umożliwia prawidłowe oglądanie
Przerwany obraz i dźwięk	Niewystarczająca siła sygnału	Sprawdź, czy kabel antenowy jest prawidłowo podłączony i czy jakość sygnału wideo jest dobra.
	Zakłócenia elektryczne	Upewnij się, że kabel antenowy jest w pełni ekranowany
Recewer lub telewizor są w trybie cichym	głośność jest za niska	Wyłącz tryb cichy za pomocą przycisku MUTE
Brak dźwięku	sprawy, czy głośność dekodera i telewizora jest odpowiednia	podczas oglądania treści multimedialnych kodowanie dźwięku może nie być obsługiwane (podczas gdy kodowanie wideo może być), a filmy mogą pojawić się bez dźwięku. Plik nie jest w pełni czytelny.
	Baterie nie są włożone	Włóż baterie do pilota
	Niski poziom baterii	Wymień baterie
	Odwrońcenie polaryzacji baterii	sprawy, czy baterie są włożone z zachowaniem prawidłowej biegunowości, wskazanej na dole komory baterii.
	Pilot jest poza zasięgiem działania	podjeżdż i skieruj pilota bezpośrednio na urządzenie.
Pilot nie działa	Piki nie są obsługiwane w formacie	obsługiwane są tylko niektóre formaty
	Kodek kompresji nie jest obsługiwany	obsługiwane są tylko niektóre kody

8