


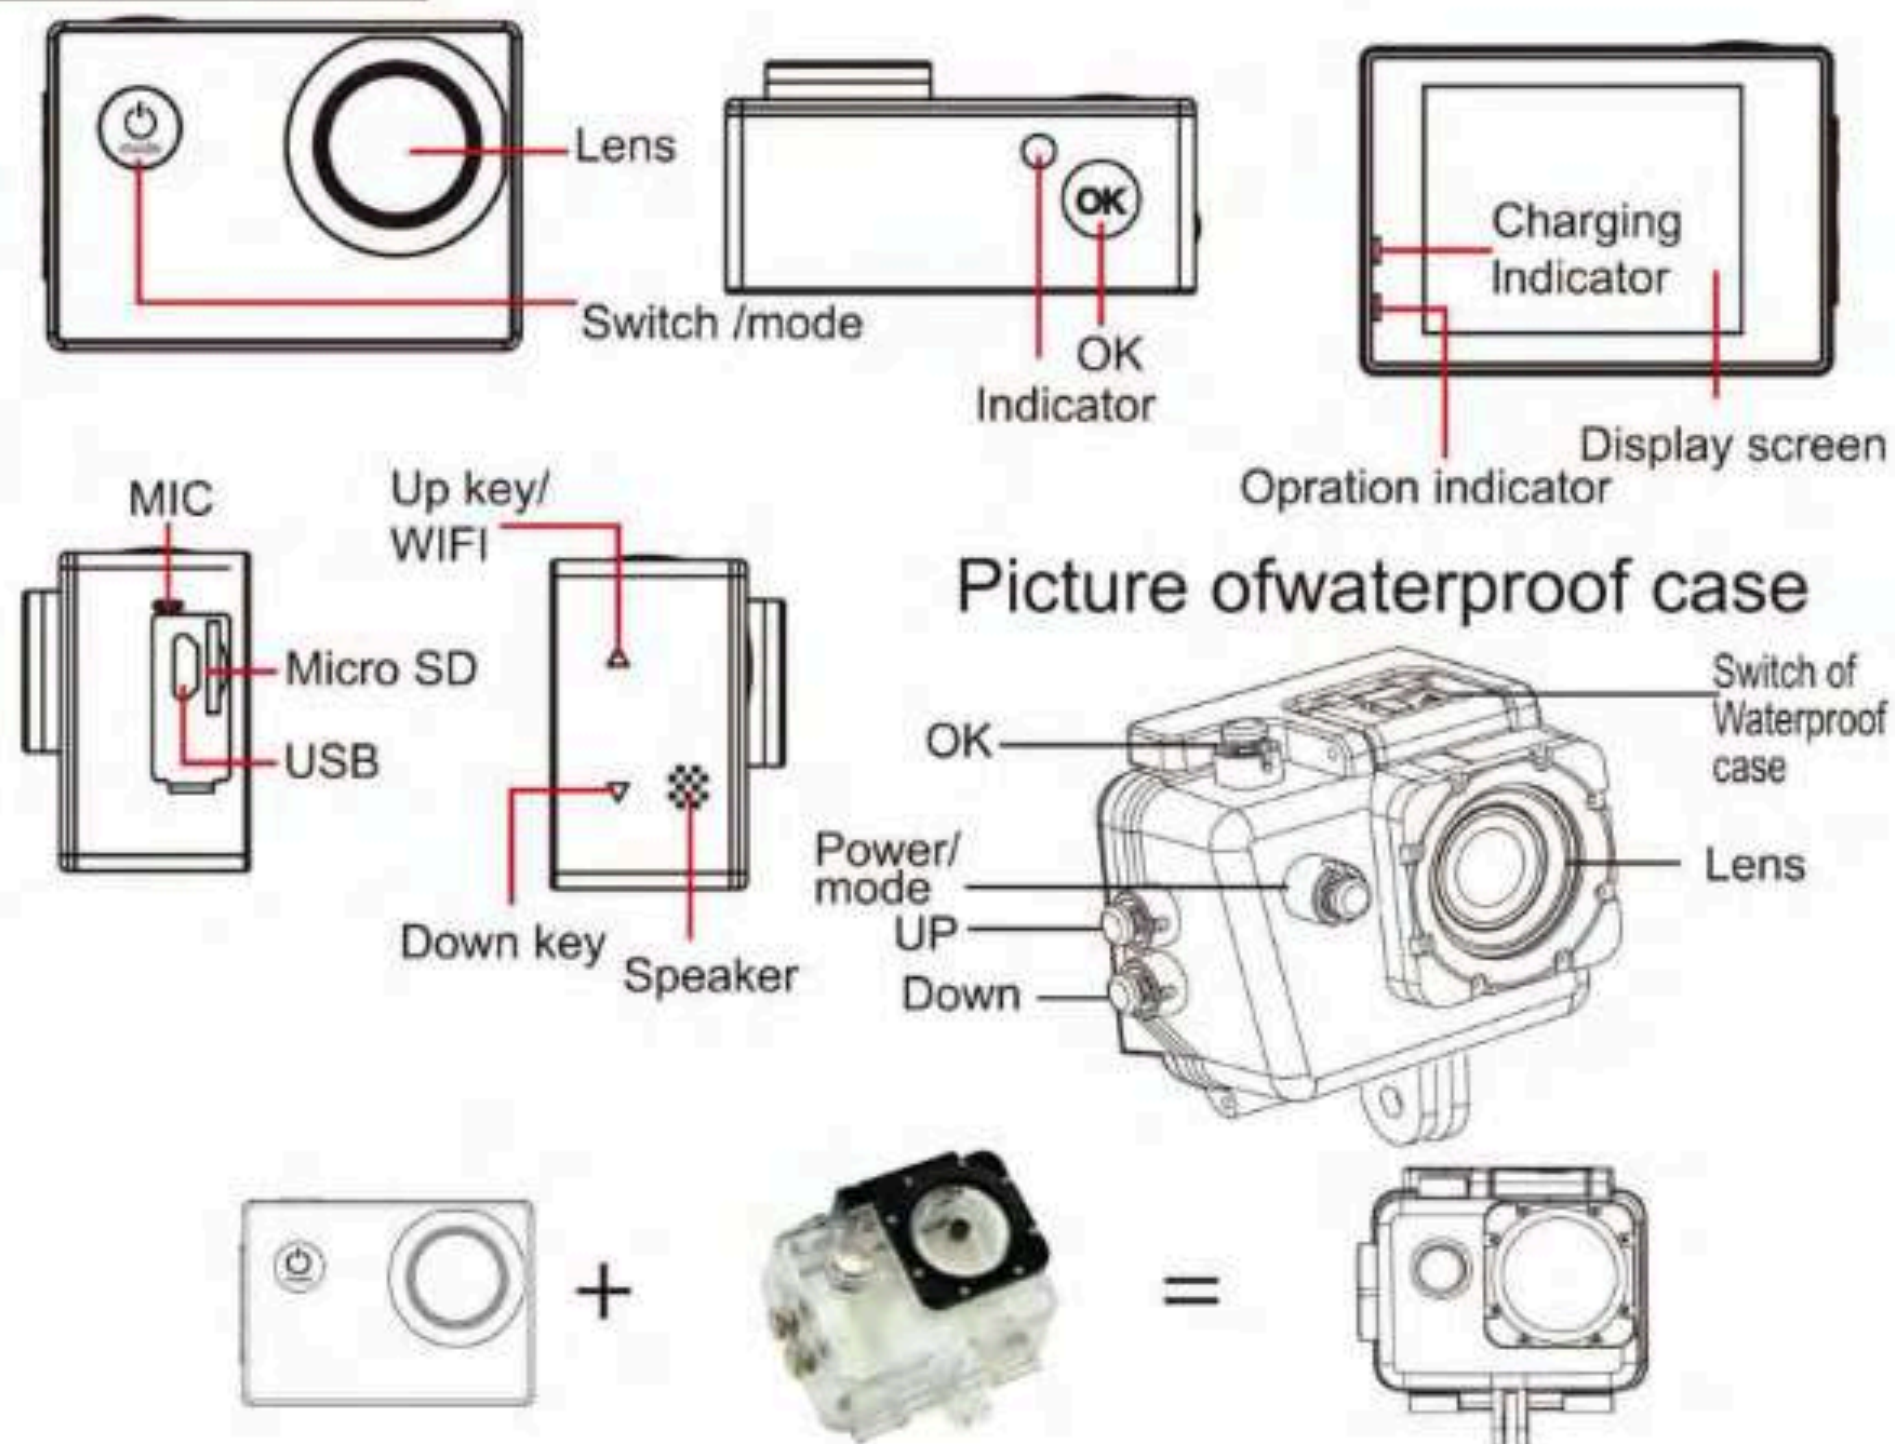

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment




GETTING STARTED

Getting Started

1. Press Switch/Model button to turn on the camera, 1-2 seconds to turn it off;
2. Press Switch/Model button to switch between Video recording/Photo shooting/display back page.

RECORD VIDEO

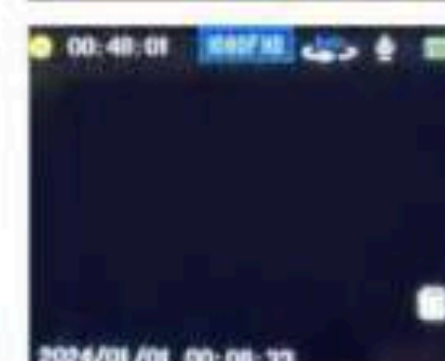


RECORD VIDEO

TAKE PHOTO




TAKE PHOTO

PLAYBACK

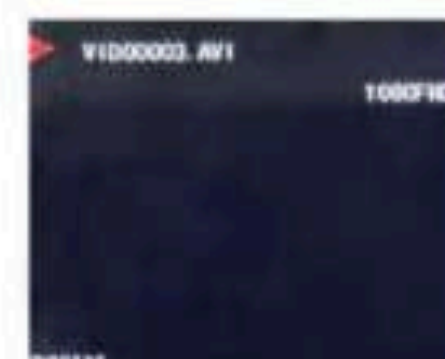

View your videos and photos on the screen


SETTINGS

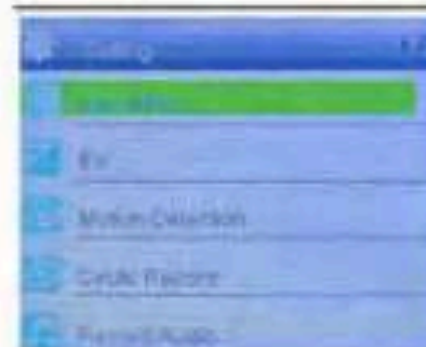

Video, Photo, and System Settings

1. Long-press Ok button to enter into the Menu page;
2. Press Up and Down button to go through each setting, Press Ok to enter into the setting page of each function.

VIDEO SETTINGS

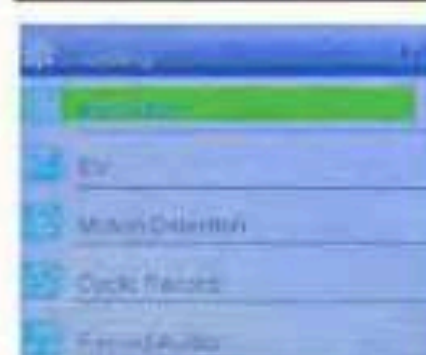


1) Resolution settings

2) **Looping Recording:** 15 Minutes

3) **Exposure:** +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+10.3/0

4) **Date Stamp:** On/off

PHOTO SETTINGS

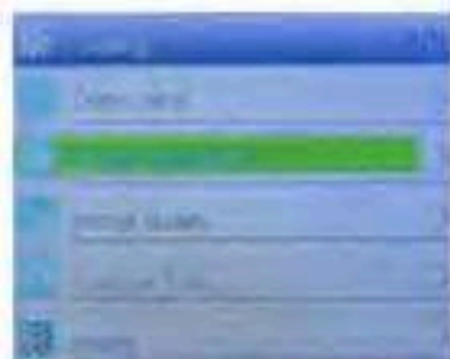

1) **Resolution settings**

2) **Capture Mode:** Single/Self 2S/Self 10S

3) **Quality:** Super Fine/Fine/Normal

4) **Exposure:** +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+10.3/0

5) **Date Stamp:** Off/Date/Date&Time

SYSTEM SETTINGS



1) **Date/Time :** MM/DD/YYYY

2) **Auto Power Off:** 1 Minute/3 Minutes/5 Minutes/Off

3) **Screen Saver :** 1 Minute/3Minutes/5 Minutes/Off

4) **Sounds :** Shutter/Start-up/Beep/Volume

5) **Language :** En/Ch/Fr/Ne/Es/Ita/Po/De/PL/Tu/Ru/Ko

6) **TV Out :** Off/NTSC/PAL

7) **Frequency :** 50HZ/60HZ

8) **Format :** Delete data from camera

9) **Default Setting :** Return setting to defaults

CAPTURING VIDEO + PHOTOS

1) Press Ok button to start/stop recording,

2) Before you make record, you can adjust the video resolution ,picture pixel,Capture mode,etc in the setting page.

STORAGE/MICROSD CARDS

This camera is compatible with 8GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities and use memory card after formatting on the camera.

CHARGING THE BATTERY

If the battery is 0% power, the camera is turn off automatically when making record, the video will save in the memory card.

To charge the battery:


1. Use USB cable to connect the camera with charger to charge the battery;
2. Use USB cable to connect the camera with computer to charge the battery;
3. When it is charging ,the charging light is on ,while it is full, the light will off;
4. The charging time is 3 hours.

Note: Specifications could be subject to modification due to upgrading or updating. Please regard the actual product as the standard form.


Waterproof case operation instructions




There is an arrow on the small switch on the top of the housing. Use your finger to push the small protrusion on the black door lock in the direction indicated by the arrow to open the waterproof housing.

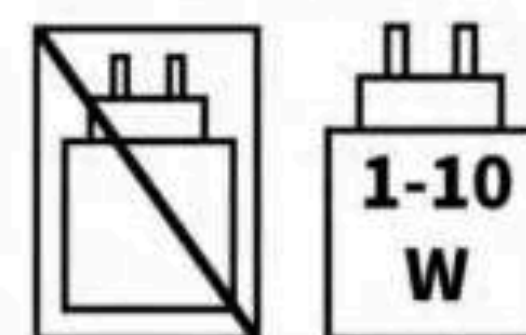

The power delivered by the charger must be between min 1 Watts required by the radio equipment, and max 10 Watts in order to achieve the maximum charging speed.

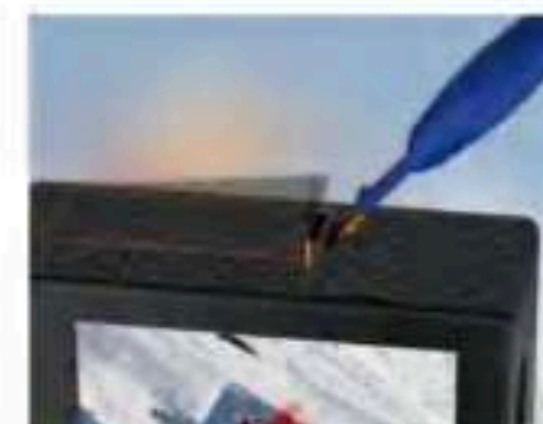

Please use a crowbar to open the battery cover and insert the battery. Do not use excessive force to avoid damaging the battery cover. The crowbar is specially designed to help you open the battery cover.

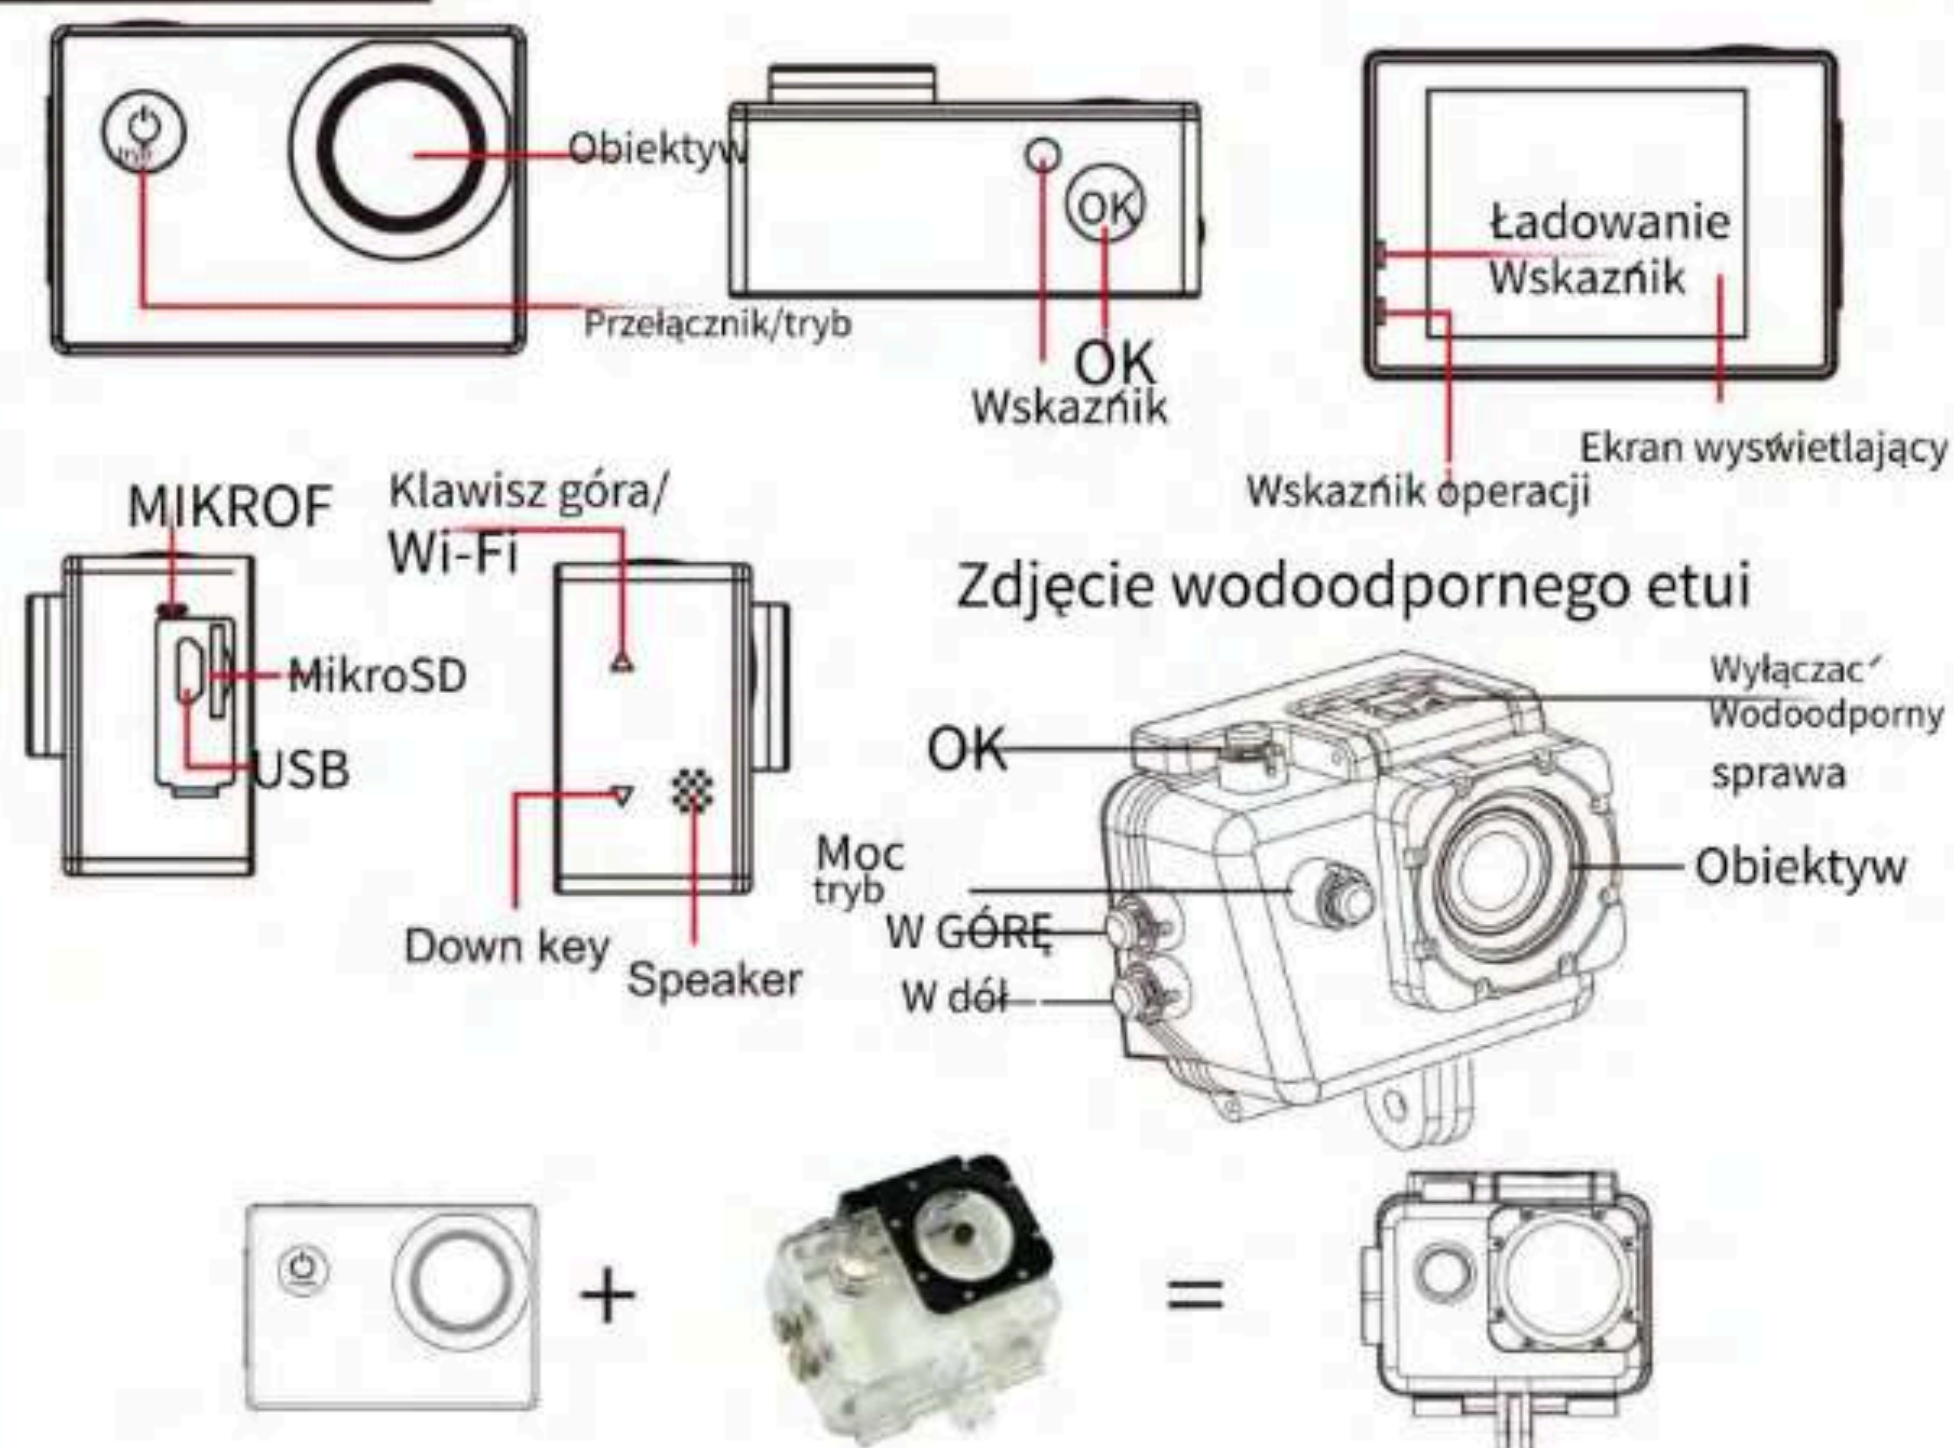

MONTAZ KAMERY

Zamocuj kamerę do hełmów, sprzętu i wyposażenia




ROZPOCZĘCIE

Rozpoczęcie pracy


1. Naciśnij przycisk Przełącznik/Model, aby włączyć kamerę, 1-2 sekundy, aby ją wyłączyć;
2. Naciśnij przycisk Przełącznik/Model, aby przełączyć się między nagrywaniem wideo/robieniem zdjęć/pokazaniem strony z tyłu.

NAGRYWANIE

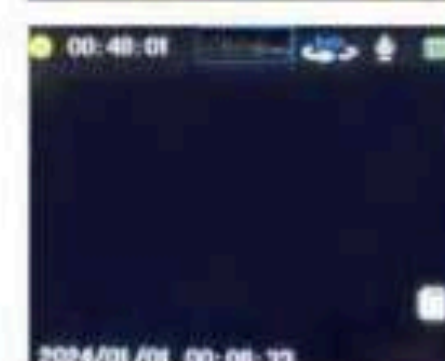


NAGRAJ WIDEO

Zrób zdjęcie

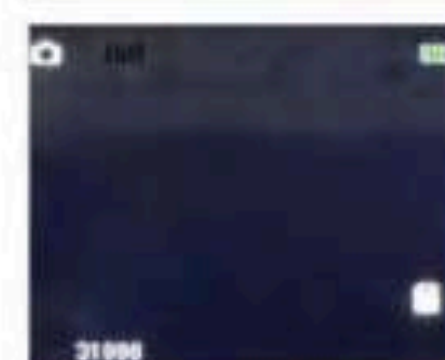


Zrób zdjęcie

ODTWARZANIE NAGRANEGO DZWIĘKU

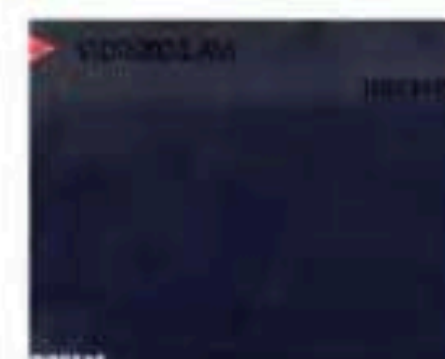

Oglądaj swoje filmy i zdjęcia na ekranie


USTAWIENIA

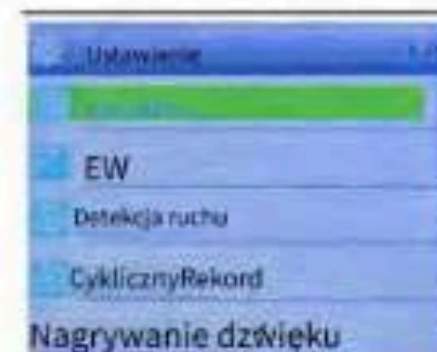

Ustawienia wideo, zdjęć i systemu

1. Długo naciśnij przycisk Ok, aby wejść na stronę Menu;
2. Naciśnij przyciski W górę i W dół, aby przejść przez poszczególne ustawienia. Naciśnij OK, aby wejść na stronę ustawień każdej funkcji.


USTAWIENIA WIDEO

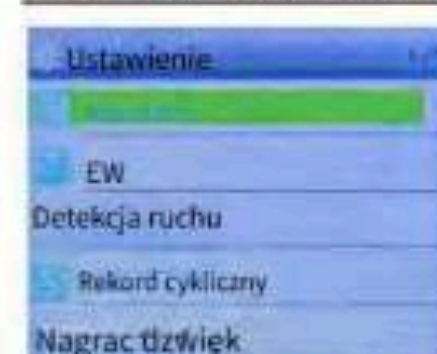

1) Ustawienia rozdzielczości


- 2) Nagrywanie w pętli: 15 minut
- 3) Ekspozycja: +2.0/+1.7/+1.3/+1.0/+0.7/+10.3/0
- 4) Pieczęć daty: Włączony/wyłączony

USTAWIENIA ZDJĘĆ

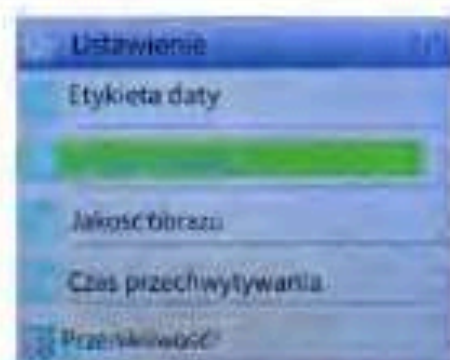

- 1) Ustawienia rozdzielczości
- 2) Tryb zdjęć: Pojedyncze/Autoportret 2S/Autoportret 10S 3) Jakość: Super Fine/Fine/Normal
- 4) Ekspozycja: +2.0/+1.7/+1.3/+1.0/+0.7/+10.3/0
- 5) Pieczęć daty: Wyłączona/Data/Data i godzina

USTAWIENIA SYSTEMOWE

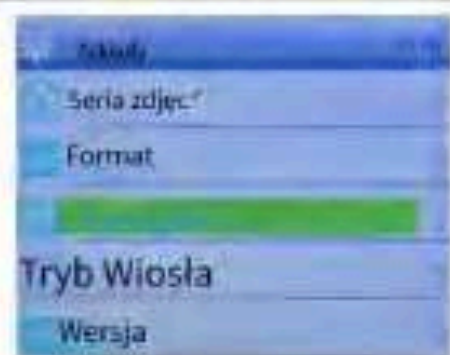

- 1) Data/Czas: MM/DD/YYYY
- 2) Automatyczne wyłączenie zasilania: 1 minuta/3 minuty/5 minut/wyłączone 3) Wygaszacz ekranu: 1 minuta/3 minuty/5 minut/wyłączone 4) Dźwięki: Migawka/Uruchamianie/Sygnał dźwiękowy/Głośność
- 5) Język: Angielski/Chiński/Francuski/Holandia/Hiszpański/Włoski/Portugalski/Niemiecki/Polski/Turecki/Rosyjski/Koreański
- 6) Wyjście TV: Wyłączone/NTSC/PAL
- 7) Częstotliwość: 50HZ/60HZ
- 8) Format: Usuń dane z aparatu
- 9) Ustawienia domyślne: Przywróć ustawienia do wartości domyślnych

NAGRYWANIE VIDEO + ZDJĘĆ

- 1) Naciśnij przycisk Ok, aby rozpocząć/zatrzymać nagrywanie
- 2) Zanim rozpoczniesz nagrywanie, możesz dostosować rozdzielczość wideo, piksele obrazu, tryb nagrywania itp. na stronie ustawień.

KARTY PAMIĘCI MICROSD

Ten aparat jest kompatybilny z kartami pamięci microSD, microSDHC i microSDXC o pojemności 8 GB, 16 GB i 32 GB. Musisz użyć

Karta microSD z klasą szybkości 10. Zalecamy używanie kart pamięci renomowanych marek w celu zapewnienia maksymalnej niezawodności podczas czynności o dużym poziomie wibracji. Użyj karty pamięci po sformatowaniu w aparacie.

ŁADOWANIE AKUMULATORA

Jeśli bateria ma 0% mocy, kamera wyłącza się automatycznie podczas nagrywania, a wideo zostanie zapisane na karcie pamięci.

Aby naładować baterię:


1. Użyj kabla USB, aby podłączyć kamerę do ładowarki i naładować baterię;
2. Użyj kabla USB, aby podłączyć kamerę do komputera w celu naładowania baterii;
3. Podczas ładowania lampka ładowania świeci, a gdy bateria jest pełna, lampka gasnie.
4. Czas ładowania wynosi 3 godziny.

Uwaga: Specyfikacje mogą ulec zmianie ze względu na ulepszenia lub aktualizacje. Prosimy traktować rzeczywisty produkt jako formę standardową.


Instrukcja obsługi wodoodpornego etui



Na małym przełączniku na górze obudowy znajduje się strzałka. Użyj palca, aby nacisnąć mały wystający element na czarnym zamku drzwi w kierunku wskazanym przez strzałkę, aby otworzyć wodoodporną obudowę.

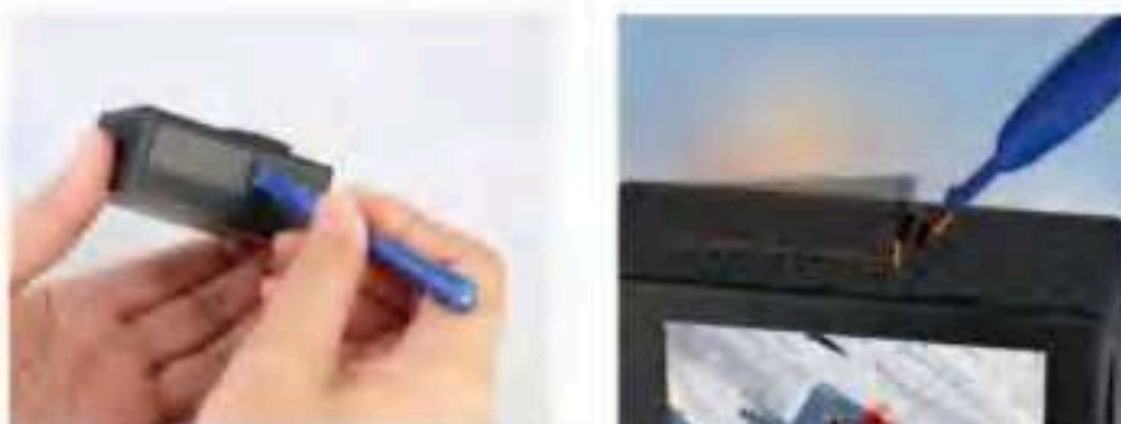

Proszę użyć łopaty, aby otworzyć pokrywę baterii i włożyć baterię. Nie używaj nadmiernej siły, aby uniknąć uszkodzenia pokrywy baterii. Łożek zostało specjalnie zaprojektowane, aby pomóc Ci otworzyć pokrywę baterii.

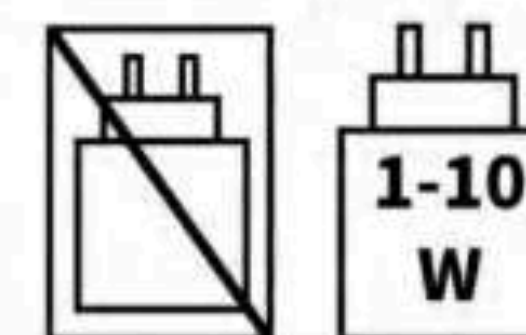

Moc dostarczana przez ładowarkę musi być pomiędzy 1 Wata mocy, a maksymalnie 10 Watów, aby osiągnąć maksymalną prędkość ładowania.