



# MAX SUP PUMP LITE

Návod k použití

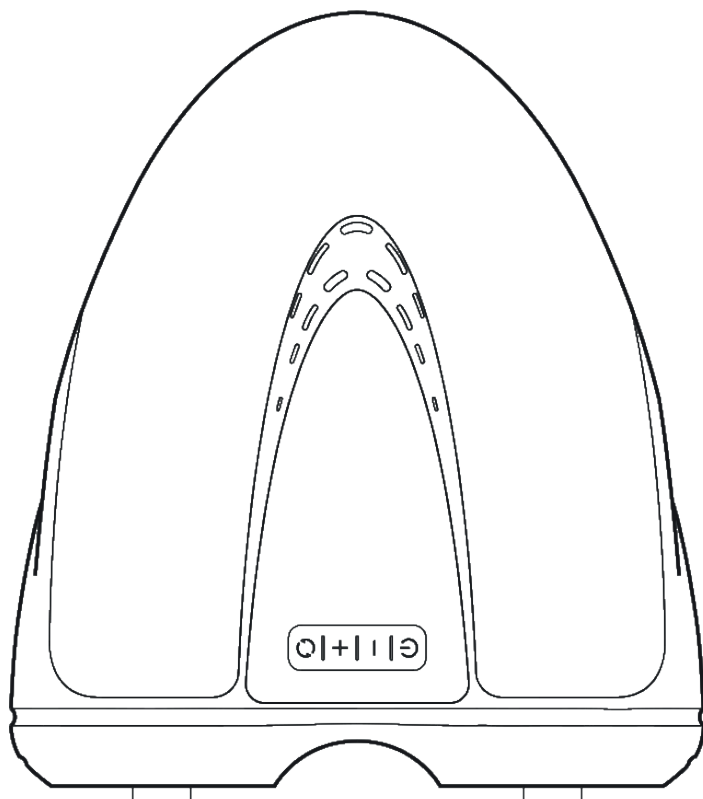


**FLEXTAIL™**

# Obsah balení

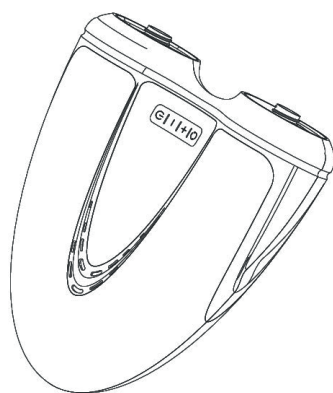

MAX Sup Pump



Koncovka 1



Koncovka 2



Koncovka 3



Koncovka 4



Koncovka 5




Koncovka 6




Vzduchová hadice



12 V DC auto nabíjecí kabel

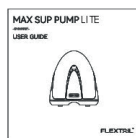


Návod



Obal

# Popis produktu

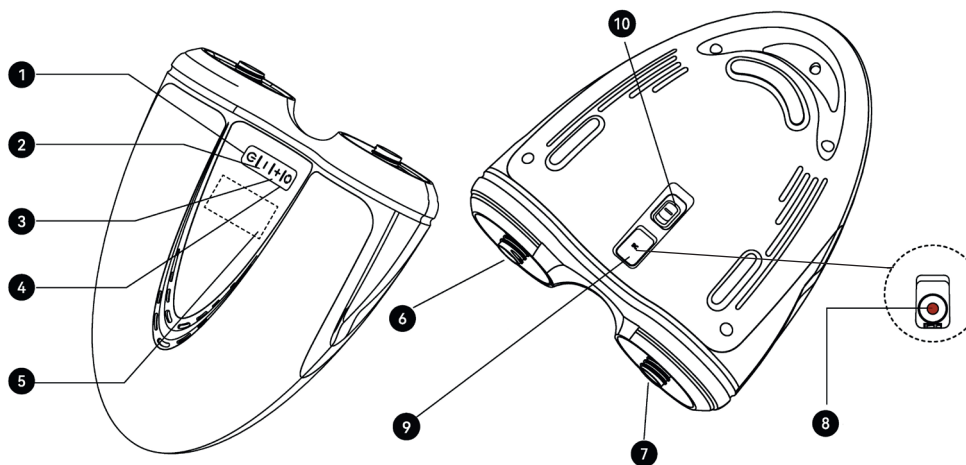


- 1) Tlačítko Start/Stop
- 2) Tlačítko snížení tlaku
- 3) Tlačítko zvýšení tlaku
- 4) Přepínač modu
- 5) Displej

- 6) Vyfukovací otvor
- 7) Nafukovací otvor
- 8) DC port 12 V
- 9) Pryžový kryt spínače
- 10) Hlavní spínač

# Instrukce


## Nafukování

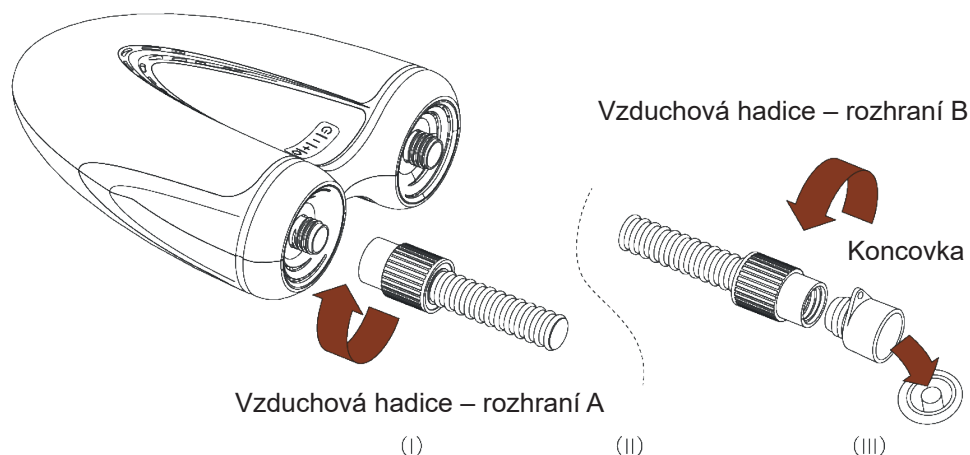

1. Připojte vzduchovou hadici.  
Spojte vzduchovou hadici a rozhraní A. Zvolte vhodnou koncovku a připojte ji na vzduchovou hadici na rozhraní B. Zasuňte koncovku do ventilu nafukovacího předmětu a upevněte.
2. Zapojte 12 V DC port do zásuvky a zapněte hlavní spínač proti nechtěnému spuštění do pozice zapnuto. Displej se rozsvítí.
3. Stiskněte přepínač modu a vyberte z nabídky modů – SUP, KITE nebo MAT. Dlouhým stiskem přepínače modu zvolte jednotky PSI nebo BAR.
4. Tlačítka Zvýšení nebo Snížení nastavte zamýšlený tlak (0,3 – 20 PSI \ 0,02 BAR – 1,38 BAR). V modu MAT regulují tlačítka Zvýšení a Snížení času nafukování 1-10 min.
5. Potom stiskněte tlačítko Start/Stop a začněte nafukovat.
6. Stiskněte tlačítko Start/Stop k ukončení nafukování.
7. Když tlak vzduchu dosáhne přednastavené hodnoty (v modu SUP a KITE), pumpa se vypne automaticky. (V modu MAT se pumpa vypne po dosažení přednastaveného času.)
8. Po skončení nafukování stiskněte Hlavní spínač. Displej zhasne.

# Instrukce

## Vyfukování

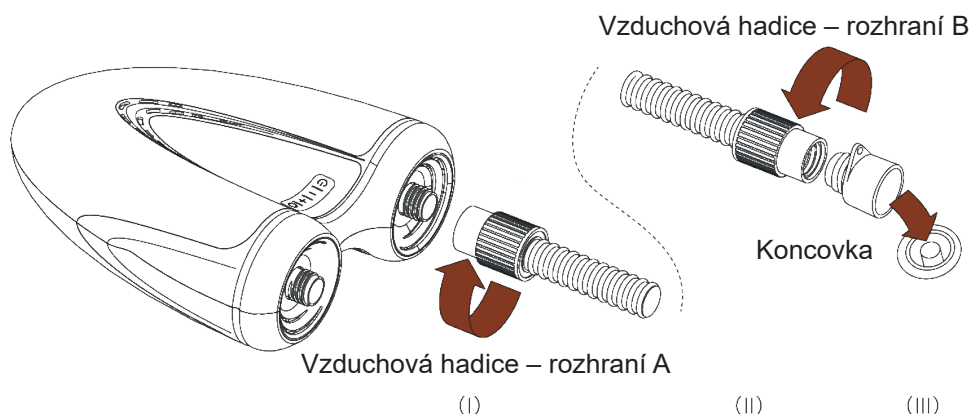

Připojte vzduchovou hadici.

Spojte vzduchovou hadici a rozhraní A. Zvolte vhodnou koncovku a připojte ji na vzduchovou hadici na rozhraní B. Zasuňte koncovku do ventilu vyfukovacího předmětu a upevněte.

1. Zapojte 12 V DC port do zásuvky a zapněte hlavní spínač proti nechtěnému spuštění do pozice zapnuto. Displej se rozsvítí.
2. Stisknutím tlačítka Start/Stop začnete vyfukovat. (Stisknutím přepínače modu nastavte funkci MAT a zvolte čas vypnutí.)
3. Sledujte postup vyfukování. Ve chvíli, kdy je všechn vzduch vyčerpán, hned vypněte pumpu tlačítkem Start/Stop. Tím zabráníte přehřátí pumpy.
4. Po skončení vyfukování vypněte Hlavní spínač. Displej zhasne.

# Upozornění

---

1. Pumpa není hračka. Skladujte ji mimo dosah dětí.
2. Pumpa je vhodná pro paddleboardy a jiné nafukovací předměty vyžadující tlak do 20 PSI.
3. Po nafouknutí paddleboardu (nebo jiného předmětu) počkejte deset minut, než pumpu znovu použijete.
4. Před použitím pumpu zkontrolujte. Najdete-li nějakou abnormalitu, pumpu nepoužívejte.
5. Pokud se během nafukování pumpa přehřívá nebo vydává neobvyklý zvuk, hned ji vypněte.
6. Během nafukování mějte pumpu pod kontrolou, abyste zabránili nehodě.
7. Ujistěte se, že nasávací a výstupní otvor pumpy nejsou zakryté.
8. Zabraňte vniknutí vody nebo cizích předmětů do nasávacího a výstupního otvoru.
9. K čištění nepoužívejte koncentrované chemikálie a čistiidla.
10. Nenechávejte pumpu na příliš chladném, příliš horkém nebo příliš vlhkém místě.
11. Kdykoli je 12V port zapojený do zásuvky, indikátor nabití vždy signalizuje plné nabití baterie.
12. Pokud využíváte k napájení pumpy baterii automobilu, nastartujte jej před spuštěním pumpy, abyste zabránili vybití autobaterie.

## Řešení problémů

---

1. Zkontrolujte, zda není na povrchu pumpy voda nebo jiná tekutina.
2. Zkontrolujte, zda není zaseknutý větrák.
3. Opakovaně pumpu zapněte a vypněte.
4. Stále máte otázky? Obráťte se na svého prodejce FLEXTAIL nebo na [service@flectailgear.com](mailto:service@flectailgear.com)

## Náhradní díly

---

Kromě vzduchové hadice, koncovek a nabíjecích kabelů nemá pumpa žádné náhradní díly.

## Technické parametry

---

|                               |                                                                                                                                                                          |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Váha                          | 1,258 kg                                                                                                                                                                 |
| Rozměry                       | 28,1 x 24,7 x 10,2 cm                                                                                                                                                    |
| Maximální tlak při vyfukování | 4,4 kPa                                                                                                                                                                  |
| Rychlost při vyfukování       | 360 l/min                                                                                                                                                                |
| Maximální tlak při nafukování | 20 PSI                                                                                                                                                                   |
| Rychlost při nafukování       | 360 & 90 l/min.                                                                                                                                                          |
| Výkon                         | 12 W                                                                                                                                                                     |
| Jmenovitý proud               | 10 A                                                                                                                                                                     |
| Certifikace                   | RoHS   |

## Záruční podmínky

---

Garantujeme jeden rok od data nákupu, a to pouze původnímu maloobchodnímu kupujícímu, že naše výrobky neobsahují vady materiálu a zpracování. Pokud kupující zjistí skrytou vadu, měl by produkt vrátit na místo nákupu. V případě, že to není možné, vraťte nám výrobek na uvedenou adresu. Produkt bude opraven nebo vyměněn podle našeho uvážení. To je rozsah naší odpovědnosti podle této záruky a po vypršení příslušné záruční doby veškerá taková odpovědnost zanikne. Vyhrazujeme si právo požadovat doklad o koupi u všech záručních reklamací.

## Vyloučení záruky

---

Neručíme za produkty proti běžnému opotřebení, neoprávněným úpravám nebo změnám, nesprávnému použití, nesprávné údržbě, nehodě, nesprávnému použití, nedbalosti, poškození nebo pokud je výrobek používán k účelu, pro který nebyl určen.

Tato záruka nahrazuje všechny ostatní záruky výslovné nebo předpokládané, včetně, ale nikoli výhradně, předpokládaných záruk obchodovatelnosti nebo vhodnosti pro určitý účel. (Některé státy nedovolují vyloučení nebo omezení náhodných nebo následných škod nebo umožňují omezení doby předpokládané záruky, takže výše uvedené výjimky se na vás nemusí vztahovat.)

# Záruční karta

---

| Informace o produktu | Informace o klientovi |
|----------------------|-----------------------|
| Model                | Jméno                 |
| Datum nákupu         | Telefon               |
| Barva                | E-mail                |
| Místo nákupu         | Adresa                |
| Poznámka             | Poznámka              |

**Vyrobeno v Číně:**

Shanghai Flextail Technology Co., Ltd,  
[www.flextail.com](http://www.flextail.com)

**Distributor:**


Ing. Jiří Najman, IČ: 41440056  
Masarykova 885, 252 63 Roztoky  
tel.: +420 608 003 461  
[shop@kajakarshop.cz](mailto:shop@kajakarshop.cz), [www.flextail.cz](http://www.flextail.cz)

**FLEXTAIL**™

# MAX SUP PUMP Lite


-OV05-NR01-2-

## USER GUIDE

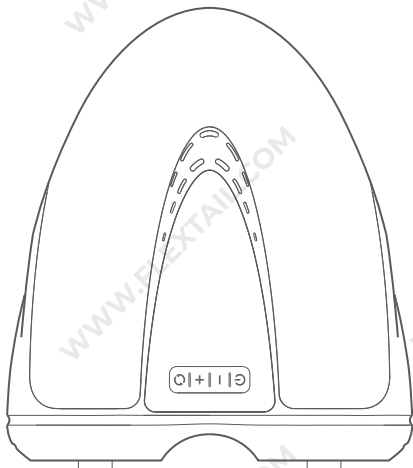

**FLEXTAIL™**

# PACKAGE CONTENT



Nozzle 1



Nozzle 2



Nozzle 3



Nozzle 4



Nozzle 5



Nozzle 6




Nozzle 7




Air hose



12V DC Car Connector

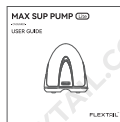


Manual




Storage Bag

# PRODUCT DETAILS

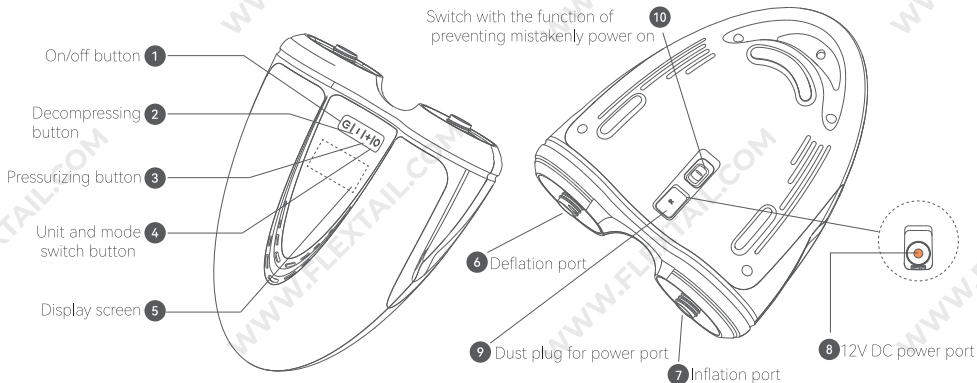


# INSTRUCTION

## Inflation

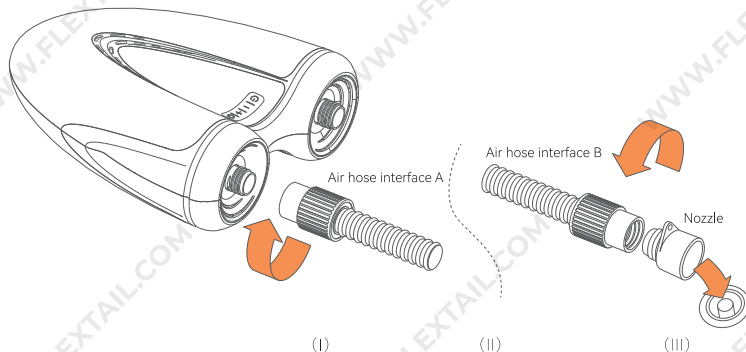

01. Connect the air hose:  
Tighten the air hose interface A and inflation port (I). Select a suitable air nozzle, and tighten it with the air hose interface B(II), insert the air nozzle into the inflation valve and tighten it (III).
02. Connect the bottom 12V DC power port to the power supply (built-in battery, can work without external power supply), and turn on the switch with the function of anti-mistakenly power on, the screen will light up.
03. Press the unit and mode switch button to select SUP, KITE, or MAT modes. Long press the unit and mode switch button to select PSI or BAR unit.
04. Press the Add or Subtract key to set the desired pressure (0.3PSI-20PSI/0.02BAR-1.38BAR), in MAT mode, the Add and Subtract keys are used to adjust the countdown time between 1-10min.
05. After completing the above steps, press the Start/Stop key to start inflation.
06. Press the Start/Stop key to stop inflation.
07. When the air pressure reaches the preset pressure(SUP and KITE mode), the pump will stop automatically (In MAT mode, when the time reaches the set time, the pump will stop).
08. After the inflation is completed, press the switch that anti-mistakenly power on to shut down and the screen will go out.

## Deflation

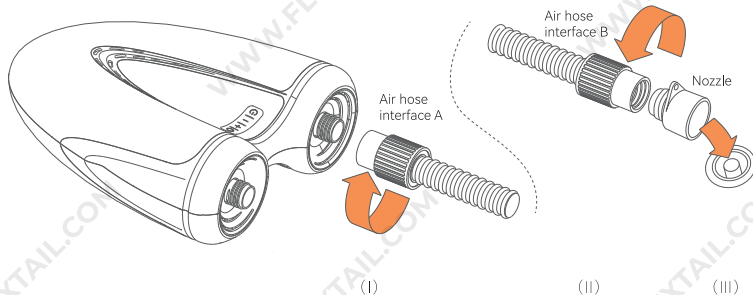

01. Connect the air hose:  
Tighten the air hose interface A and inflation port (I). Select a suitable air nozzle, and tighten it with the air hose interface B(II), insert the air nozzle into the deflation valve and tighten it (III).
02. Connect the bottom 12V DC power port to the power supply (built-in battery, can work without external power supply) turn on the switch with the function of anti-mistakenly power on, and the screen will light up.
03. Press the Start/Stop key to start deflation (Press the unit and mode switch button to select the MAT function before deflation to set the stop time).
04. During deflation, please pay attention to the progress of deflation. When the gas inside the product has been pumped out, please immediately press the switch to stop the air pump. This will avoid overheating of the air pump.
05. After the deflation is completed, press the switch that anti-mistakenly power on to shut down and the screen will go out.

## CAUTIONS

---

01. The pump is not a toy. Please keep the product away from children and keep it out of reach.
02. This product is suitable for SUP Boards with pressure lower than 20PSI, or other inflatable products with pressure lower than this.
03. After inflating a SUP Board or other similar pressure product, please wait 10 minutes before using it again.
04. Please check the pump before use. If any abnormality is found, do not use it.
05. If there is abnormal noise or high temperature during inflation, please stop using it immediately.
06. Please do not leave it during inflation to avoid accidents.
07. Please ensure that the pump inflation and deflation ports are not blocked all the time.
08. Do not allow water or foreign matter to enter the inflation or deflation port.
09. Do not use strong chemicals or cleaners during cleaning.
10. Do not place the pump in a place that is too cold, too hot, and too wet.
11. When 12V DC power supply is used, the power indicator is always displayed as fully charged, which is regardless of the battery power.
12. When using the fuel truck power supply to power the pump, please start the car first and then connect the power supply to avoid exhausting the car battery.

## TROUBLESHOOTING

---

If the product does not work

01. Please check if there is water or other liquid on the surface.
02. Check whether the fan blade is stuck.
03. Press the switch repeatedly.
04. Other questions? Please contact FLEXTAIL Technology agents or contact us: [service@flectailgear.com](mailto:service@flectailgear.com).

## RESERVE PIECE

---

In addition to a replaceable air hose, air nozzle, and power line, the pump has no other parts for users to replace.

## PARAMETER INFORMATION

---

|                    |                                                                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Weight             | 1.258kg                                                                                                                                                                  |
| Dimension          | 28.1*24.7*10.2cm                                                                                                                                                         |
| Deflation pressure | 4.4kPa                                                                                                                                                                   |
| Deflation speed    | 360L/min                                                                                                                                                                 |
| Inflation pressure | 20psi                                                                                                                                                                    |
| Certification      | RoHS   |

|                 |                    |
|-----------------|--------------------|
| Inflation speed | 360L/min & 90L/min |
| Rated power     | 120W               |
| Rated current   | 10A                |

## WARRANTY TERMS

---

For the defects in material and workmanship of the product, the original retail purchaser of this product will be provided a warranty service for one year based on purchase data by FLEXTAIL.

If the Buyer discovers a covered defect, the buyer should return the product to the place of purchase. If this is not available, please return the product to the address specified by us. We will repair or replace the modified product at our discretion following the warranty terms. We assume the above responsibilities in accordance with the essential guarantee terms during the warranty period. After the expiration of the warranty, the service will no longer be provided. We reserve the right to require proof of purchase for all warranty applications.

## WARRANTIES EXCLUSIONS

---

We do not warranty products against normal wear, unauthorized modifications or alternations, improper use, improper maintenance, accident, misuse, negligence, damage, or if the Product is used for a purpose for which it was not designed. This warranty gives you specific rights, and you may also have other rights which vary under the laws of your location. Except for expressly stated in this warranty, we shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of Product. This warranty is instead of all other warranties, expressed or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose (some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on the duration of an implied warranty, so the above exclusions may not apply to you).

---

## GUARANTEE CARD

---

| Product Information | Client Information |
|---------------------|--------------------|
| Model               | Name               |
| Purchase Date       | Tel                |
| Color               | Email              |
| Purchase Area       | Address            |
| Remark              | Remark             |

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

WWW.FLEXTAIL.COM

**FLEXTAIL™**