

INSTRUKCJA UŻYTKOWANIA HUŚTAWKA "Benjamin"

Przed rozpoczęciem użytkowania należy dokładnie zapoznać się z niniejszą instrukcją.

Produkt należy użytkować oraz czyścić zgodnie z poniższą instrukcją. Jeżeli produkt został uszkodzony lub jakiś z elementów nie działa poprawnie należy niezwłocznie zaprzestać korzystania z produktu. Producent nie ponosi odpowiedzialności za korzystanie z produktu niezgodnie z przeznaczeniem oraz poniższą instrukcją.

Ważne! Instrukcję należy zachować na przyszłość, by w razie potrzeby do niej wrócić.

Elementy opakowania (w tym karton, torby foliowe itd.) nie są zabawkami. Należy trzymać poza zasięgiem dzieci, istnieje ryzyko uduszenia, bądź uszczerbku na zdrowiu. Produkt zawiera małe elementy, które mogą zostać połknięte przez dzieci.

Środki ostrożności!

- Maksymalne obciążenie nie powinno przekraczać 200 kg.
- Używać wyłącznie pod nadzorem osoby dorosłej. Nie pozostawiać dzieci bez opieki podczas użytkowania!
- Wyłącznie do użytku domowego. Nie nadaje się do użytku na komercyjnych placach zabaw ani w żłobkach.
- Upewnić się, że wokół huśtawki, w promieniu co najmniej 1,8 metra, nie ma twardych lub ostrych przeszkód (ścian, ogrodzeń, gałęzi, betonu, asfaltu). Powierzchnia pod huśtawką powinna amortyzować ewentualne upadki (np. trawa, piasek, specjalna nawierzchnia syntetyczna).







Czyszczenie:

- Huśtawkę należy regularnie przecierać wilgotną szmatką. W przypadku silniejszych zabrudzeń można użyć łagodnego detergentu i wody, a następnie dokładnie spłukać.
- Metalowe elementy należy regularnie sprawdzać pod kątem rdzy i korozji, a w razie potrzeby czyścić i smarować, aby zapewnić płynne działanie i zapobiec dalszym uszkodzeniom.

PRODUCENT
GRUPA-MG MIKOŁAJ GOCKOWIAK
Ciele, ul. Niedźwiedzia 11
86-005 Białe Błota
Wyprodukowano w ChRL


LISTA PRODUKTÓW

		
Siedzisko huśtawki 1x	Lina do zawieszenia 2x	Klucz imbusowy 1x
		
Klucz płaski 1x	Zestaw śrub 4x	Nakrętki 4x
		
Podkładki 4x		

Montaż huśtawki

Należy wcześniej zwrócić uwagę na następujące kwestie:


1. Sprawdź, czy wszystkie części są nienaruszone i kompletne.
2. Zalecana wysokość belki huśtawki to około 2,4 metra.
3. Upewnij się, że wokół huśtawki są co najmniej 4 metry wolnej przestrzeni.

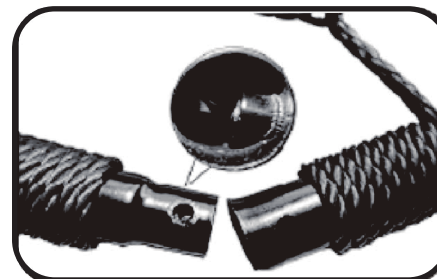

KROK 1 Znajdź 4 otwory na nity i połącz je.



KROK 2 Włóż śruby imbusowe, umieść nakrętkę imbusową u dołu i dokręć kluczem. Powtórz 4 razy dla sąsiednich połączeń.

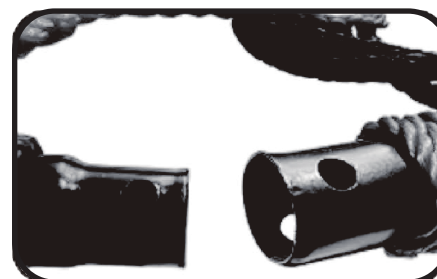


KROK 3 Znajdź 4 pozostałe połączenia, które również powinny przylegać do siebie.



KROK 4 Połącz 4 pozostałe otwory.



KROK 5 Zamontuj śruby do lin nośnych, umieść nakrętkę imbusową u dołu i dokręć kluczem. Powtórz 4 razy dla sąsiednich połączeń.

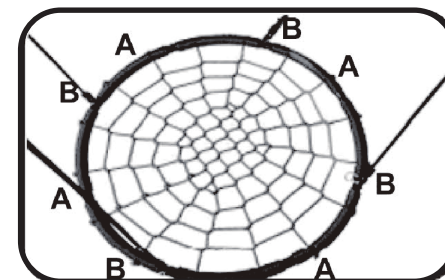

KROK 6 Zakończ montaż siedziska (upewnij się, że liny przylegają do siebie).

INSTRUCTIONS FOR USE SWING "Benjamin"

Before use, please read this manual thoroughly..

This product should be used and cleaned in accordance with the instructions below. If the product is damaged or any component is not functioning properly, discontinue use immediately. The manufacturer is not responsible for any use of the product other than its intended purpose or the instructions below..

Important! Please retain this manual for future reference.

Packaging components (including cardboard, plastic bags, etc.) are not toys. Keep out of reach of children; there is a risk of suffocation or injury. This product contains small parts that can be swallowed by children.

Precautions!

- The maximum load should not exceed 200 kg.
- Use only under adult supervision. Do not leave children unattended during use!
- For home use only. Not suitable for use in commercial playgrounds or daycare centers.
- Ensure that the swing is free of hard or sharp obstacles (walls, fences, branches, concrete, asphalt) within a radius of at least 1.8 meters. The surface under the swing should be sufficient to cushion any falls (e.g., grass, sand, special synthetic surfaces).










Cleaning:

- The swing should be wiped regularly with a damp cloth. For heavier stains, use a mild detergent and water, then rinse thoroughly.
- Metal components should be regularly inspected for rust and corrosion, and cleaned and lubricated as necessary to ensure smooth operation and prevent further damage.

PRODUCER
GRUPA-MG MIKOŁAJ GOCKOWIAK
Ciele, ul. Niedźwiedzia 11
86-005 Białe Błota
Made in China


PRODUCT LIST

		
Swing Seat 1x	Suspension Rope 2x	Hexagon Wrench 1x
		
Spanner 1x	Screw 4x	Nut 4x
		
Spacer 4x		

Assembling The Swing

Please note the following beforehand:


1. Check that all parts are intact and complet.
2. The recommended height of the swing beam is about 2,4 m.
3. Ensure that there is at least 4 m of space around the swing.

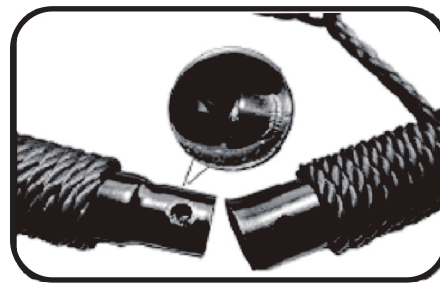


STEP 1: Find the 4 rivet holes and connect them.



STEP 2: Insert the hex screws, place a hex nut at the bottom, and tighten with a spanner. Repeat 4 times for the adjacent connections.

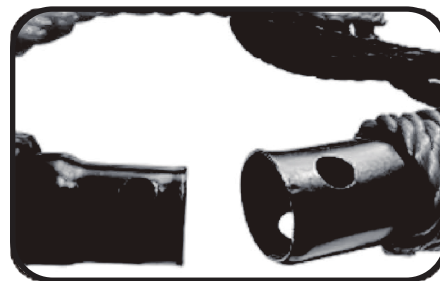


STEP 3: Locate the 4 remaining connections, which should also be adjacent to each other.

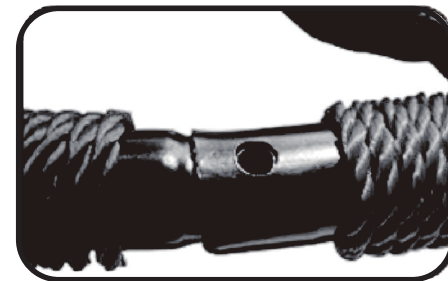

STEP 4: Connect the remaining 4 holes.



STEP 5: Install the screws for the suspension ropes, place a hex nut at the bottom, and tighten with a spanner. Repeat 4 times for the adjacent connections.

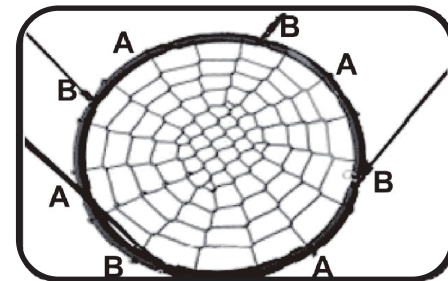

STEP 6: Finish the seat assembly (make sure the ropes are adjacent to each other).