

Transfer the highchair into a junior seat:

It is super easy to make it be a junior seat by removing the lower seat legs.



Use of seat belt (Five-point safety belt):

Please make sure to fasten the seat belt when your kids are sitting on the chair.

Maintenance and Cleaning:

1. In order to extend the service life of the highchair, you can use warm water to gently wipe the seat surface.
2. Do not use abrasive cleaners, so as to avoid damage to the surface of the chair.
3. When not using the chair, keep it in a dry and ventilated place out of direct sunlight.
4. Please periodically check the tightness of parts such as screws and nuts to ensure safe use.

P4

ECO TOYS

Installation Manual

Highchair & Junior Seat 2-in-1

Please read this manual carefully before use, keep it for future reference.




We reserve the right to change and interpret all content of the product.

P1

Spare parts lists:

1. Seat (1)
2. Dinner Plate (2)
3. Upper Seat Legs (4)
4. Lower Seat Legs (4)
5. Foot Touch Parts (4)
6. Foot Pedal (1)
7. Screws/Nuts (2)

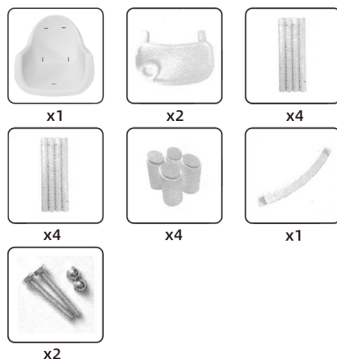

Warnings:

1. The chair is not suitable for children under 6 months.
2. Please make sure the chair is completely installed, solid and reliable, before use.
3. Please fasten the seat belt of your kids and adjust seat belt to an appropriate length.
4. Please always accompany your kid when he/she is sitting in the chair.
5. Standing on the seat, foot pedal is strictly prohibited.
6. Do not use the dining chair in uneven areas.
7. Do not put your kids onto the dinner plates.

P2

Instructions:

1. Cover the PU cushion onto the seat.
2. Fix the five-point safety belt to the seat.



3. Take out the upper seat legs.
4. Select the two legs with more holes and buckle them into the front side.
5. Then buckle the other two legs into the back side.
6. Take out the lower seat legs and buckle them onto the upper legs.



7. Align the holes of the pedal with the screw holes on the iron tube and lock it with a screw and nut.
8. Align the dinner plate with the buckles on both sides of the seat until the plate is completely stuck.



9. Add the foot touch parts onto the seat legs, make sure the angles fit perfectly with ground.



(Finished product drawing)

P3

Zmiana wysokiego krzesła w niski fotelik dla dzieci.

To bardzo proste, wystarczy zdemontować dolne części nóg krzesła.



Korzystanie z pasów bezpieczeństwa:

Upewnij się, że pasy są odpowiednio zapięte gdy dziecko korzysta z krzesła.

Konserwacja i czyszczenie:

1. Do czyszczenia używaj ciepłej wody oraz delikatnej ściarki
2. Aby uniknąć uszkodzeń powierzchni, nie używaj silnych środków czyszczących
3. Przechowuj krzesło w suchym, wentylowanym pomieszczeniu, nie wystawiaj go na długotrwałe działanie słońca.
4. Systematycznie sprawdzaj wszystkie połączenia, zwróć uwagę na poprawność dokręcenia śrub i nakrętek.

MULTISTORE ECOTOYS Krystian Ślebioda
62-080 Sady ul. Logistyczna 31,
Tarnowo Podgórne

<https://ecotoys.eu/>

P4

ECO TOYS

Instrukcja montażu i użytkowania

Krzesło do karmienia 2 w 1




Przed użyciem uważnie przeczytaj instrukcję i zachowaj ją na przyszłość.

P1

Lista części:

1. Siedzisko
2. Tacka
3. Górna część nóg
4. Dolna część nóg
5. Stopki zabezpieczające
6. Podnóżek
7. Śruby i nakrętki

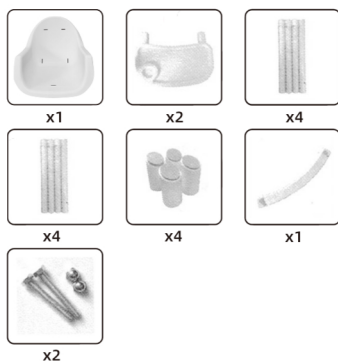

OSTRZEŻENIA:

1. Krzesło przeznaczone jest dla dzieci powyżej 6 miesiąca życia
2. Przed użyciem upewnij się, że krzesło jest właściwie złożone.
3. Zapnij pasy bezpieczeństwa odpowiednio je naciągając.
4. Podczas korzystania z krzesła zwracaj uwagę na bezpieczeństwo dziecka.
5. Stawanie na siedzisku lub podnóżku jest zabronione.
6. Nie używaj krzesła na nierównych powierzchniach.
7. Nigdy nie sadzaj dziecko na tacy.

P2

INSTRUKCJA

1. Nałóż poszycie na siedzisko
2. Zamontuj pasy bezpieczeństwa



3. Wyjmij górne części nóg
4. Wybierz 2 nogi z większą ilością otworów i osadź je w przednich otworach siedziska
5. Dwie pozostałe nogi zamontuj w tylnych otworach siedziska.
6. Wyjmij dolne części nóg i połącz je z osadzonymi w siedzisku nogami.



7. Dopasuj podnóżek do odpowiednich otworów i przymocuj je śrubami.
8. Zamontuj tackę, tacka posiada zatrzaski po obu stronach.



9. Dopasuj stopki zabezpieczające do nóg i upewnij się, że są osadzone pod właściwym kątem.



(Finished product drawing)

P3