

WAŻNE

Instrukcja powinna zostać przeczytana i zrozumiana przez osobę montującą jak i korzystającą z uchwytu. Instrukcję należy zachować do wglądu na przyszłość.

PRZED UŻYCIEM

Proszę upewnić się, że zestaw posiada wszystkie części potrzebne do montażu. Jeśli brakuje części lub któraś jest wadliwa, należy skontaktować się z lokalnym sprzedawcą.

WAŻNA UWAGA DOTYCZĄCA KOŁKÓW I ŚRUB MONTAŻOWYCH

Kołki montażowe i śruby dołączone do zestawu nie gwarantują poprawnego montażu na wszystkich typach ścian. **Na osobie montującej uchwyt ciąży odpowiedzialność za dobór typu, ilości oraz wielkości kołków montażowych oraz śrub.** Zły dobór kołków i śrub do rodzaju ściany i wagi telewizora lub ich błędny montaż może doprowadzić do wyrwania uchwytu ze ściany co będzie skutkowało uszkodzeniem telewizora, ściany, otoczenia **oraz stanowi ryzyko dla zdrowia i życia ludzkiego.**

UWAGA


- Nie rozpoczynaj montażu produktu zanim nie przeczytasz i nie zrozumiesz instrukcji oraz ostrzeżeń zawartych w niniejszej dokumentacji.
- Uchwyt powinien być instalowany wyłącznie przez osoby posiadające podstawowe umiejętności w zakresie prac montażowych oraz rozumiejące instrukcję montażu.
- Niewłaściwy montaż i korzystanie z uchwytu może spowodować uszkodzenie sprzętu, a także może być niebezpieczne dla ludzi. Producent nie ponosi odpowiedzialności za uszkodzenia powstałe przez źle zamontowany uchwyt lub nieprawidłowe z niego korzystanie.
- Dla bezpieczeństwa korzystaj z pomocy drugiej osoby lub odpowiedniego sprzętu podczas podnoszenia i rozmieszczania urządzeń.
- Upewnij się, że ściana, do której zostanie przymocowany uchwyt, utrzyma ciężar uchwytu z zamocowanym urządzeniem.
- Przed rozpoczęciem montażu należy upewnić się, że w ścianie na której ma zostać zamontowany uchwyt, nie ma kabli, rur lub innych instalacji.
- "Przekręcenie" wkrętów może uszkodzić kołki montażowe, znacząco redukując udźwig uchwytu.




INSTRUKCJA MONTAŻU UCHWYTU ŚCIENNEGO



LXLCD160

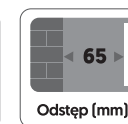

Schemat uchwytu


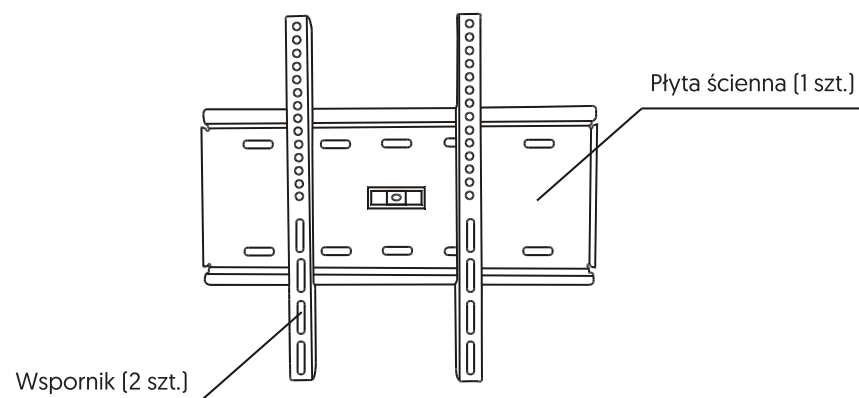


WYMAGANE NARZĘDZIA


Ołówek	Śrubokręt krzyżakowy	Klucz nasadowy	Taśma miernicza	Młotek
Wiertarka	Wiertło [Ø 8mm]			

Krok 1 (montaż płytki ściennej)


1

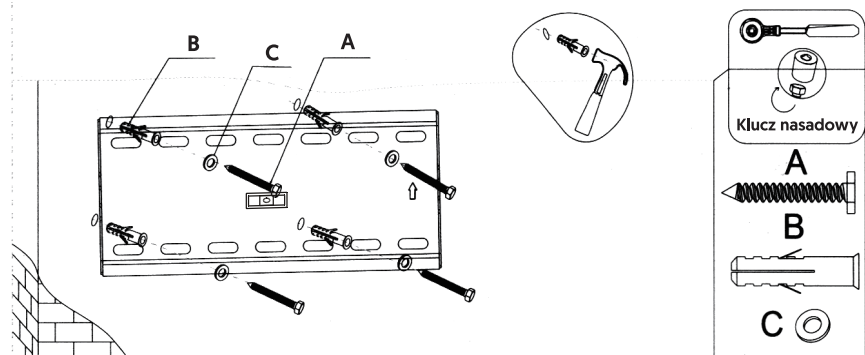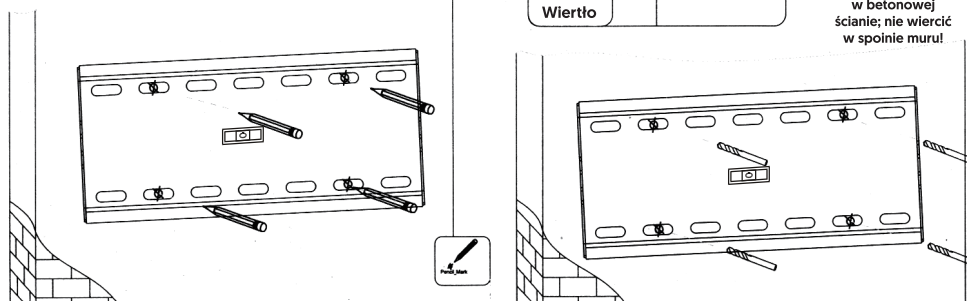

Krok 2 (montaż wsporników do telewizora)

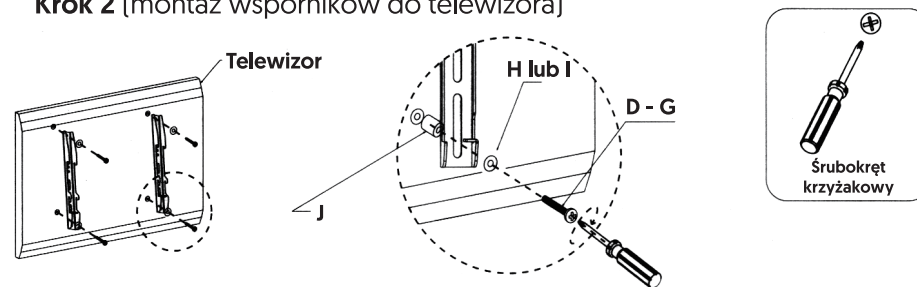

Krok 3 (montaż telewizora do płytki ściennej i zabezpieczenie)

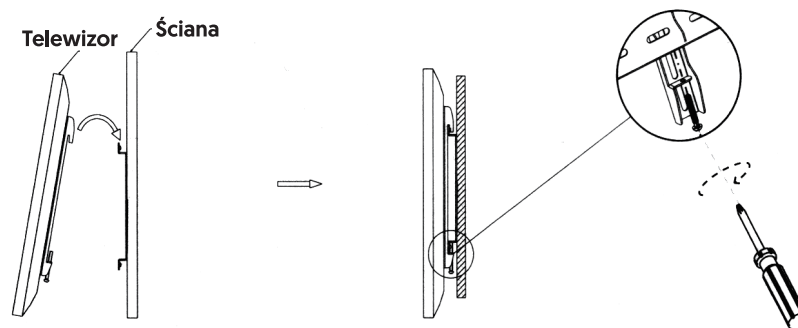

Wyprodukowano w ChRL dla Max4
ul. Przemysłowa 58, 08-410 Woła Rębkowska

Pierwiastki oraz związki chemiczne zawarte w uchwycie mogą mieć negatywny wpływ na środowisko naturalne i zdrowie ludzi. Zużyty sprzęt oznaczony symbolem przekreślonego kosza nie może być umieszczany w pojemnikach na odpady komunalne. Taki sprzęt podlega zbiorce i recyklingowi. Obowiązki wynikające z ustawy o zużytym sprzęcie elektrycznym i elektronicznym w imieniu przedsiębiorcy, zgodnie z odpowiednią umową, przejęła Organizacja Odzysku.

IMPORTANT

This manual should be read carefully by person who will assemble the wall mount and by user. Keep this manual for future reference.

BEFORE USE

Please make sure that all of the hardware has been included with your mount. In case when part is missing or broken, you should contact with your local dealer.

IMPORTANT NOTICE REGARDING BOLTS AND SCREWS MONTAGE

Bolts and screws included in the kit do not guarantee correct installation on all types of walls. **The person installing the bracket is responsible for the selection of the type, number and size of the mounting bolts and screws.** Poor selection of bolts and screws to the wall type and weight of the TV set or their incorrect installation may lead to the bracket being torn out from the wall, which will result in damage to the TV set, wall, environment **and poses a risk to human health and life.**

NOTICE





- Do not start the product assembly until you have read and understand the instructions and warnings contained in this documentation.
- The wall mount should be installed only by people who have basic skills in assembly work and understand assembly instructions.
- Improper installation and use of the wall mount may cause damage to the equipment and may be dangerous to people. The manufacturer is not liable for damages caused by incorrectly mounted or incorrect use.
- For safety, use the help of a second person or appropriate equipment when lifting and placing equipment.
- Make sure that the wall to which the handle will be attached will support the weight of the wall mount with the attached device.
- Make sure that no electrical cables, pipes or other installations are located within the wall.
- "Overtightening" the screws can damage the mounting pins, significantly reducing the lifting capacity of the wall mount.




LED TV WALL MOUNT MANUAL



LXLCD160

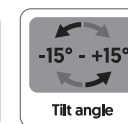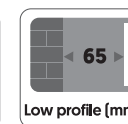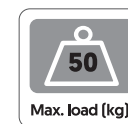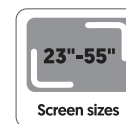

Wall mount diagram


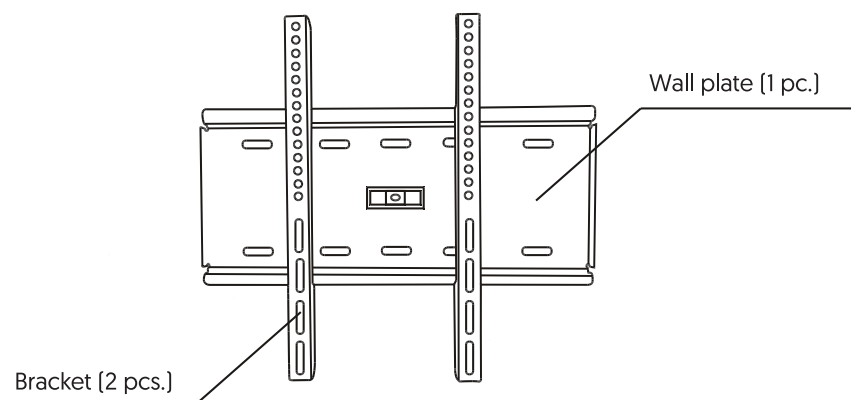


TOOLS NEEDED


Pencil	Phillips screwdriver	Socket wrench	Steel measuring tape	Hammer
Electric drill	Concrete bit (Ø 8mm)			

Step 1 (mounting wall plate)


1

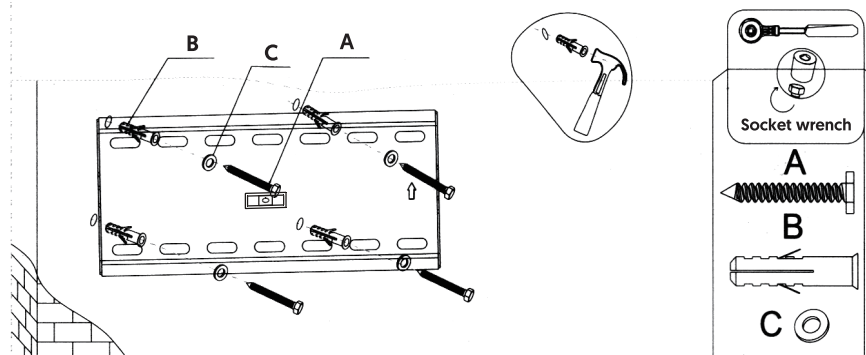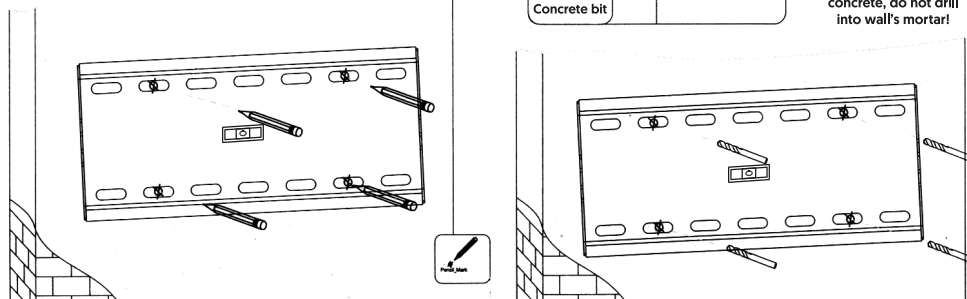

Step 2 (mounting brackets onto TV)

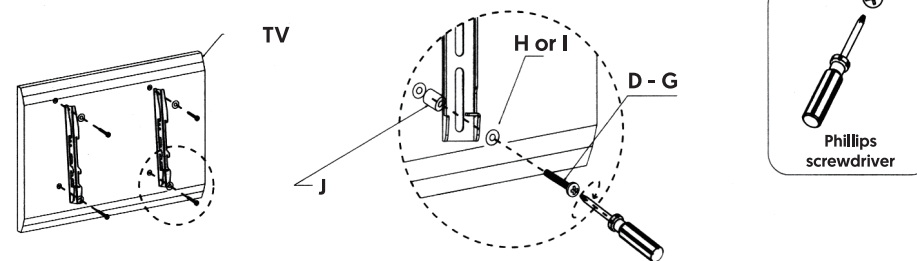

Step 3 (mounting TV onto wall plate and adding safety)

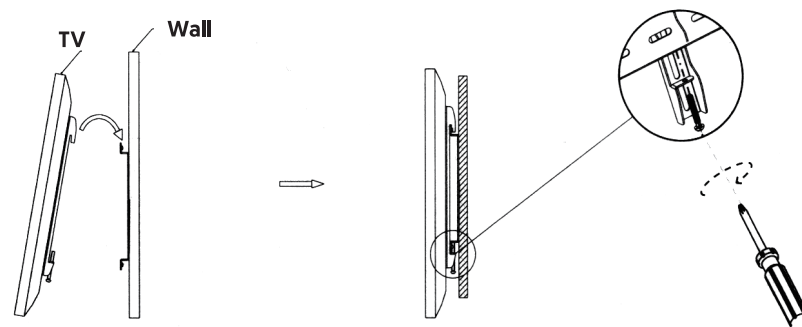

Made in P.R.C. for Max4
ul. Przemysłowa 58, 08-410 Wola Rębkowska

The symbol shown in force in the European Union means that a bracket bearing this symbol should not be disposed of with household waste at the end of its service life. If you need to dispose of this product, please follow the local regulations or other rules of conduct in your country and city. By ensuring this product is disposed of correctly, you contribute to the protection of natural resources and reduce the negative impact on the environment and human health.