



Instrukcja Obsługi
Golarka do ubrań z wyświetlaczem LED

Instrukcja Obsługi
Golarka do ubrań z wyświetlaczem LED


②Wymij stare ostrza.

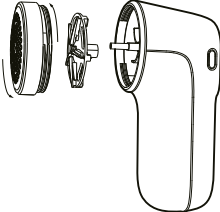

③Wymień stare ostrza na nowe.

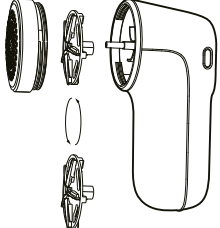

③Przykręć z powrotem siatkę.

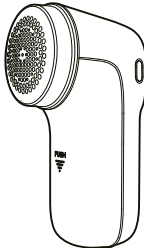

Uwaga:

1. Ostrza są ostre. Proszę zachować ostrożność podczas ich wymiany, aby uniknąć skaleczenia dłoni.

2. Trzymaj części zapasowe zdalek od dzieci.

Ładowanie


1. Naładuj urządzenie przed pierwszym użyciem.

2. Ten produkt jest wyposażony w baterię litową, można używać go także bezprzewodowo.

3. Podczas pracy wyświetlacz pokazuje pozostałą moc, aż do momentu gdy osiągnie 0%.

4. W trakcie ładowania zielona dioda LED miga, a po pełnym naładowaniu świeci ciągle.

5. Produkt można używać podczas ładowania.

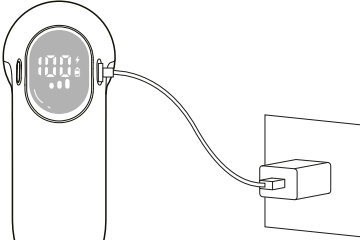


Ohcropa

1. Wyłącznik ochronny: Urządzenie wykrywa ochronę siatki. Jeśli siatka nie jest zamontowana, nie zadziała.

2. Gdy silnik napotka zbyt duży opór (np. nadmiar kłaczek), urządzenie się wyłączy.

3. W razie problemów po otwarciu przedniego panelu, przykręć go z powrotem.

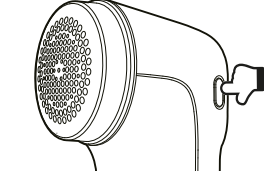

Wyświetlacz i wskaźnik


Stan	Co pokazuje ekran
Praca	Poziom prędkości + procent naładowania
Niski poziom baterii	Migająca dioda LED
Ładowanie	Migająca dioda LED, procent wosata
Pełne naładowanie	100%, dioda świeci ciągle

FAQ


Problem	Rozwiązanie
Kłaczek nie można dokładnie usunąć	Przesuń urządzenie kilka razy po tkaninie.
	Dostosuj do wyższego poziomu prędkości.
	Sprawdź, czy pojemnik na kłaczki jest opróżniony.
	Sprawdź, zamontowanie siatki i ostrzy.
	Sprawdź, czy ostrza nie są nadmiernie zużyte i w razie potrzeby wymień je.

2. Opróżnianie pojemnika na kłaczki


①Wyłącz urządzenie i odłącz je od zasilania.

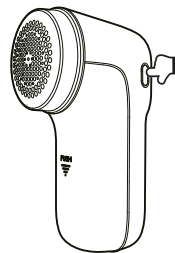


②Pociągnij w dół, aby zdjąć pojemnik.

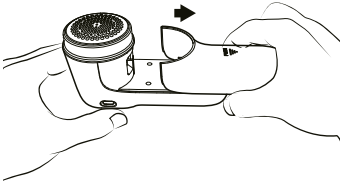

③Wysyp zawartość i wyczyść pojemnik.




④Zamocuj go z powrotem, wciśkając do momentu aż się zatrzaśnie.

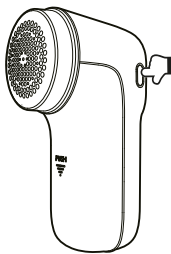

3. Wymiana ostrzy

①Odkręć siatkę ochronną.

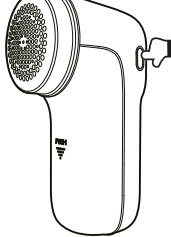

Karta Gwarancyjna


Dane klienta	
Imię	Tel.
Email	
Adres	
Informacje o produkcie	
Model	Numer seryjny
Informacja o dealerze	
Nazwa	Tel.
Data zakupu	Adres
Treść gwarancji	Data gwarancji

A. Jeśli wystąpi awaria działania tego produktu i nie została spowodowana błędem ludzkim, zapewnimy 12-miesięczną bezpłatną gwarancję dla konsumentów od daty zakupu.


B. Wyjątki:


- Uszkodzenia spowodowane przez człowieka;
- Upłynięcie okresu gwarancyjnego;
- Brak ważnego dowodu zakupu;
- Uszkodzenia spowodowane nieprzestrzeganiem instrukcji użytkowania, konserwacji i pielęgnacji;
- Uszkodzenia spowodowane demontażem lub naprawą produktu bez autoryzacji, lub zanurzeniem go w wodzie;
- Uszkodzenia spowodowane siłą wyższą.

③Wymień stare ostrza.

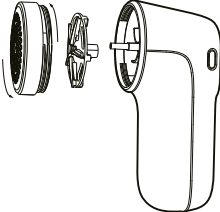

③Wymień stare ostrza na nowe.

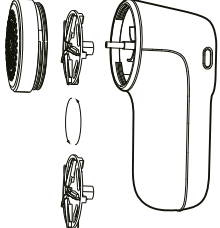


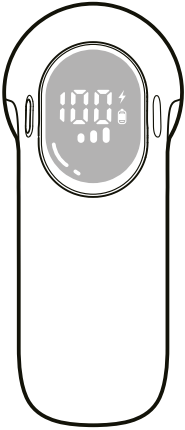


User Manual
LED Display Fabric Shaver

User Manual
LED Display Fabric Shaver


② Unscrew the mesh.

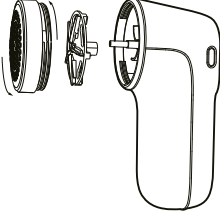

③ Take out the old blades and replace them with new ones.

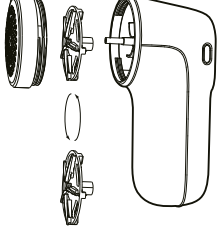

④ Put back the mesh and screw it on tightly.

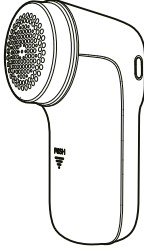


Attention:

1. The blades are sharp. Please be careful when replacing them to avoid cutting your hands.

2. If you purchased replacement blades, please keep them away from children to prevent accidents.

Diagram

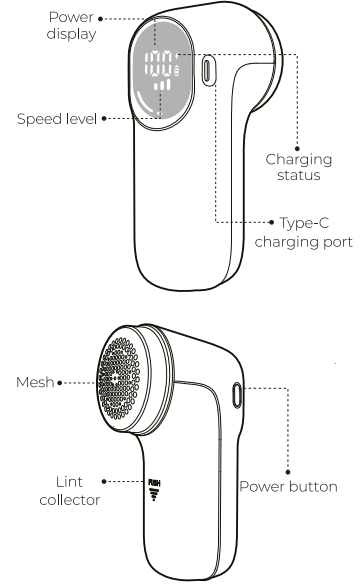

Charging


1. Fully charge the product before using it for the first time.

2. This product comes with a lithium battery, so you can use it conveniently without connecting power.

3. When in use, the power display will decrease as per the current power capacity until it turns off at 0%.

4. During charging, the green LED indicator flashes; when fully charged, it will keep on. In charging, the power display increases with the charging time until it displays 100% after fully charged.


5. The product supports charging and working at the same time. During charging, short press the power button, the product can be used normally.

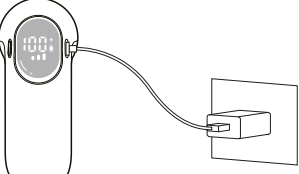


Operation Instructions

1. Removing balls


① Lay the cloth on a flat surface.

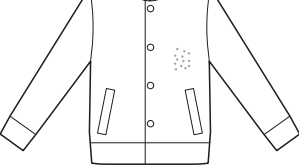


② **Short press** the power button, the fabric shaver will turn on and work at 1st speed level by default. The power display indicates the current power, and the power symbol lights up. **Short press** the power button again to switch to 2nd speed level. **Short press** the power button for the third time to switch to 3rd speed level. **Short press** the power button for the fourth time to turn it off, and then the cycle starts all over again.

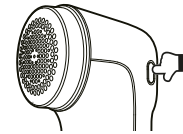

③ Move the fabric shaver repeatedly on the cloth to remove the balls.

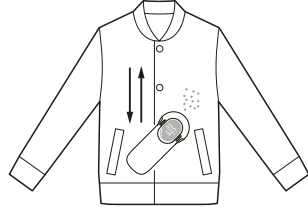

Note: Please level up the cloth, and pay special attention when shaving the following parts to avoid damaging it.

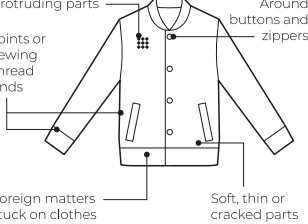

Display & indicator


Status	Display/Indicator Status
Working	The power display lights up/indicates power capacity & speed level
Low power	Green LED indicator flashes
Charging	Green LED indicator flashes; when fully charged, it will keep on. The power display increases with charging time until it displays 100% after fully charged.
Fully charged	Displays 100% and keeps on

FAQ


Problems	Solution
The balls cannot be removed thoroughly	Shave the fabric repeatedly
	Adjust to a higher speed level
	Check if the lint collector is full and clean it timely
	Check if the blades and mesh are well installed
	Check if the blades are excessively worn and replace them if needed

2. Disposing of lint

① Turn off the fabric shaver and disconnect the power supply.

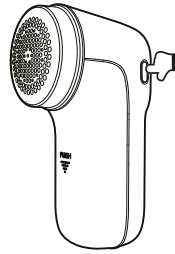


② Pull down to detach the lint collector.

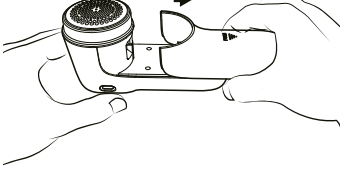

③ Pour out lint and clean the lint collector.




④ Install the lint collector back to the handle, push it upwards with force to have it stuck there.

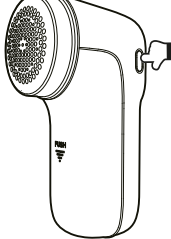

3. Replacing blades

① Turn off the fabric shaver and disconnect the power supply.

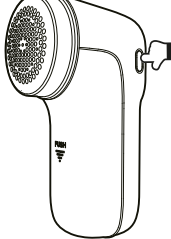

Warranty Card


Customer Information	
Name	Tel.
Email	
Address	
Product Information	
Model	Trademark
Dealer Information	
Name	Tel.
Purchase date	Address
Warranty Contents	Warranty Date

A. If there is performance failure on this product and it's not caused by human error, we will provide a 12-month free warranty service for consumers from the date of purchase.

B. Warranty exceptions:

- Human damage;
- Expired the warranty period;
- Failure to provide valid purchase certificate;
- Product damage caused by failure to follow the use, maintenance and care instructions.
- Product damage caused by disassembling or repairing the product without authorization, or immersing it in water;
- Damage caused by force majeure.

③ Unscrew the mesh.

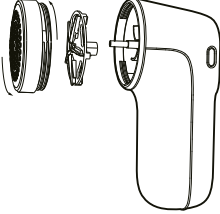

③ Take out the old blades and replace them with new ones.

