

42mm

64mm


Selfie stick z lampą i statywem tripod

LXUM4



User Manual

Informacje o produkcie

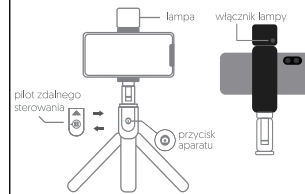

Uwaga: Pilot nie ma funkcji wielokrotnego robienia zdjęć.

Wymiana baterii w pilocie zdalnego sterowania



1. Otwórz pilot w miejscu wskazanym na obrazku powyżej.

2. Wymień baterię i zamknij pilot.

Instrukcja obsługi pilota

1. Przytrzymaj przycisk aby włączyć pilot.
2. Włącz tryb Bluetooth na swoim urządzeniu, następnie wyszukaj i połącz się z urządzeniem „SelfieCam”.
3. Przy udanym połączeniu dioda led na pilocie przestanie migać. Pilot wyłączy się automatycznie po 5 minutach, jeżeli nie zostanie połączony z żadnym urządzeniem.
4. Po połączeniu z urządzeniem pilot przechodzi w stan czuwania po 10 minutach bezczynności i automatycznie wyłącza się po kolejnych 10 minutach.
5. Aby wyłączyć pilot, przytrzymaj przycisk i poczekaj aż dioda led zamiga trzy razy.

Specyfikacja

Materiał	Stal nierdzewna
Rozmiar uchwytu na telefon	2,9 - 4,5"
Wysokość statywu złożonego	185mm
Wysokość statywu rozłożonego	690mm
Rozmiar produktu	46x36x185mm
Bateria	CR1632 [wymienialna]



Wyprodukowano w CHRL dla Lamex S.K.
Lipówki, ul. Radosna 10, 08-440 Piława



Pierwsiadki oraz zwiaski chemiczne zawarte w urzadzaniu mogq miec negatywny wplyw na srodowisko naturalne i zdrowie ludzkie. Zuzyty sprzet elektryczny oraz elektroniczny oznaczony symbolem przekrezonego kosza nie moze byc umieszczany w pojemnikach na odpady komunalne. Taki sprzet podlega zbiorcze i recyklingowi. Obowiazki wynikajace z ustawy o zuzywym srodzisku elektrycznym i elektronicznym w imieniu przedsiebiorcy, zgodnie z odpowiednia umowa, przejele Organizacja Odrzynu.

42mm

64mm


Selfie stick with lamp and tripod

LXUM4



User Manual

About product

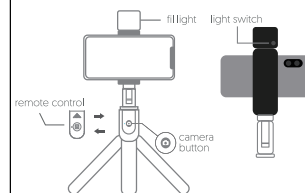

Note: The remote control does not have a multiple shot function.

Replacing batteries in the remote control



1. Open the remote control at the location shown on the image above.

2. Replace the battery and close the remote control.

Remote control instructions

1. Long press the remote button to turn on the remote control.
2. Turn on Bluetooth mode on your device, then search and connect to the "SelfieCam" device. On successful connection, the led on the remote control will stop flashing.
3. The remote control will automatically turn off after 5 minutes if not connected to any device.
4. After connecting with a device, the remote control goes into standby mode after 10 minutes of inactivity and automatically turns off after another 10 minutes.
5. To turn off the remote control, hold down the button and wait until the led flashes three times.

Specification

Material	Stal nierdzewna
Phone holder size	2,9 - 4,5"
Height when tripod folded	185mm
Height when tripod unfolded	690mm
Product size	46x36x185mm
Battery	CR1632 [replaceable]



Made in P.R.C. for Lamex S.K.
Lipówki, ul. Radosna 10, 08-440, Piława



Elements and chemical compounds contained in the device may have a negative impact on the environment and human health. Waste electrical and electronic equipment marked with the crossed-out wheeled garbage can symbol may not be placed in municipal waste garbage cans. Such equipment is subject to collection and recycling. Responsibilities under the Law on Waste Electrical and Electronic Equipment have been assumed by the Recovery Organization on behalf of the entrepreneur, in accordance with the relevant agreement.