


M10 英文说明书-中性版-size 120*175mm

BLOW
User Manual

Product feature indication

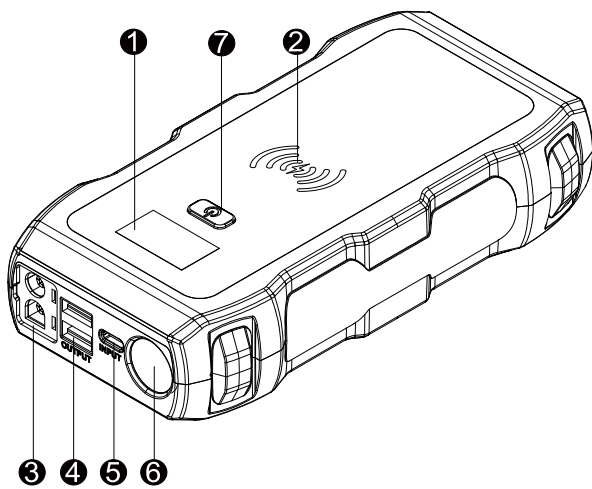

1. Display Screen
2. Wireless charging output
3. 12V-Car emergency start-up 5V/2A
4. USB Output 5V/2A
5. TYPE-C Charging Input
6. LED lights (lighting, flashing, SOS)
7. Key switch

Description of product features

- 1. Display Screen**
Displays the battery level and usage status prompts for the product.
- 2. Wireless charging output**
10w power output, mobile phone wireless charging (requires mobile phone with wireless charging function)
- 3. Car emergency start-up**
It is used for problems such as car power loss, cold weather can not start and battery exhaustion, and can start family bridge vehicles, business SUVs, minivans, etc
- 4. USB Output**
Charge a variety of digital products, such as iPhones, tablets, GoPro, speakers, or other devices charged through a USB port.
- 5.TYPE-C Charging Input 5V/2.0A**
The wire book power supply is charged, and the charging port can be used to charge.
- 6. LED lights**
LED lights are divided into four levels: strong lighting, flashing, SOS, red and blue warning lights.
- 7. Key switch**
This power function enables the key.


Technical parameters+fittings

Product Size	170x81x36 MM
Wireless charging output	10W
USB Output	5V/2.0A
TYPE-C Charging Input	5V/2.0A
The car starts output	12V
Start-up Current	600A
Maximum current	2000A
Capacity	24000mAh 3.7V (88.8Wh)

Function operating instructions

The car starts

Simple four steps, easy to start, for your car to start smoothly make sure the battery is more than 75%.

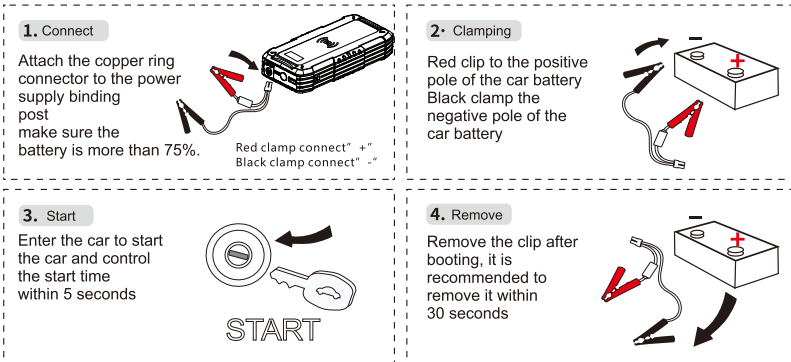

Car start-up considerations

1. Confirm that the host power indicator light must be greater than 75% or more to start the car more smoothly, and insert the blue plug of the battery clip into the car start port of the host.
2. Clip the red clip to the positive side of the battery and the black clip to the negative of the battery.
3. Try to start the car, each time the control starts within 5 seconds, remember not to screw the key and do not put it on for a long time to start, each time after starting needs to be more than 30 seconds apart, if the start 3 times can not start, please stop the start immediately, check whether the emergency power supply is sufficient or other problems in the car.
4. After the car starts, remove the starting power clip from the car battery within 30 seconds,otherwise the emergency starting power supply may be damaged.

LED lighting

LED lights are divided into four levels: strong lighting, flashing, SOS, red and blue warning lights. Press and hold to illuminate the light, click to flash, click to sos, and then press Stop or press to stop. Double-click the red and blue warning lights to turn on, and then double-click to turn them off.

Wireless charging function (requires the phone to support wireless charging function)

Wireless charging function (requires the phone to support wireless charging function)
1, click the key switch to open the wireless charging output function
2, then put the power level
3, the wireless charging induction position on the back of the phone, aligned with the charging induction area of the power supply, you can charge.

Precautions

1. During use or charging, if the device is slightly hot, it is normal, not a failure.
2. When using this product, keep the surrounding ventilation good, do not block the heat dissipation holes, and do not use in the following environments:
1☐Wet places and places that are easily splashed by water. 2☐Easy to drop place
3☐Places where vibration, corrosion, dust, chemical gases are harmful
4☐A place where flammable and explosive materials are stored
5☐Place with high temperature heat source nearby
3. When not in use, remove all external devices to reduce power loss.
4. When not in use for a long time, it is recommended to keep the battery charged at a certain level and charge this product at least once every three months.
5. Do not scrub with coarse chemicals such as soap or other cleaning agents containing strong alkalis and strong acids.
6. Non-professionals please do not disassemble the machine, so as not to damage the machine and cause safety hazards.
7. Please do not throw or burn battery products that cannot be used, and please take care of the environment.
8. The power indicator on the product is for reference only, does not guarantee complete accuracy, if there is a slight error, it is a normal phenomenon.
9. All patterns used in this manual are for reference only, please refer to the actual product.

DECLARATION OF CONFORMITY No. 81-204/2024

Producer: PROLECH SP. Z O.O., STARY PUZNÓW 58 B, 08-400 GARWOLIN, POLSKA

Product description: Jump starter
Brand: BLOW
Item number: 81-204#
Model:JS24

The product meets the requirements of the directives:
2014/30/EU, 2014/35/EU, 2011/65/EU, (EU)2015/863, (EU)2017/2102
The declaration of conformity is available for download from the website www.prolech.com.pl

Date of marking CE: 07.08.2024


Elements and chemical compounds contained in the device may have a negative impact on the environment and human health. Waste electrical and electronic equipment marked with the crossed-out wheeled garbage can symbol may not be placed in municipal waste garbage cans. Such equipment is subject to collection and recycling. Responsibilities under the Law on Waste Electrical and Electronic Equipment have been assumed by the Recovery Organization on behalf of the entrepreneur, in accordance with the relevant agreement.



Produced in P.R.C. for Prolech Sp. z o.o.
Stary Puznów 58B, 08-400 Garwolin Poland
www.blow.pl

BLOW
Instrukcja obsługi

Cechy produktu

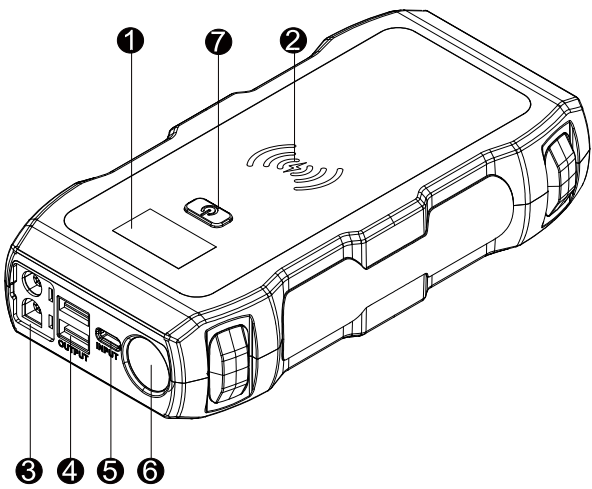

1. Ekran wyświetlacza
2. Ładowanie bezprzewodowe
3. 12V - awaryjne uruchamianie samochodu 5 V/2 A
4. Wyjście USB 5 V/2 A
5. Wejście ładowania TYP-C
6. Światła LED (oświetlenie, miganie, SOS)
7. Przełącznik kluczykowy

Opis cech produktu

- 1. Ekran wyświetlacza**
Wyświetla informacje o poziomie naładowania baterii i stanie użytkowania produktu.
- 2. Ładowanie bezprzewodowe**
Moc wyjściowa 10 W, bezprzewodowe ładowanie telefonu komórkowego (wymaga telefonu komórkowego z funkcją ładowania bezprzewodowego)
- 3. Awaryjne uruchamianie samochodu**
Służy do rozwiązywania problemów, takich jak utrata zasilania samochodu, niemożność uruchomienia w zimne dni i wyczerpanie akumulatora, a także może uruchamiać pojazdy rodzinne,biznesowe SUV-y, minivany itp.
- 4. Wyjście USB**
Ładowanie różnych produktów cyfrowych, takich jak iPhone'y, tablety,kamery GoPro, głośniki lub inne urządzenia ładowane przez port
- 5. Wejście ładowania TYPU C 5V/2A**
Zasilanie przewodowe jest ładowane, a port ładowaniamoże być używany do ładowania.
- 6. Światła LED**
Światła LED są podzielone na cztery poziomy: mocne oświetlenie, miganie,SOS, czerwone i niebieskie światła ostrzegawcze.
- 7. Włącznik**
Włączenie/wyłączenie zasilania


Parametry techniczne

Rozmiar produktu	170x81x36 MM
Ładowanie bezprzewodowe	15W
Wyjście USB	5V/2.0A
Wyjście USB TYP C	5V/2.0A
Rozruch	12V
Prąd rozruchu	600A
Prąd maksymalny	2000A
Pojemność	24000mAh 3.7V (88.8Wh)

Instrukcje obsługi funkcji

Odpalanie samochodu

Cztery proste kroki, łatwy rozruch. Aby samochód odpalił bezproblemowo, upewnij się, że akumulator jest naładowany w ponad 75%

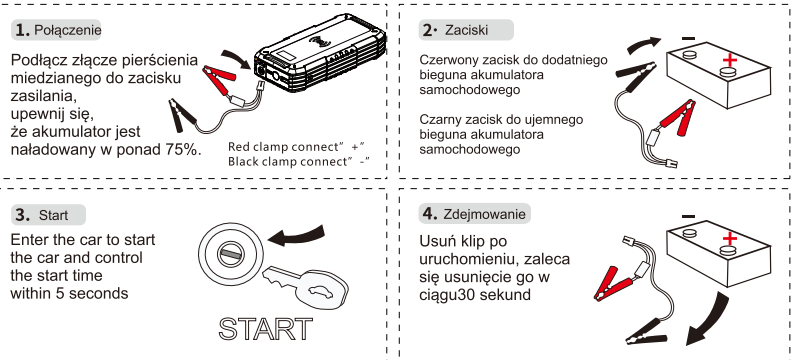

Rozważania dotyczące uruchomienia samochodu

1. Upewnij się, że kontrolka zasilania hosta musi być większa niż 75% lub więcej, aby uruchomić samochód płynniej, i włącz niebieską wtyczkę zacisku akumulatora do portu rozruchowego samochodu hosta.
2. Przypnij czerwony zacisk do dodatniej strony akumulatora, a czarny zacisk do ujemnej strony akumulatora.
3. Spróbuj uruchomić samochód, za każdym razem, gdy sterowanie uruchomi się w ciągu 5 sekund, pamiętaj, aby nie przekreślać kluczyka i nie zakładać go na długo, aby uruchomić, za każdym razem po uruchomieniu musi być więcej niż 30 sekund odstępu, jeśli uruchomienie 3 razy nie może się uruchomić, natychmiast przerywaj rozruch, sprawdź, czy zasilanie awaryjne jest wystarczające lub czy w samochodzie nie ma innych problemów.
4. Po uruchomieniu samochodu odłącz zacisk zasilania rozruchowego od akumulatora samochodu w ciągu 30 sekund, w przeciwnym razie awaryjne zasilanie rozruchowe może zostać uszkodzone.

Oświetlenie LED

Światła LED dzielą się na cztery poziomy: silne oświetlenie, miganie, SOS, czerwone i niebieskie światła ostrzegawcze.Naciśnij i przytrzymaj, aby zapalić światło, kliknij, aby migać, kliknij, aby włączyć SOS, a następnie naciśnij Stop lub naciśnij, aby zatrzymać.Kliknij dwukrotnie czerwone i niebieskie światła ostrzegawcze, aby je włączyć, a następnie kliknij dwukrotnie, aby je wyłączyć.

Funkcja ładowania bezprzewodowego (wymaga, aby telefon obsługiwał funkcję ładowania bezprzewodowego)

Funkcja ładowania bezprzewodowego (wymaga, aby telefon obsługiwał funkcję ładowania bezprzewodowego)
1, kliknij przełącznik kluczykowy, aby otworzyć funkcję wyjścia ładowania bezprzewodowego
2, następnie ustaw poziom mocy3, pozycja indukcji ładowania bezprzewodowego z tyłu telefonu, wyrównana z obszarem indukcji ładowania zasilacza, możesz ładować.

Środki ostrożności

1. Podczas użytkowania lub ładowania, jeśli urządzenie jest lekko gorące, jest to normalne, a nie awaria.
2. Podczas korzystania z tego produktu, utrzymuj dobrą wentylację otoczenia, nie blokuj otworów odprowadzających ciepło i nie używaj w następujących środowiskach:
1) Miejsca wilgotne i miejsca, które są łatwo zachłapanie wodą.
2) Miejsca, w których łatwo upuścić urządzenie
3) Miejsca, w których wibracje, korozja, kurz, gazy chemiczne są szkodliwe
4) Miejsce, w którym przechowywane są materiały łatwopalne i wybuchowe
5) Miejsce z pobliskim źródłem ciepła o wysokiej temperaturze
3. Gdy nie jest używane, odłącz wszystkie urządzenia zewnętrzne, aby zmniejszyć utratę mocy.
4. Gdy nie jest używane przez dłuższy czas, zaleca się utrzymywanie akumulatora naładowanego na określonym poziomie i ładowanie tego produktu przynajmniej raz na trzy miesiące.
5. Nie szoruj grubymi środkami chemicznymi, takimi jak mydło lub inne środki czyszczące zawierające silne zasady i silne kwasy.
6. Osoby nieprofesjonalne nie powinny rozmontowywać urządzenia, aby nie uszkodzić urządzenia i nie stwarzać zagrożeń dla bezpieczeństwa.
7. Nie wyrzucaj ani nie spalaj baterii, których nie można używać, i dbaj o środowisko.
8. Wskaźnik zasilania na produkcie jest tylko punktem odniesienia, nie gwarantuje całkowitej dokładności, jeśli wystąpi niewielki błąd, jest to normalne zjawisko.
9. Wszystkie wzory użyte w tej instrukcji są tylko punktem odniesienia, zapoznaj się z rzeczywistym produktem.

DEKLARACJA ZGODNOŚCI Nr. 81-204/2024

Producent:
PROLECH SP. Z O.O., STARY PUZNÓW 58 B, 08-400 GARWOLIN, POLSKA

Nazwa wyrobu: Jump starter
Marka: BLOW
Kod produktu: 81-204#
Model:JS24

Produkt spełnia wymogi dyrektyw:
2014/30/EU, 2014/35/EU, 2011/65/EU, (EU)2015/863, (EU)2017/2102
Deklaracja zgodności jest dostępna do pobrania ze strony internetowej www.prolech.com.pl

Data oznaczenia oznakowaniem CE: 07.08.2024


Pierwiastki oraz związki chemiczne zawarte w urządzeniu mogą mieć negatywny wpływ na środowisko naturalne i zdrowie ludzi. Zużyty sprzęt elektryczny oraz elektroniczny oznaczony symbolem przekreślonego kosza nie może być umieszczany w pojemnikach na odpady komunalne. Taki sprzęt podlega zbiorcze i recyklingowi. Obowiązki wynikające z ustawy o zużytym sprzęcie elektrycznym i elektronicznym w imieniu przedsiębiorcy, zgodnie z odpowiednią umową, przejęła Organizacja Odszysku.



Wyprodukowano w Ch.R.L. dla Prolech Sp. z o.o.
Stary Puznów 58B, 08-400 Garwolin.Polska
www.blow.pl

M10 英文说明书-中性版-size 120*175mm

Cechy produktu

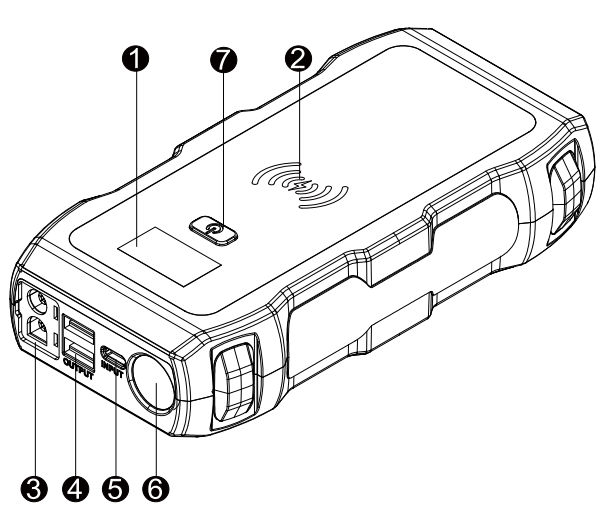

1. Ekran wyświetlacza
2. Ładowanie bezprzewodowe
3. 12V - awaryjne uruchamianie samochodu 5 V/2 A
4. Wyjście USB 5 V/2 A
5. Wejście ładowania TYP-C
6. Światła LED (oświetlenie, miganie, SOS)
7. Przelącznik kluczykowy

Opis cech produktu

1. Ekran wyświetlacza

Wyświetla informacje o poziomie naładowania baterii i stanie użytkowania produktu.

2. Ładowanie bezprzewodowe

Moc wyjściowa 10 W, bezprzewodowe ładowanie telefonu komórkowego (wymaga telefonu komórkowego z funkcją ładowania bezprzewodowego)

3. Awaryjne uruchamianie samochodu

Służy do rozwiązywania problemów, takich jak utrata zasilania samochodu, niemożność uruchomienia w zimne dni i wyczerpanie akumulatora, a także może uruchamiać pojazdy rodzinne,biznesowe SUV-y, minivany itp.

4. Wyjście USB

Ładowanie różnych produktów cyfrowych, takich jak iPhone'y, tablety,kamery GoPro, głośniki lub inne urządzenia ładowane przez port

5. Wejście ładowania TYPU C 5V/2A

Zasilanie przewodowe jest ładowane, a port ładowaniamoże być używany do ładowania.

6. Światła LED

Światła LED są podzielone na cztery poziomy: mocne oświetlenie, miganie,SOS, czerwone i niebieskie światła ostrzegawcze.

7. Włącznik

Włączenie/wyłączenie zasilania

Instrukcje obsługi funkcji

Odpalanie samochodu

Cztery proste kroki, łatwy rozruch. Aby samochód odpalił bezproblemowo, upewnij się, że akumulator jest naładowany w ponad 75%

1. Połączenie

Podłącz złącze pierścienia miedzianego do zacisku zasilania, upewnij się, że akumulator jest naładowany w ponad 75%.

2. Zaciski

Czerwony zacisk do dodatniego bieguna akumulatora samochodowego
Czarny zacisk do ujemnego bieguna akumulatora samochodowego

3. Start

Enter the car to start the car and control the start time within 5 seconds

4. Zdejmowanie

Usuń klip po uruchomieniu, zaleca się usunięcie go w ciągu30 sekund

Rozważania dotyczące uruchomienia samochodu

1. Upewnij się, że kontrolka zasilania hosta musi być większa niż 75% lub więcej, aby uruchomić samochód płynniej, i wóź niebieską wtyczkę zacisku rozruchowego samochodu hosta.
2. Przypnij czerwony zacisk do dodatniej strony akumulatora, a czarny zacisk do ujemnej strony akumulatora.
3. Spróbuj uruchomić samochód, za każdym razem, gdy sterowanie uruchomi się w ciągu 5 sekund, pamiętaj, aby nie przekręcać kluczyka i nie zakładać go na długo, aby uruchomić, za każdym razem po uruchomieniu musi być więcej niż 30 sekund odstępu, jeśli uruchomienie 3 razy nie może się uruchomić, natychmiast przewij rozruch, sprawdź, czy zasilanie awaryjne jest wystarczające lub czy w samochodzie nie ma innych problemów.
4. Po uruchomieniu samochodu odłącz zacisk zasilania rozruchowego od akumulatora samochodu w ciągu 30 sekund, w przeciwnym razie awaryjne zasilanie rozruchowe może zostać uszkodzone.

Oświetlenie LED

Światła LED dzielą się na cztery poziomy: silne oświetlenie, miganie, SOS, czerwone i niebieskie światła ostrzegawcze.Naciśnij i przytrzymaj, aby zapalić światło, kliknij, aby migać, kliknij, aby włączyć SOS, a następnie naciśnij Stop lub naciśnij, aby zatrzymać.Kliknij dwukrotnie czerwone i niebieskie światła ostrzegawcze, aby je włączyć, a następnie kliknij dwukrotnie, aby je wyłączyć.

Funkcja ładowania bezprzewodowego (wymaga, aby telefon obsługiwał funkcję ładowania bezprzewodowego)

Funkcja ładowania bezprzewodowego (wymaga, aby telefon obsługiwał funkcję ładowania bezprzewodowego)
1. Kliknij przelącznik kluczykowy, aby otworzyć funkcję wyjścia ładowania bezprzewodowego
2. następnie ustaw poziom mocy
3. pozycja indukcji ładowania bezprzewodowego z tyłu telefonu, wyrównana z obszarem indukcji ładowania zasilacza, możesz ładować.

Parametry techniczne

Model	JS
Rozmiar produktu	170x81x36 MM
Ładowanie bezprzewodowe	15W
Wyjście USB	5V/2.0A
Wyjście USB TYP C	5V/2.0A
The car starts	12V
Start-up Current	See Fuselage Sticker for details
Power capacity	See Fuselage Sticker for details

Środki ostrożności

1. Podczas użytkowania lub ładowania, jeśli urządzenie jest lekko gorące, jest to normalne, a nie awaria.
2. Podczas korzystania z tego produktu, utrzymuj dobrą wentylację otoczenia, nie blokuj otworów odprowadzających ciepło i nie używaj w następujących środowiskach:
1) Miejsca wilgotne i miejsca, które są łatwo zachłapanie wodą.
2) Miejsca, w których łatwo upuścić urządzenie
3) Miejsca, w których wibracje, korozja, kurz, gazy chemiczne są szkodliwe
4) Miejsce, w którym przechowywane są materiały łatwopalne i wybuchowe
5) Miejsce z pobliskim źródłem ciepła o wysokiej temperaturze
3. Gdy nie jest używane, odłącz wszystkie urządzenia zewnętrzne, aby zmniejszyć utratę mocy.
4. Gdy nie jest używane przez dłuższy czas, zaleca się utrzymywanie akumulatora naładowanego na określonym poziomie i ładowanie tego produktu przynajmniej raz na trzy miesiące.
5. Nie szoruj grubymi środkami chemicznymi, takimi jak mydło lub inne środki czyszczące zawierające silne zasady i silne kwasy.
6. Osoby nieprofesjonalne nie powinny rozmontowywać urządzenia, aby nie uszkodzić urządzenia i nie stwarzać zagrożeń dla bezpieczeństwa.
7. Nie wyrzucaj ani nie spalaj baterii, których nie można używać; i dbaj o środowisko.
8. Wskaźnik zasilania na produkcie jest tylko punktem odniesienia, nie gwarantuje całkowitej dokładności, jeśli wystąpi niewielki błąd, jest to normalne zjawisko.
9. Wszystkie wzory użyte w tej instrukcji są tylko punktem odniesienia, zapoznaj się z rzeczywistym produktem.

1

2

3

4

! 1. Please keep dry and away from fire.
2. Do not disassemble, puncture, or expose the port to do irregular operations or strong impact on the product.
3. For children or people with limited intelligence, attention should be paid to the use under the protection of the custodian.

Często zadawane pytania

Problem1:After a few seconds of successful start-up, it automatically turns off or after removing the clip
This situation is generally due to the excessive use of the car battery or serious aging caused, you can try to start again after running for 3 minutes to charge the battery, if this is still the case, it means that the battery has no power storage capacity, you must replace the new battery.

Problem2:Charging is not charged.
1. Check whether the display shows "IN", then "%" flashes, if neither is displayed, please check whether the charger connection is normal.
2. Please check whether the charging cable is correctly connected to the charger and whether there is power on the mains socket; You can try replacing a charger or charging cable and try again (this power supply You can use the phone's charger and cable directly).

Problem3:You can't charge your phone
Check that the USB output of the boot power supply is turned on, and the power is at least one block or more than 10%.
Check that the charging cable is properly connected or damaged, and if necessary, please replace the charging cable and try again

Problem4: Can't start the car
The engine is completely in motion at start-up, first check whether the clips are reliably connected, if the battery cable head is dirty or badly rusted, please clean it up and try again. If it is determined that it has been connected, it is possible that the car has entered a protected state, and some models can try to press and hold the start button directly for about 10 seconds, waiting until the engine is moving. The engine moves at start-up, but it does not start: please check whether the clip is reliably connected to the copper head of the battery line, if the negative electrode is attached to the iron shell of the car, it will affect the starting performance.

The above answer if not solve the problem. Please contact customer service to analyze and solve, do not disassemble the machine!

Warranty card

This product provides customers with a warranty service of 12 months from the date of purchase

Guarantee conditions: When you need warranty service, please present this warranty card and fill in the relevant content in detail. The Company provides

Warranty Coverage:

1. Product quality problems occur in the normal state of use.
2. If the damage to the product is caused by the operation error, it is not covered by the warranty.
3. After disassembling the machine, no warranty will be granted.
4. Confirm that this tamper evident label is complete, if the word (VOID) appears, it means that it has been opened and no warranty will be granted.

Products that are not covered by warranty, our company can provide maintenance services, and the maintenance costs need to be borne by the

Product model		Factory number	
Date of purchase		Repair date	
Customer name		Contact number	
Customer address			
Sales units			
Description of product anomalies			

5

6



封底

封面

12V^{M10} MULTI-FUNCTION
OUTDOOR ENERGY STORAGE POWER SUPPLY

Tips
Please read this instruction manual carefully and follow the instructions for proper use of this product.

M10 英文说明书-中性版-size 120*175mm

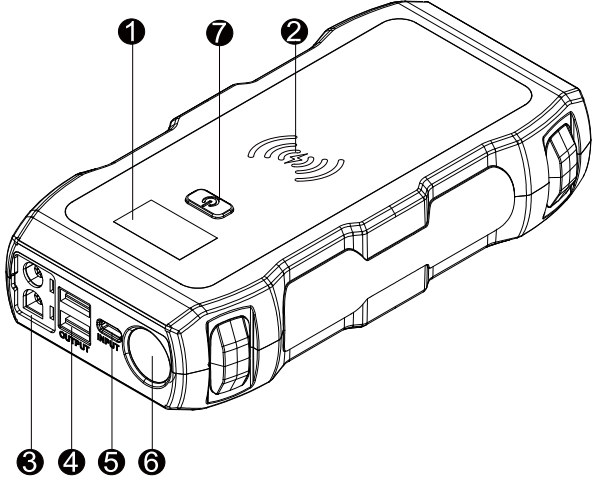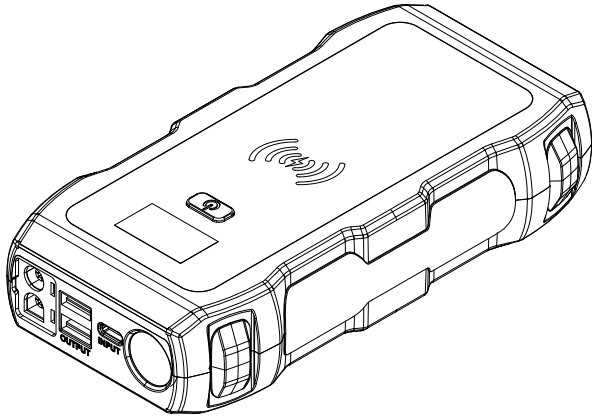Product feature indication  ① Display Screen ② Wireless charging output ③ 12V-Car emergency start-up ④ USB Output 5V/2A ⑤ TYPE-C Charging Input 5V/2A ⑥ LED lights (lighting, flashing, SOS) ⑦ Key switch 1	Description of product features 1. Display Screen Displays the battery level and usage status prompts for the product. 2. Wireless charging output 10w power output, mobile phone wireless charging (requires mobile phone with wireless charging function) 3. Car emergency start-up It is used for problems such as car power loss, cold weather can not start and battery exhaustion, and can start family bridge vehicles, business SUVs, minivans, etc 4. USB Output Charge a variety of digital products, such as iPhones, tablets, GoPro, speakers, or other devices charged through a USB port. 5.TYPE-C Charging Input 5V/2.0A The wire book power supply is charged, and the charging port can be used to charge. 6. LED lights LED lights are divided into four levels: strong lighting, flashing, SOS, red and blue warning lights. 7. Key switch This power function enables the key. 2	Function operating instructions The car starts Simple four steps, easy to start, for your car to start smoothly make sure the battery is more than 75%. 1. Connect Attach the copper ring connector to the power supply binding post make sure the battery is more than 75%. Red clamp connect '+' Black clamp connect '-' 2. Clamping Red clip to the positive pole of the car battery Black clamp the negative pole of the car battery 3. Start Enter the car to start the car and control the start time within 5 seconds 4. Remove Remove the clip after booting, it is recommended to remove it within 30 seconds Car start-up considerations 1. Confirm that the host power indicator light must be greater than 75% or more to start the car more smoothly, and insert the blue plug of the battery clip into the car start port of the host.. 2. Clip the red clip to the positive side of the battery and the black clip to the negative of the battery. 3. Try to start the car, each time the control starts within 5 seconds, remember not to screw the key and do not put it on for a long time to start, each time after starting needs to be more than 30 seconds apart, if the start 3 times can not start, please stop the start immediately, check whether the emergency power supply is sufficient or other problems in the car. 4. After the car starts, remove the starting power clip from the car battery within 30 seconds, otherwise the emergency starting power supply may be damaged. LED lighting LED lights are divided into four levels: strong lighting, flashing, SOS, red and blue warning lights. Press and hold to illuminate the light, click to flash, click to sos, and then press Stop or press to stop. Double-click the red and blue warning lights to turn on, and then double-click to turn them off. Wireless charging function (requires the phone to support wireless charging function) 1, click the key switch to open the wireless charging output function 2, then put the power level 3, the wireless charging induction position on the back of the phone, aligned with the charging induction area of the power supply, you can charge. 3	Technical parameters+ fittings Product ModelM10 Product Size170x81x36 MM Wireless charging output10W USB Output5V/2.0A TYPE-C Charging Input5V/2.0A The car starts12V output Start-up CurrentSee Fuselage Sticker for details Power capacitySee Fuselage Sticker for details Fittings come standard Power hostX1 User ManualX1 Start battery clipX1 Data cableX1 (red and black pair)Box X1 Note: Details are subject to physical delivery Precautions 1. During use or charging, if the device is slightly hot, it is normal, not a failure. 2. When using this product, keep the surrounding ventilation good, do not block the heat dissipation holes, and do not use in the following environments: 1 Wet places and places that are easily splashed by water. 2 Easy to drop place 3 Places where vibration, corrosion, dust, chemical gases are harmful 4 A place where flammable and explosive materials are stored 5 Place with high temperature heat source nearby 3. When not in use, remove all external devices to reduce power loss. 4. When not in use for a long time, it is recommended to keep the battery charged at a certain level and charge this product at least once every three months. 5. Do not scrub with coarse chemicals such as soap or other cleaning agents containing strong alkalis and strong acids. 6. Non-professionals please do not disassemble the machine, so as not to damage the machine and cause safety hazards. 7. Please do not throw or burn battery products that cannot be used, and please take care of the environment. 8. The power indicator on the product is for reference only, does not guarantee complete accuracy, if there is a slight error, it is a normal phenomenon. 9. All patterns used in this manual are for reference only, please refer to the actual product. 4																												
! 1. Please keep dry and away from fire. 2. Do not disassemble, puncture, or expose the port to do irregular operations or strong impact on the product. 3. For children or people with limited intelligence, attention should be paid to the use under the protection of the custodian. 5	Frequently Asked Questions Problem1:After a few seconds of successful start-up, it automatically turns off or after removing the clip This situation is generally due to the excessive use of the car battery or serious aging caused, you can try to start again after running for 3 minutes to charge the battery, if this is still the case, it means that the battery has no power storage capacity, you must replace the new battery. Problem2:Charging is not charged. 1. Check whether the display shows "IN", then "%" flashes, if neither is displayed, please check whether the charger connection is normal. 2. Please check whether the charging cable is correctly connected to the charger and whether there is power on the mains socket; You can try replacing a charger or charging cable and try again (this power supply You can use the phone's charger and cable directly). Problem3:You can't charge your phone Check that the USB output of the boot power supply is turned on, and the power is at least one block or more than 10%. Check that the charging cable is properly connected or damaged, and if necessary, please replace the charging cable and try again Problem4: Can't start the car The engine is completely in motion at start-up, first check whether the clips are reliably connected, if the battery cable head is dirty or badly rusted, please clean it up and try again. If it is determined that it has been connected, it is possible that the car has entered a protected state, and some models can try to press and hold the start button directly for about 10 seconds, waiting until the engine is moving. The engine moves at start-up, but it does not start: please check whether the clip is reliably connected to the copper head of the battery line, if the negative electrode is attached to the iron shell of the car, it will affect the starting performance. The above answer if not solve the problem. Please contact customer service to analyze and solve, do not disassemble the machine! Certificate Examine : _____ Date : _____ QC01 PASS 5	Warranty card This product provides customers with a warranty service of 12 months from the date of purchase Guarantee conditions: When you need warranty service, please present this warranty card and fill in the relevant content in detail. The Company provides Warranty Coverage: 1. Product quality problems occur in the normal state of use. 2. If the damage to the product is caused by the operation error, it is not covered by the warranty. 3. After disassembling the machine, no warranty will be granted. 4. Confirm that this tamper evident label is complete, if the word (VOID) appears, it means that it has been opened and no warranty will be granted. Products that are not covered by warranty, our company can provide maintenance services, and the maintenance costs need to be borne by the <table><tr><td>Product model</td><td></td><td>Factory number</td><td></td></tr><tr><td>Date of purchase</td><td></td><td>Repair date</td><td></td></tr><tr><td>Customer name</td><td></td><td>Contact number</td><td></td></tr><tr><td>Customer address</td><td colspan="3"></td></tr><tr><td>Sales units</td><td colspan="3"></td></tr><tr><td colspan="4">Description of product anomalies</td></tr><tr><td colspan="4"></td></tr></table> 6	Product model		Factory number		Date of purchase		Repair date		Customer name		Contact number		Customer address				Sales units				Description of product anomalies								12V^{M10} MULTI-FUNCTION OUTDOOR ENERGY STORAGE POWER SUPPLY  Tips Please read this instruction manual carefully and follow the instructions for proper use of this product. 封面
Product model		Factory number																													
Date of purchase		Repair date																													
Customer name		Contact number																													
Customer address																															
Sales units																															
Description of product anomalies																															