
Update Instructions

Updating the firmware is performed using the built-in web server.

Requirements:

- AT-OME-SW21-TX
- Firmware file
- Computer running Windows

1. Connect an Ethernet cable from the computer, containing the firmware, to the same network where the AT-OME-SW21-TX is connected.
2. Login to the web server.
3. Click **System** in the menu bar.
4. Click the **Choose File** button, under the **Firmware Update** section.

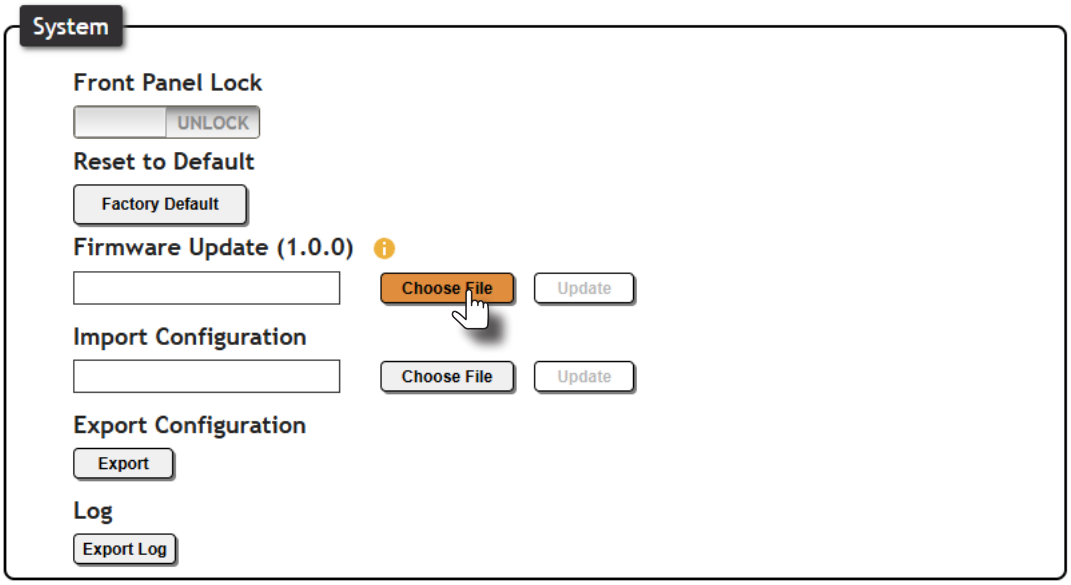

5. Browse to the location of the firmware file, select it, and click the **Open** button.
6. Click the **Update** button, under the **Firmware Update** section.