


# Guide d'utilisation

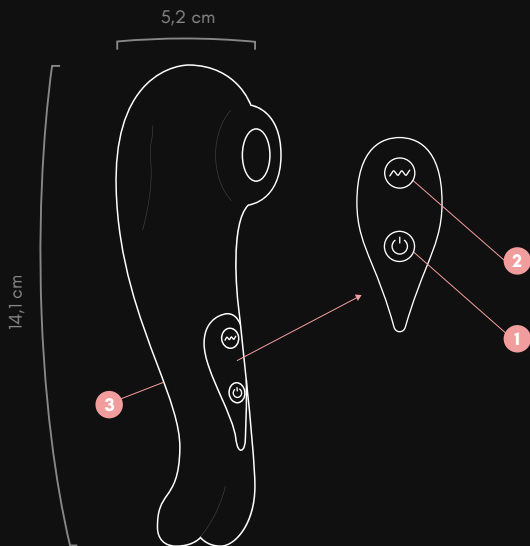

## Instructions

- Pour l'allumer : appuie sur le bouton de mise en marche (1) pendant 2 secondes.
- Appuie brièvement sur (2) pour alterner entre les 10 modes de stimulation du clitoris.

## Chargement

- Brancher le câble USB dans un ordinateur ou dans une prise murale.
- Brancher DÉLICATEMENT le fil auxiliaire dans le port de chargement (3).
- La lumière clignote lors du chargement.
- Une fois complètement rechargé, la lumière reste allumée.

# Informations supplémentaires

## Dimensions

Stimulateur de clitoris : largeur de 0.5 cm

Longueur : 14cm

Largeur : 4cm

## Modes

1 puissance

10 modes de suction

## Chargement / Alimentation

Jouet : Batterie rechargeable non amovible, avec fil USB inclus.

## Autonomie de la batterie

40-60 minutes

Recharge complète en 120 minutes.

## Résistance à l'eau

Jouet : IPX6 - Résistant à l'eau, mais non submersible.

## Niveau de bruit

Moins de 35 dB

## Composition

Silicone ABS

## Nettoyage et rangement

- Nettoyer avant et après l'usage.
- Utiliser un linge avec de l'eau tiède. NE PAS submerger sous l'eau.
- Laisser sécher à l'air.
- Éviter l'exposition directe au soleil.
- Entreposer dans un endroit sans poussière.
- Ne pas entreposer avec d'autres jouets en silicone.

## Avertissements

- NE PAS submerger sous l'eau.
- NE PAS utiliser d'huile de massage, de lotion pour le corps ou les mains, ou de produits nettoyants.
- Utiliser du lubrifiant de qualité SANS silicone seulement.
- Garder hors de la portée des enfants et de votre animal de compagnie — mettons que ça peut créer des malaises.
- Arrêter l'usage s'il y a un sentiment d'inconfort ou si le jouet est brisé.


## Garantie

90 jours

## Des questions?

Contactez-nous à [contacte@justalittlefun.com](mailto:contacte@justalittlefun.com)

# User manual

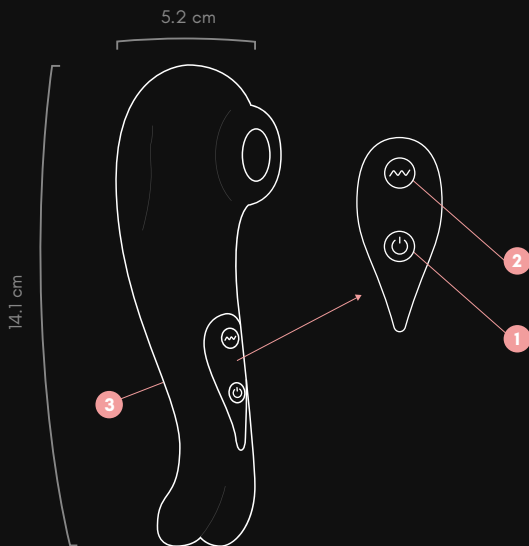

## Instructions

- Turn it on: Long press the power button (🔌 2) for 2 seconds.  
Short press (🌊 3) button to switch among the 10 sucking modes.
- Turn it off: Long press the power button (🔌 2) for 3 seconds.

## Charging

- Plug the USB into a computer or rechargeable USB brick.
- GENTLY plug the auxiliary cable in the charging port (🔌).
- When charging, the light under the top button will flash.
- When fully charged, the light will stay on.

# Additional information

## Dimensions

"Sucking side" : width of 0.5cm

Length: 14cm

Width: 4cm

## Modes

1 power mode

10 sucking modes

## Recharge/Power

Toy: Non-removable rechargeable battery, with USB wire included.

## Battery duration

40-60 minutes

Fully charge in 120 minutes.

## Waterproof

Toy: IPX6 - Water resistant, but not submersible.

## Noise

Less than 35db

## Compositions

Safe silicone ABS

## Cleaning & Storage

- Clean before and after using
- Use a cloth with warm water on it. DO NOT submerge in water.
- Let air dry.
- Avoid direct sunlight
- Store in a dust-free environment.
- Do not store with other silicone toys.

## Warning

- DO NOT submerge in water.
- DO NOT use massage oil, hand cream, or cleaning products.
- Use quality lubricant WITHOUT silicone only.
- Keep from children's reach — to avoid awkward situations.
- Stop using it if you feel uncomfortable or if it is broken.

## Waranty

90 days

## Any questions?

Contact us at [contact@justalittlefun.com](mailto:contact@justalittlefun.com)