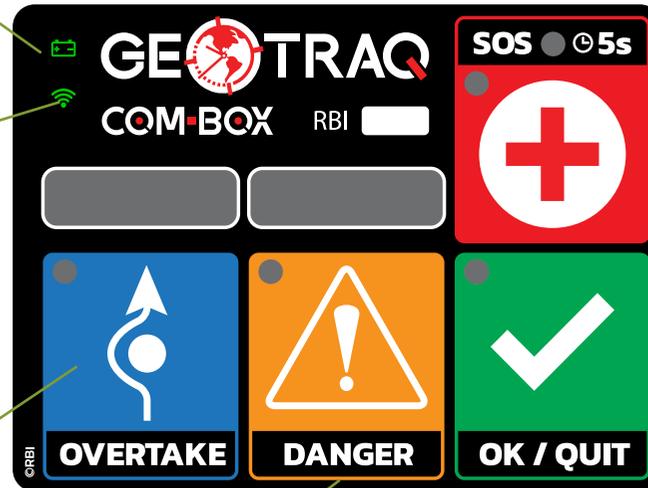# GEOTRAQ
COM·BOX

BATTERY STATUS

- – EXTERNAL POWER
- – NO EXTERNAL POWER
- – (BLINKING) INT. BATTERY EMPTY

RADIO STATUS

- – RADIO OK
- – SLEEP MODE, NO RADIO

OVERTAKE FUNCTION

DANGER BEACON

GEOTRAQ
COM·BOX RBI

SOS ⏱5s

OVERTAKE

DANGER

OK / QUIT

©RBI

EMERGENCY SOS BEACON
– PRESS AND HOLD UNTIL ACTIVATED

CONFIRM / QUIT BUTTON

VEHICLE A

VEHICLE B

SIGNAL

Vehicle A wants to overtake:
press for 2 seconds the **BLUE BUTTON**
to send a signal to the vehicle ahead
(less than 200m).

Signal is received when lights are SOLID YELLOW.
Signal is not received if light BLINK YELLOW.
Cancel/repeat the function with OK/QUIT button.

VEHICLE A

VEHICLE B

Vehicle B is being overtaken:
Lights BLINK BLUE

ALARM ON

CONFIRM OVERTAKING WITH BLUE BUTTON !
(will allow overtaking at the first safe place)

DECLINE OVERTAKING WITH OK/QUIT BUTTON

GEOTRAQ
COM·BOX   RBI

SOS ⏱5s

OVERTAKE   DANGER   OK / QUIT

VEHICLE A

VEHICLE B

Vehicle A receives confirmation for overtaking: Lights ARE SOLID GREEN, vehicle B will allow overtaking at the first safe place.

CONFIRM WITH OK/QUIT BUTTON (optional)

If you breakdown in a danger place (after bling turn) or if drive against the route, activate **"DANGER BEACON FUNCTION"**.

You will be sending signal to the competitors maximum 200 meters around you to inform them. **DEACTIVATE WITH "OK/QUIT" BUTTON**

If you receive a signal from **"DANGER BEACON".**
Lights will **BLINK YELLOW. ALARM IS ON.**
CONFIRM WITH **OK/QUIT BUTTON** AND REDUCE
SPEED TO TAKE EXTRA CAUTION.

If you **REQUIRE MEDICAL ASSISTANCE, PRESS AND HOLD SOS BUTTON** TO **ACTIVATE FUNCTION.**
You will be sending signal to the competitors maximum 200 meters around you to inform them.
Also signal is transmitted directly to Rally Control.
DEACTIVATE WITH "OK/QUIT" BUTTON

If you receive a SOS signal from Lights will BLINK RED. ALARM IS ON.
CONFIRM WITH OK/QUIT BUTTON AND BE READY TO ASIST AN ACCIDENT SCENE.

RALLY CONTROL can send you an "REQUEST" to ask for your status.

REPLY WITH THE 3 AVAILABLE OPTIONS:

- **SOS** – activates SOS FUNCTION
- **DANGER** – activates DANGE FUNCTION
- **OK / QUIT**

Doing this RALLY CONTROL will know your current status and will act accordingly.