# Uniden
### Japan

## MODEL:AS7202

USER MANUAL



## INTRODUCTION

YourTelephone is designed for flexibility in use and high quality in performance. To get the most from your new telephone, we suggest that you take a few minutes right now to read through this instruction manual.If you have any questions or problems, consult theTroubleshootingTips for solution.

## BEFORE YOU BEGIN

### MODULAR JACK REQUIREMENTS

You need an RJ11C type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one instaiied

### INSTALLING THE PHONE

Your telephone should be placed on a level surface such as a desktop or you can mount it on a wall.



---
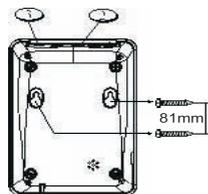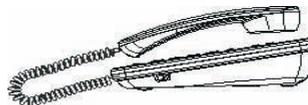
1 . Connect the telephone line cord,one side to wall jack and a nother side to the"line in" jack of the phone.

2 . Slide the RINGER switch to hi position.



81mm

Wall Position                    Desktop Position

## USING THE TELEPHONE FEATURES

### RECEIVING A PHONE CALL

1. When a phone call comes in, the phone rings and the LED indicator on.
2. lift the handest and begin your conversation.

### RINGER VOLUME

You may control the ringer volume level with the ringer switch.
HI = high.
lo=low.
OFF= off.

### PLACING A PHONE CALL

1. Lift the handset and wait for a dial tone.
2. Dial the telephone number you wish to call.

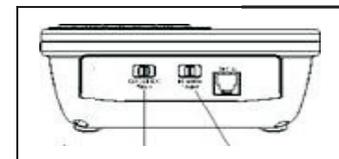

redial (button)          flash (button)

---

## FLASH BUTTON

Press the FLASH button instead of using the hook switch to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company, select the appropriate flash timing (600ms, 300ms, 100ms).

## REDIAL BUTTON

This unit redials up to 32 digits.To automatically redial the last number you called:

1. Pick up the handset to get a dial tone.
2. Press redial.



FLASH            HI/LO/OFF
(600/300/100)    RINGERE

## TROUBLESHOOTING TIPS

| PROBLEM | SOLUTION |
|---|---|
| No dial tone<br>Receiver no sound | • Check hook switch to make sure it pops up.<br>• Make sure the telephone line plug into the soc jack. |
| Phone doesn't ring | • Make sure phone cord is securely plugged in.<br>• You might have too many phones on one line. |
| Feedback when dialing in PULSE mode | • This is normal, power fluctuates with phone outpulsing. |
| Can't be heard by other party | • Make sure other phones aren't off the hook at the same time you're using the phone. It is normal for the volume to drop when additional phones are used at the same time. |

## CARE AND MAINTENANCE

To keep your phone working and looking good, follow these guidelines;
- Avoid putting near heating appliances and devices that generate electrical noise (for example, motors and fluorescent lamps)

- DO NOT expose to direct sunlight or moisture.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.

- Retain the original package in case you need to ship it at a later date.