



51980



ES PISTOLA DE AIRE PARA INFLAR NEUMÁTICOS.....2

EN GUN GRIP TYRE INFLATOR.....3

ES

MANUAL DE INSTRUCCIONES

Esta pistola de aire está diseñada para inflar neumáticos de forma rápida, segura y precisa, ideal para aplicaciones profesionales o domésticas. Gracias a su diseño compacto, su manómetro integrado y su manguera flexible de conexión rápida, garantiza un uso eficiente y cómodo.

ESPECIFICACIONES TÉCNICAS

- Rango de presión:
0 – 16 bar
0 – 220 psi
- Conexión rápida: 1/4" (estándar industrial)
- Longitud de la manguera: 33 cm
- Componentes incluidos:
Manómetro analógico
Manguera flexible
Conector rápido
Junta tórica de sellado
Botón de liberación/ajuste de presión

INSTRUCCIONES DE USO

01. Verificación inicial

Antes de comenzar el uso:

- Verifique que el producto esté en buen estado físico.
- Confirme que todos los componentes estén presentes:
 - * Manómetro
 - * Manguera
 - * Conexiones
 - * Junta tórica
 - * Conector rápido
 - * Botón de ajuste/liberación de presión

02. Conexión de la manguera

- Conecte firmemente la manguera a su punto de conexión, ubicado justo debajo del manómetro.
- Asegúrese de que la junta tórica esté correctamente posicionada para evitar fugas y lecturas erróneas.

03. Conexión al sistema de aire

- Conecte la manguera del manómetro:
 - * Primero al sistema que desea inflar o medir (por ejemplo, la válvula del neumático).
 - * Luego a la fuente de aire comprimido mediante la conexión rápida de 1/4".
- Una vez conectada, el manómetro mostrará la presión del sistema.


- Use el botón de latón para liberar aire en caso de que se necesite ajustar la presión.

Importante: No exceda el rango de presión máximo especificado (220 psi / 16 bar). Un exceso de presión puede causar daños al equipo o poner en riesgo la seguridad del usuario.


01



02

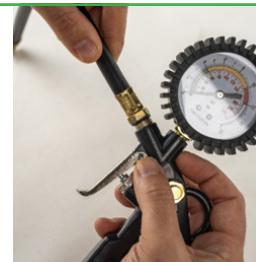

03

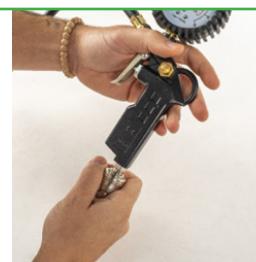

MANTENIMIENTO Y RECOMENDACIONES

- Limpie el manómetro y la manguera después de cada uso con un paño seco.
- Evite dejar el equipo expuesto a humedad o temperaturas extremas.
- Revise periódicamente las juntas y conexiones para garantizar un sellado correcto.
- Si no va a utilizar la pistola por un período prolongado, desconecte y guarde en un lugar seco y seguro.

EN**INSTRUCTION MANUAL**

This air blow gun is designed to inflate tires quickly, safely, and accurately, making it ideal for both professional and home applications. Thanks to its compact design, integrated analog pressure gauge, and flexible quick-connect hose, it ensures efficient and comfortable use.

TECHNICAL SPECIFICATIONS

- Pressure Range:
0 – 16 bar
0 – 220 psi
- Quick Connection: 1/4" (industrial standard)
- Hose Length: 33 cm
- Included Components:
Analog pressure gauge
Flexible hose
Quick connector
Sealing O-ring
Pressure release/adjustment button

INSTRUCTIONS FOR USE**01. Initial Verification**

Antes de comenzar el uso:

- Check that the product is in good physical condition.
- Confirm that all components are present:
 - * Pressure gauge
 - * Hose
 - * Connectors
 - * O-ring seal
 - * Quick connector
 - * Pressure adjustment/release button

02. Hose Connection



- Firmly connect the hose to its connection point, located just below the pressure gauge.
- Ensure the O-ring is correctly positioned to prevent leaks and inaccurate readings.

03. Connection to the Air System

- Connect the gauge's hose:
 - * First to the system you want to inflate or measure (e.g., the tire valve).
 - * Then to the compressed air source using the 1/4" quick connection.
- Once connected, the pressure gauge will display the system's pressure.

- Use the brass button to release air if pressure adjustment is needed.

Important: Do not exceed the specified maximum pressure range (220 psi / 16 bar). Excessive pressure may damage the equipment or compromise user safety.

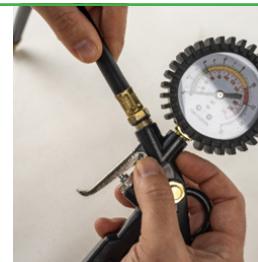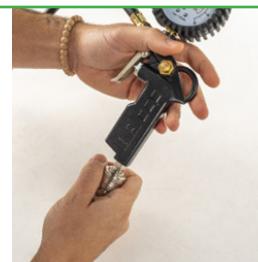01**02****03****MANTENIMIENTO Y RECOMENDACIONES**

- Clean the pressure gauge and hose after each use with a dry cloth.
- Avoid exposing the equipment to moisture or extreme temperatures.
- Periodically check the seals and connections to ensure proper sealing.
- If the gun will not be used for an extended period, disconnect it and store it in a dry, secure place.

51980



www.jbmcamp.com

JBM CAMPLLONG, S.L.
CIM La Selva - Ctra. Aeropuerto km. 1,6
Nave 2.2 - CP 17185 Vilobí d'Onyar - GIRONA
jbm@jbmcamp.com
Tel. +34 972 405 721
Fax. +34 972 245 437