

105*148.5 mm




Bruksanvisning/Manual

Limit Inställningskub

Inställningskub för positionering av verktyg mot arbetsstycke eller maskinbord på fräsmaskiner och bormaskiner. Indikatorklocka visar den fjädrande plattans nedtryckning. Magnet i botten för enkel applicering både vertikalt och horisontellt.

1. Vrid knappen till läge **TEST**.
2. Tryck ner plattan och vrid samtidigt skalans ytterring så att stora visaren pekar på **0**. Höjden är nu **50,00 mm**.
3. Vrid knappen till läge **USE**.
4. Placera kuben på arbetsstycket eller maskinbordet.
5. Ansätt verktyget mot plattan. När klockan visar **0** är höjden **50,00 mm**.

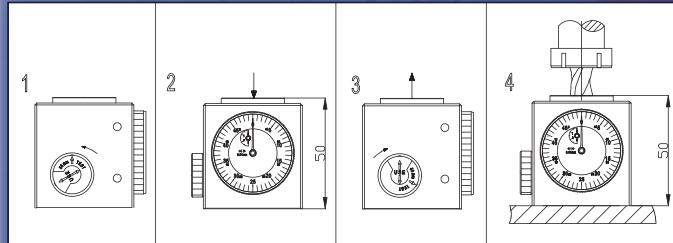

Bruksanvisning/Manual

Limit Preset Gauge

Preset gauge for set-up cutting tools in Milling machines etc. Dial gauge shows movement of indicator surface. A magnet in the base makes it easy to apply in vertical or horizontal position.

1. Turn the button to position **TEST**.
2. Press down the disc and at same time turn the dial ring until the long needle shows **0**. The distance is now **50,00 mm**.
3. Turn the button to position **USE**.
4. Place the gauge on a workpiece or machine table.
5. Adjust the cutter against the disc. When dial gauge shows **0** is distance **50,00mm**.

