

## Digitalt Skjutmått IP67 150, 200, 300 mm

### TEKNISKA SPECIFIKATIONER

Upplösning: 12 0,01 mm / 0,0005 tum  
 Onogranthet:  $\pm 0,02$  mm  
 Repeterbarhet:  $\pm 0,01$  mm  
 IP65 och ABS funktion.

Uppdateringshastighet: 3,0 m/s  
 Batteri: CR1632, 3 V  
 Användningstemperatur: 0...+40 °C  
 Lagringstemperatur: -10...+60 °C

### ANVÄNDNING

**0/ON KNAPP** Tryck för att starta och för att nolla displayen. Håll intryckt för att välja mellan INC, ABS och avstängning. Släpp knappen när önskad funktion visas i displayen.

**MM/IN KNAPP** Tryck för att växla mellan metrisk och tumenhet.


**ABS FUNKTION** Visar den absoluta noll-punkten. För att nollställa ABS-punkten, välj ABS funktion och håll sedan mm/in knappen intryckt tills displayen visar noll.

**BATTERI** Ersätt batteriet när symbolen för låg batterispänning visas. För att öppna batteriluckan måste skruven under luckan tas bort, sedan kan luckan lyftas och batteri bytas. Se till att packningen ligger rätt innan luckan stängs. Ta ur batterit vid långvarig lagring.

**ANMÄRKNING** Den positiva polen skall alltid vara utåt.

**UNDERHÅLL** Före användning torka med ren och torr trasa. Undvik kontakt med strömförande föremål, magnetiska fält, slag och fall i mark. Smörj metallytor med olja för att säkerställa god mekanisk funktion.

FELSÖKNING	Orsak	Åtgärd
Blinkande display	Låg spänning	Byt batteri
Inga siffror	Låg spänning Dålig kontakt	Byt batteri Gör rent batteri och kontaktytor. Om nödvändigt justera kontaktbläck. Kontroller att + är mot utsidan.
Låsta siffror	Elektroniskt avbrott.	Ta ut batteri och avvakta 2 minuter innan det återförs.

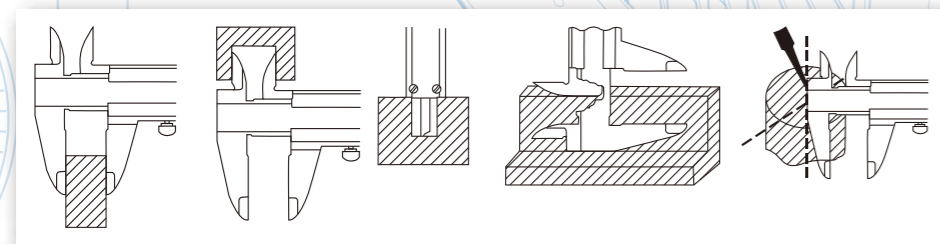

## Digital Caliper IP67 150, 200, 300 mm

### TECHNICAL SPECIFICATIONS

Resolution: 10,01 mm / 0,0005 inch  
 Curacy:  $\pm 0,02$  mm  
 Repeatability:  $\pm 0,01$  mm  
 IP65 and ABS Function

Updating speed: 3,0 m/s  
 Battery: CR1632, 3 V  
 Operating temperature: 0...+40 °C  
 Storage temperature: -10...+60 °C

### OPERATION

**0/ON KEY** Press short to turn ON or Zero display. Hold to select between INC, ABS and OFF. Release the key when wanted function is shown in the display.

**MM/IN KEY** Press to switch between metric and inch.

**ABS FUNCTION** Shows the absolute zero point. To reset the ABS zero, enter to ABS function then hold down the mm/in key until the display shows zero.

**BATTERY** Replace battery when the low battery symbol is showing in the display. To open the battery box, the screw under the box needs to be removed. After this the lid can be lifted and battery replaced. Make sure that the gasket is in correct position before closing the lid. Remove the battery when storing for long time.

**NOTE** The positive pole of battery must face out.

**MAINTENANCE** Before use, clean with a dry and clean cloth. Avoid from connection to voltage, magnetic fields, shocks, impacts, drops etc. Lubricate all metal parts with oil to guarantee a good mechanical function.

TROUBLE SHOOTING	Possible Causes	Solution
Flashing digits	Low voltage	Replace the battery
No Display	Low voltage Poor contact	Replace the battery Clean the battery and battery set. Adjust the seat if necessary. Make sure + is upside.
Fixed digits	Accidental trouble in circuit	Take out the battery and put it back after 2 minutes.

