



Electric adjustable desk installatlilation drawing

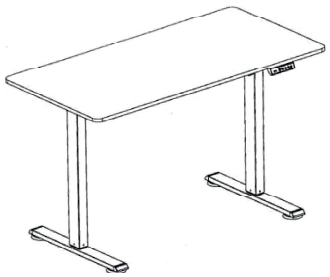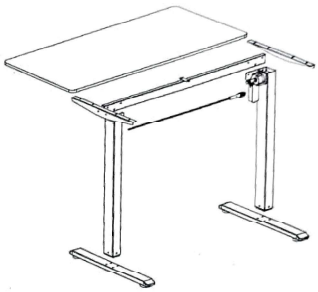



PARTS LIST

A  X1	B  X1	C  X1	D  X1	E  x2
F  X2	G  X1	H  X1	I  X1	
① 5mm  X1	② X1	③ 2.5 mm  X1	④ M8X32  X8	⑤ M6X12  x10
⑥ ST4X15  X12	⑦  X4	⑧ M4X6  X1	⑨  X2	

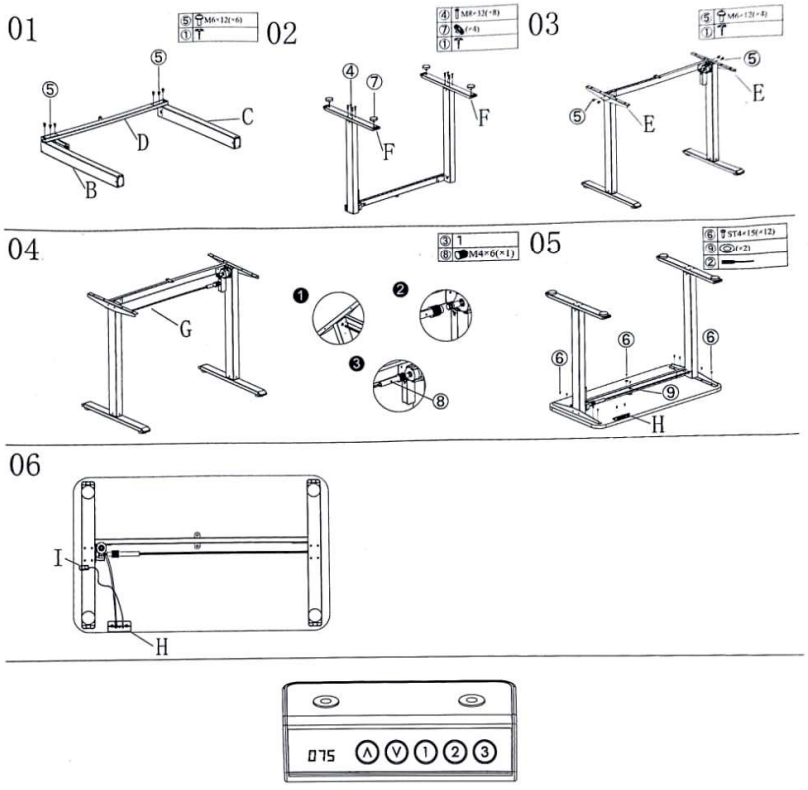

1. Reset:
   Press and hold the key to reset at the lowest position for a long time.
2. Memory location saving:
   Run the desktop to the desired position, press and hold the number keys.
3. Short press the number keys to run to the set height, and press any key to stop running during operation