




Alum. motor mount ×1
鋁合金馬達座

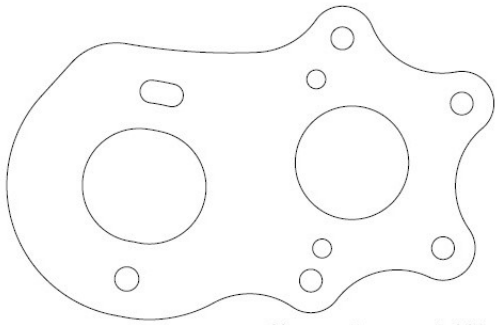

Spur gear holder ×1
大齒盤座

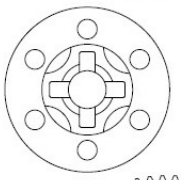

2×9.8 Shaft ×1
插銷

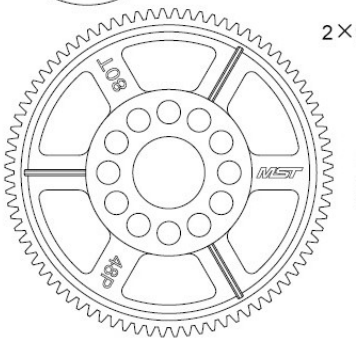

Spur gear
48P 80T ×1
大直齒



3×6×0.5 Spacer ×7
墊片



M3×8 screw ×4
沉頭螺絲



M3×10 screw ×2
沉頭螺絲



M3×6 screw ×4
圓頭螺絲



M3×8 screw ×4
圓頭螺絲




M3×10 screw ×2
圓頭螺絲



M3×6 screw ×2
有頭螺絲(半牙)




M3×30 screw ×1
有頭螺絲(半牙)




M3×40 screw ×1
有頭螺絲(半牙)

STEP 1 Attaching spur gear
安裝大齒盤

RMX Motor LCG Mode
RMX低重心模式

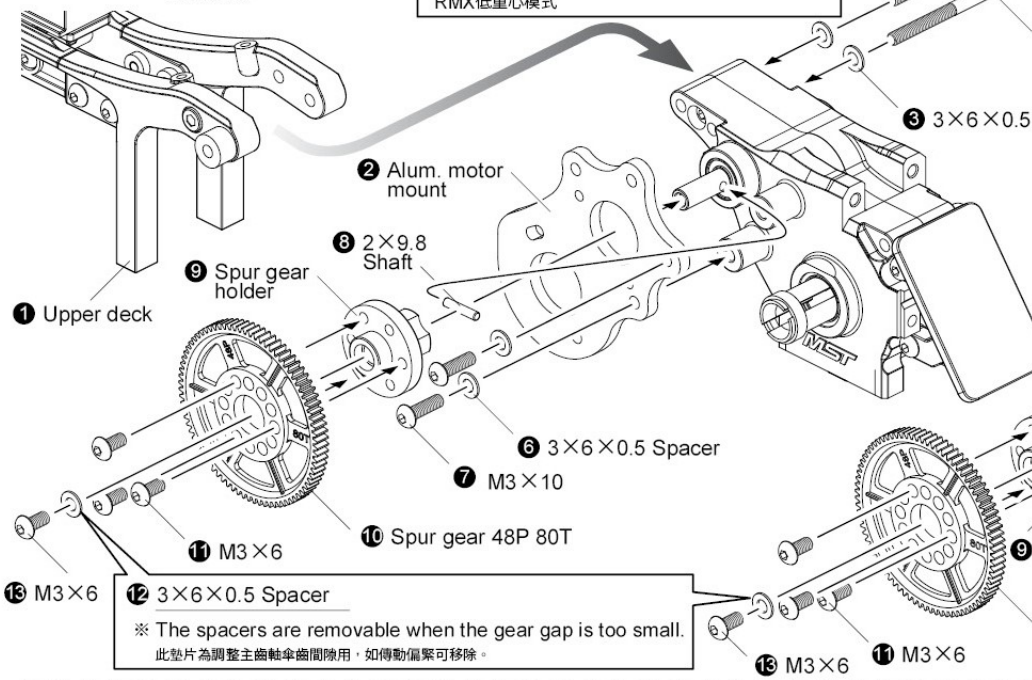


RMX Motor HCG Mode
RMX高重心模式

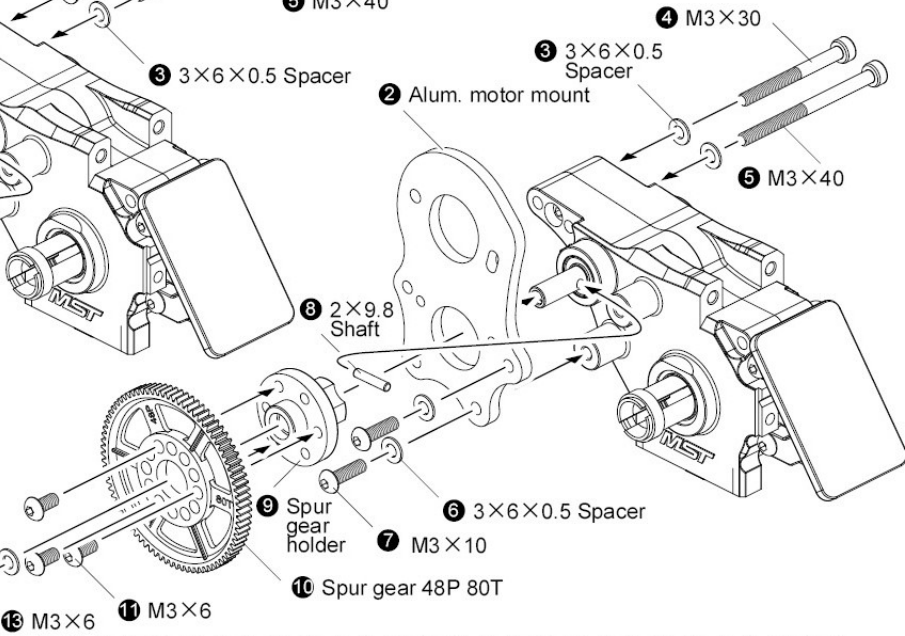


STEP 2 Attaching motor
安裝馬達


RMX Motor LCG Mode
RMX低重心模式

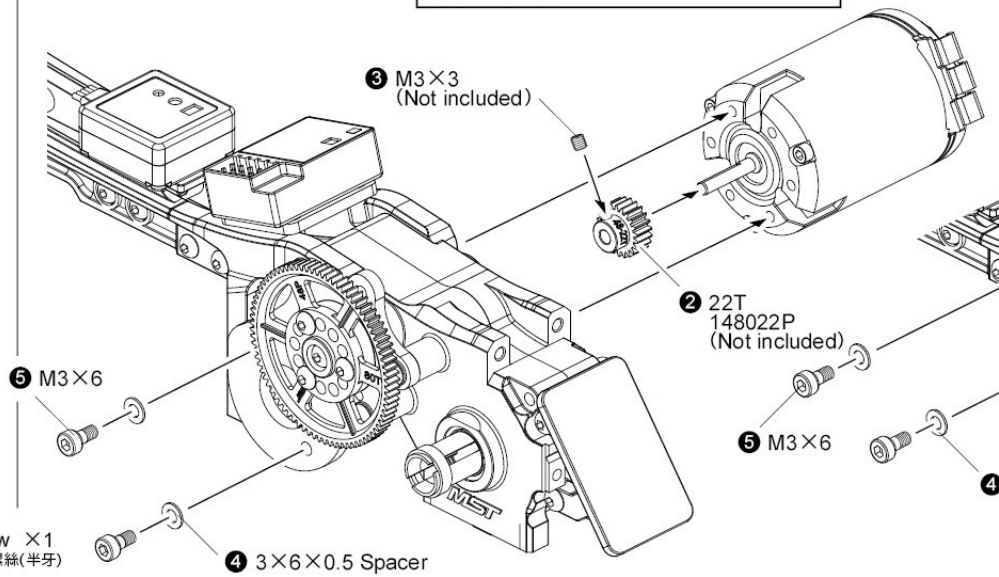

RMX Motor HCG Mode
RMX高重心模式

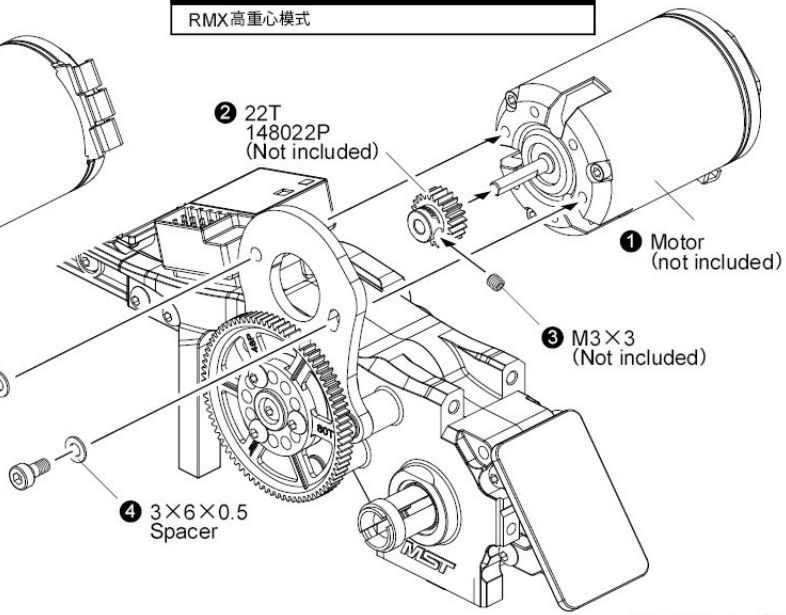

STEP 3 Attaching rear gear box
安裝後齒箱

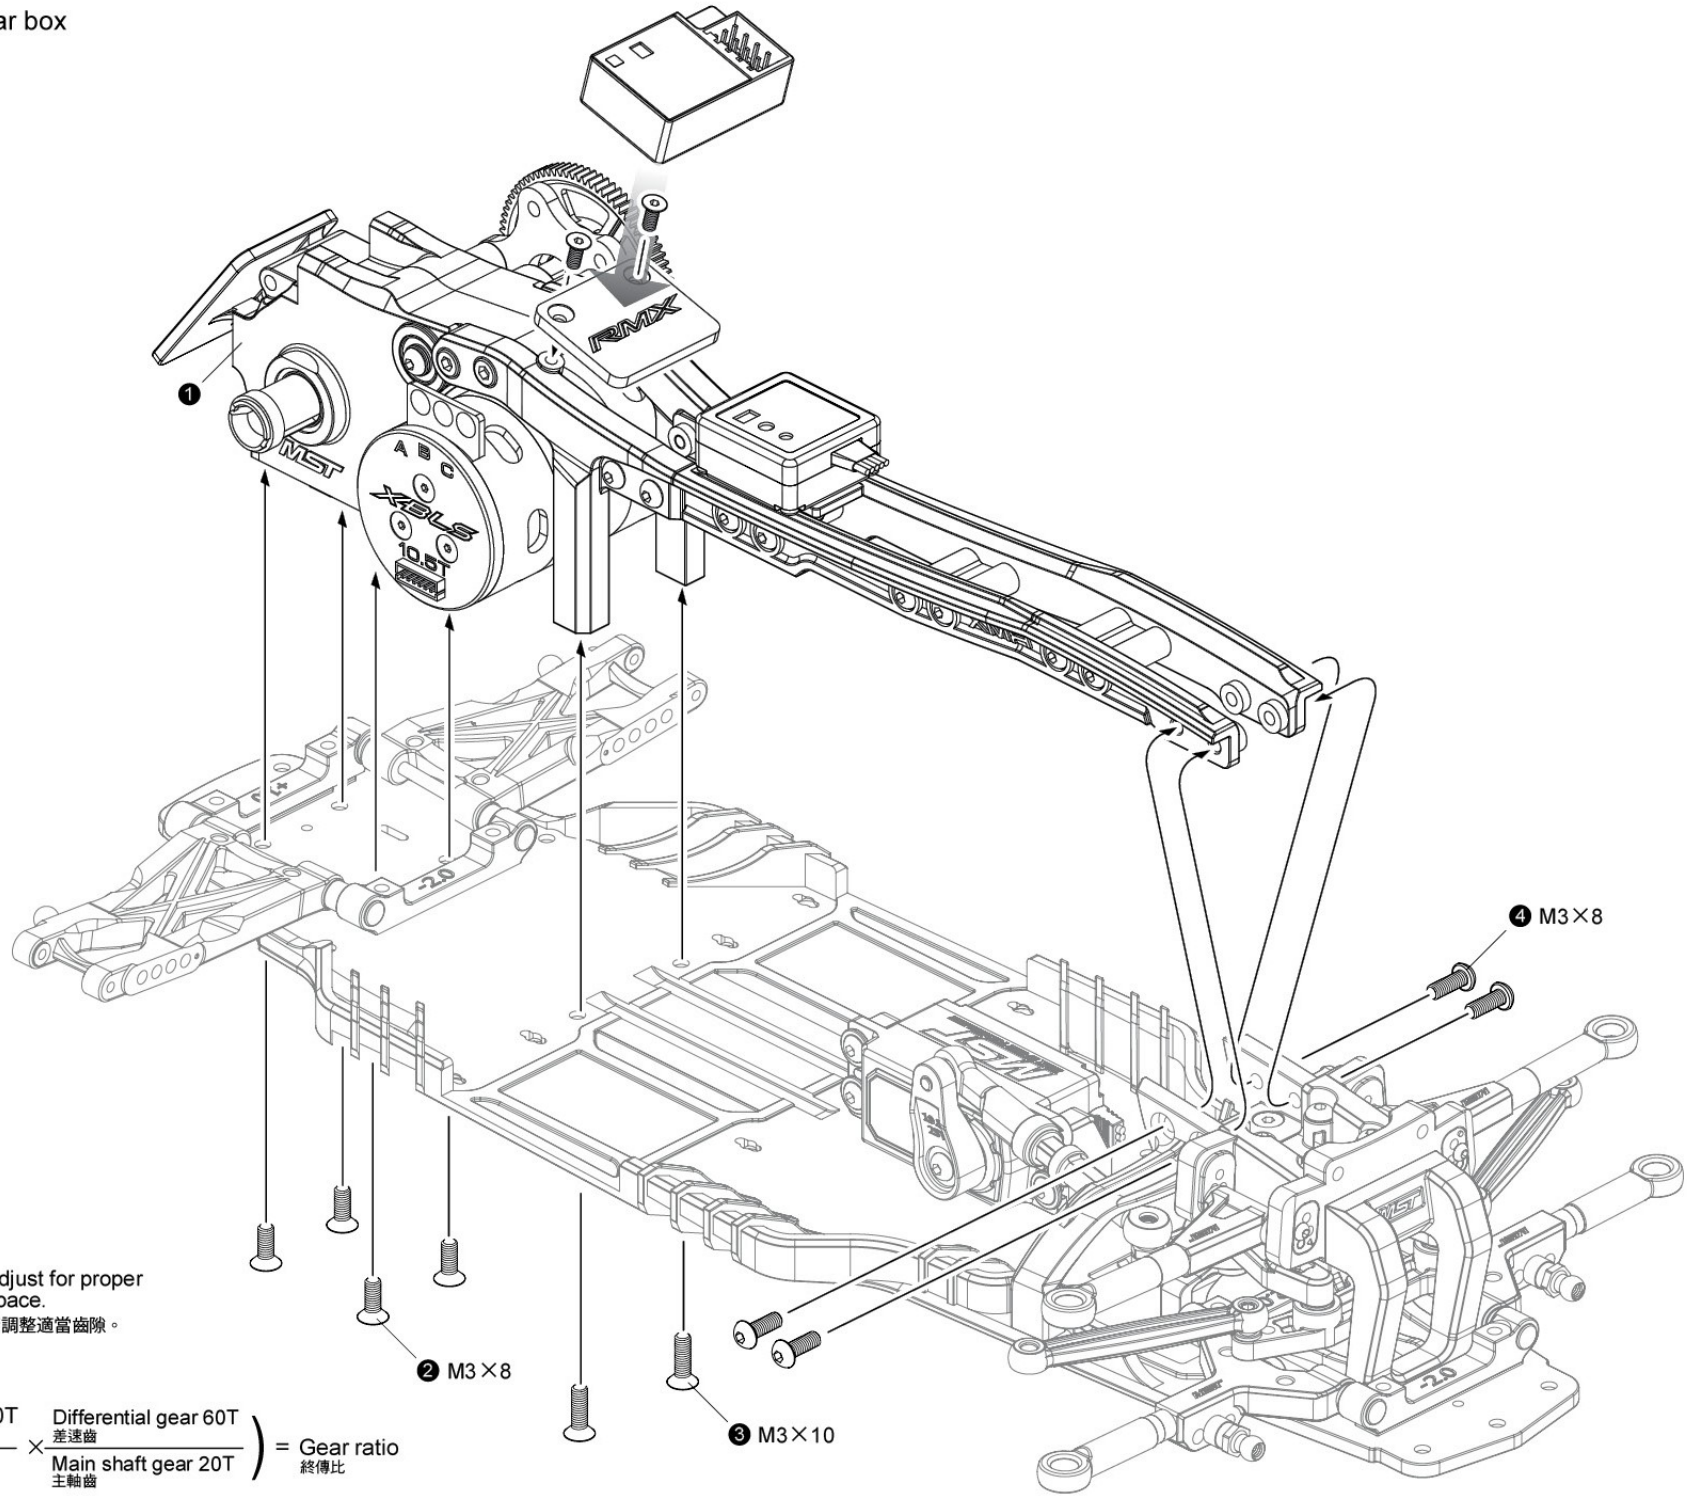


GEAR RATIO (For **80T** Spur Gear)	
Pinion gear teeth	60T/20T <3.00>
22T	10.91
23T	10.43
24T	10
25T	9.6
26T	9.23
27T	8.89

※Adjust for proper space.
請調整適當齒隙。

＊**FORMULA** 計算公式

$$\left(\frac{\text{Spur gear teeth 80T (大直齒)}}{\text{Pinion gear teeth (馬達齒)}} \times \frac{\text{Differential gear 60T (差速齒)}}{\text{Main shaft gear 20T (主軸齒)}}\right) = \text{Gear ratio (終傳比)}$$

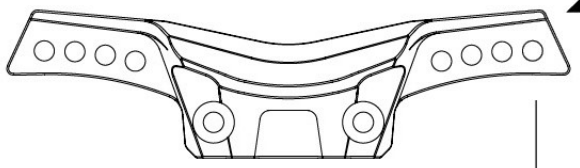

Front dmaper stay ×1
前避震架



Rear dmaper stay ×1
後避震架



M3×8 screw ×4
圓頭螺絲



M3×10 screw ×4
圓頭螺絲



M3×18 screw ×2
沉頭螺絲




4.8 Ball connector ×6
外六角球頭



3×5.5×2 Spacer ×2
墊片




Nut ×2
螺絲固定座
Bag 2





Rear upper turnbuckle ×2
後上拉桿
Bag 2

STEP 1 Attaching front damper stay
安裝前避震架

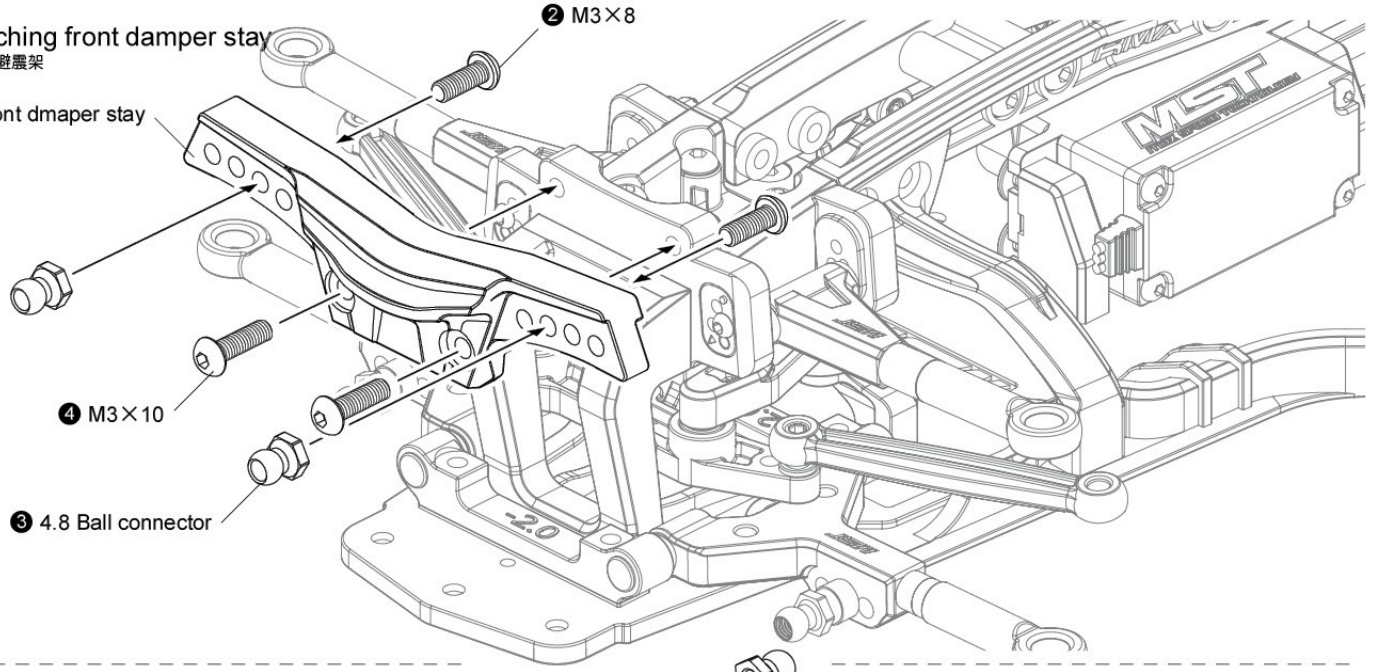


STEP 2 Attaching rear damper stay
安裝後避震架

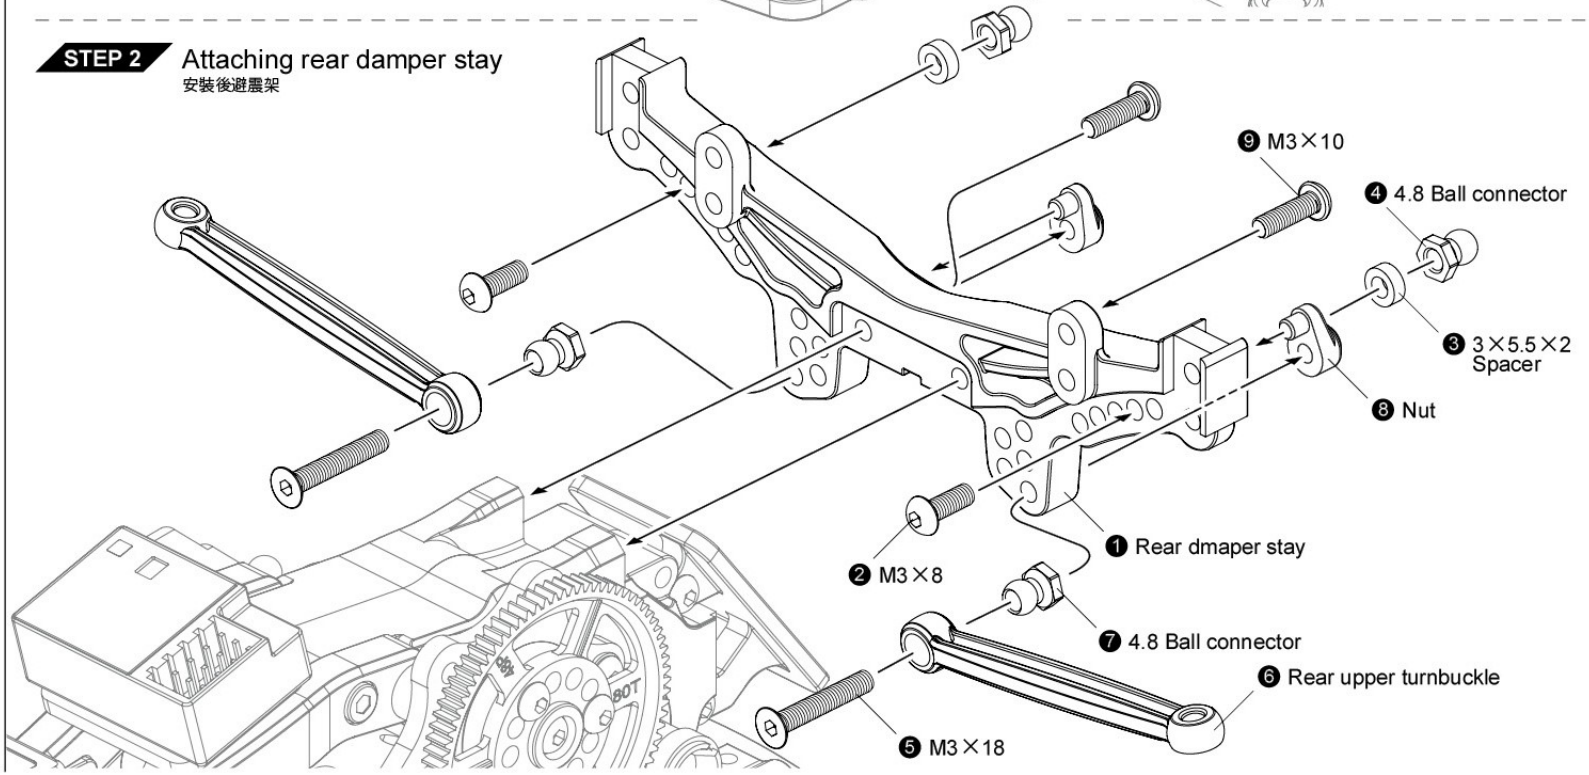

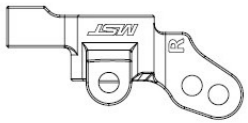


Front upright R ×1
前輪座 R

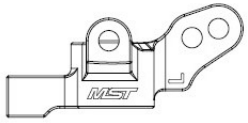


Front upright L ×1
前輪座 L



Brake calipers ×2
剎車卡鉗

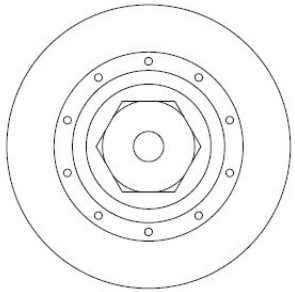

Wheel hubs (large)
(brake disc shaped) ×2
六角輪座(大)(剎車碟型)



2WD Axle ×2
二驅輪軸



5.8×4 Ball connector L ×4
球頭螺絲(長)



4.8×4.5 Ball connector ×2
球頭螺絲



M2×4 screw ×2
圓頭螺絲



2×9.8 Shaft ×2
插銷




5×8 Ball bearing ×4
培林





5×7×0.3 Spacer ×2
墊片

STEP 1 Front axle assembly
前輪座組裝

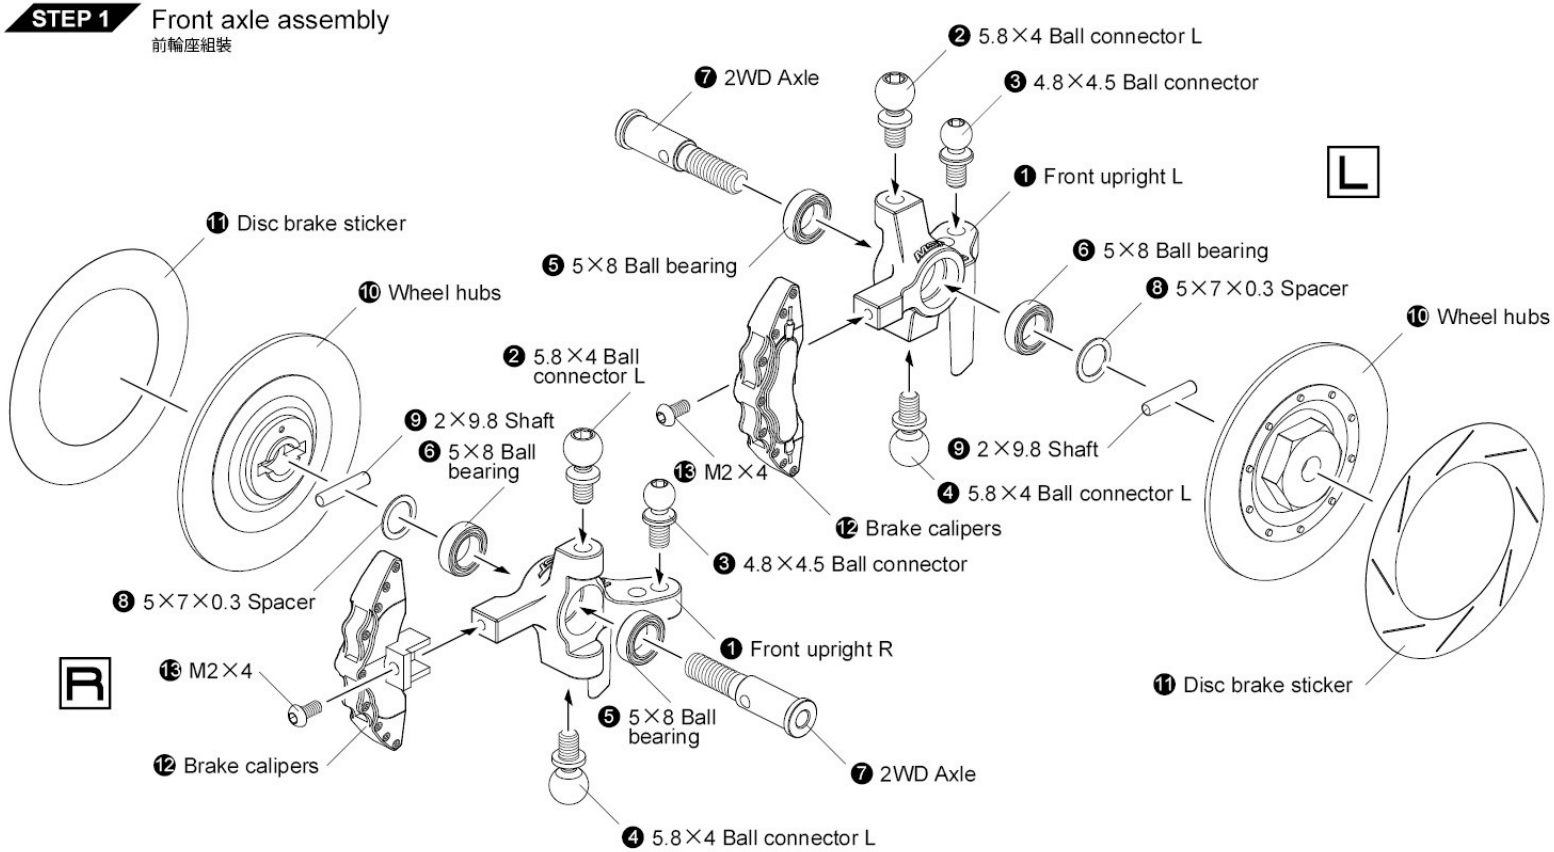

STEP 2 Attaching front axle
安裝前輪座

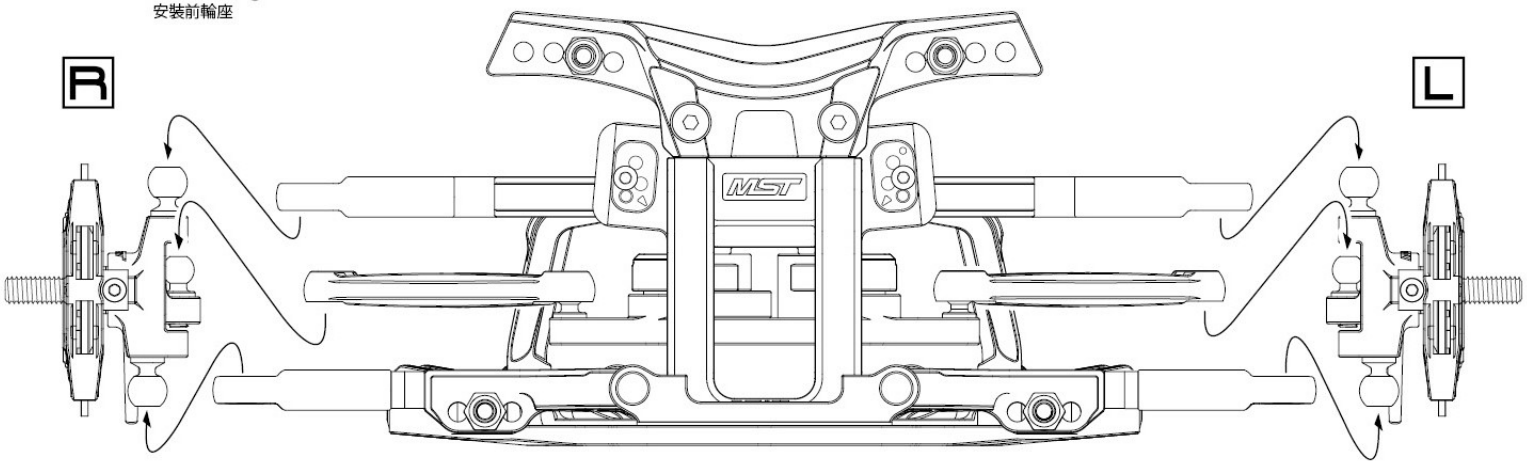

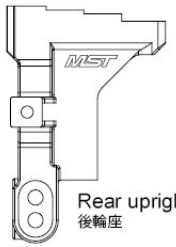


Rear upright ×2
後輪座



Brake calipers ×2
剎車卡鉗



Cross joint ×2
連接軸

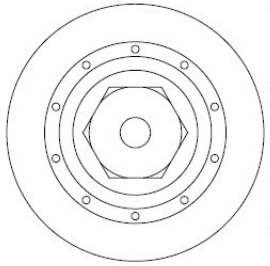



M2×4 screw ×2
圓頭螺絲



M3×3 screw ×2
止付螺絲

Wheel hubs (small)(brake disc shaped) ×2
六角輪座(小)(剎車碟型)



5×11 Ball bearing ×2
培林



10×15 Ball bearing ×2
培林



5×7×0.1 Spacer ×2
墊片




2×22 Shaft ×2
插銷




2×9.8 Shaft ×4
插銷



4.8×4.5 Ball connector ×2
球頭螺絲





Wheel axle ×2
萬向接杯




Steel CVD universal shaft 48 ×2
鋼製CVD傳動軸 48

STEP 1 Rear axle assembly
後輪座組裝

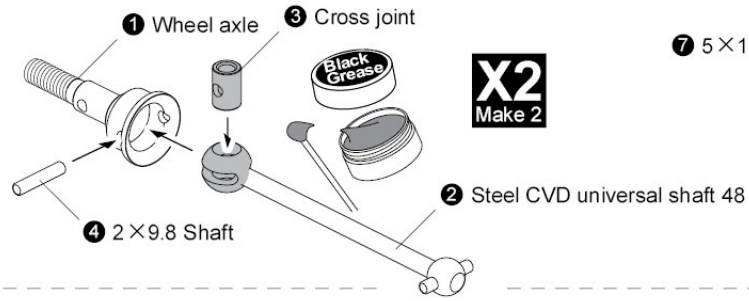

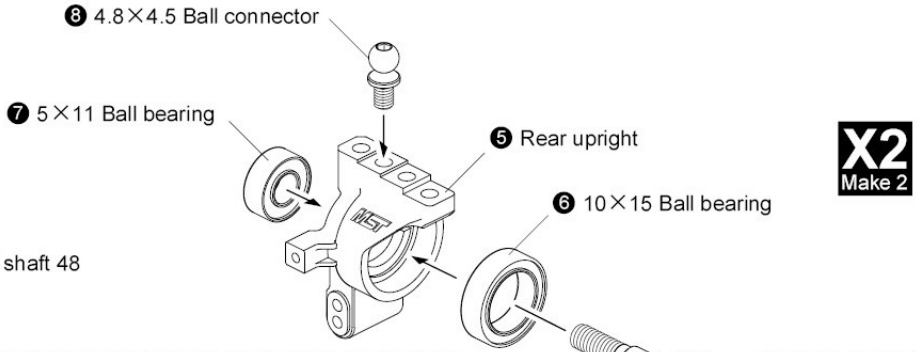

STEP 2 Attaching rear axle
安裝後輪座

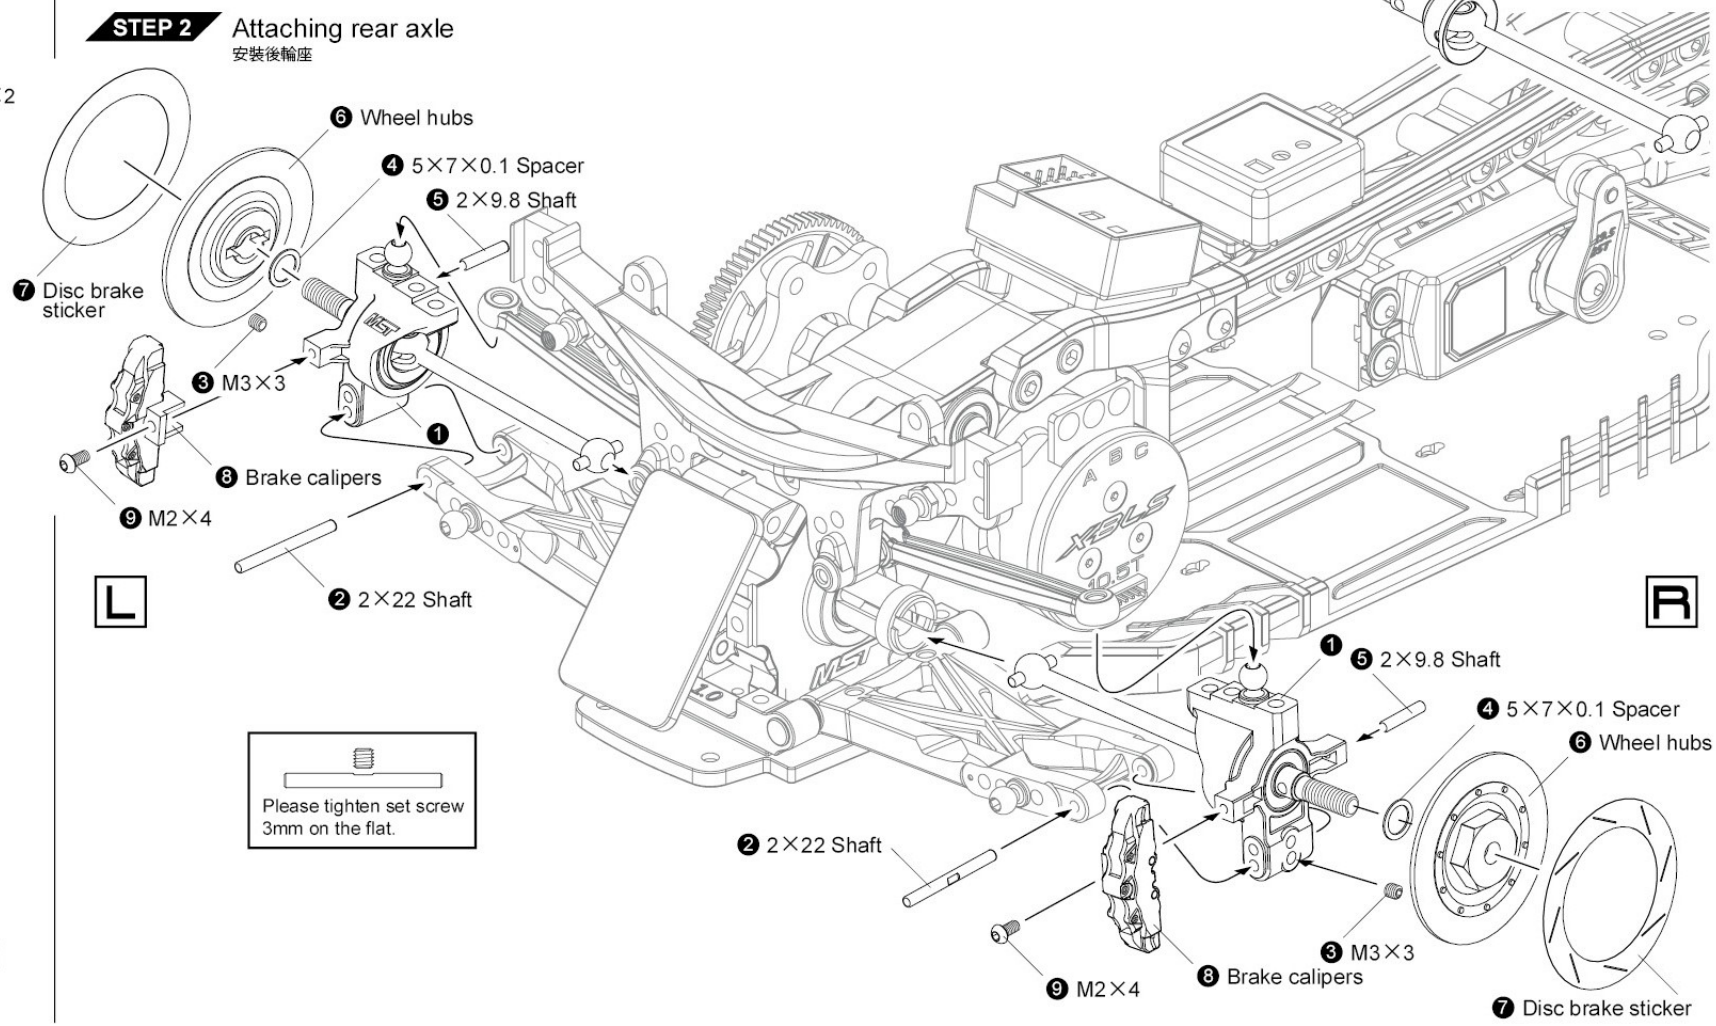

Hard coil spring 31mm ×2 (gold)
硬避震彈簧 31mm (金)

Soft coil spring 31mm ×2 (purple-green)
軟避震彈簧 31mm (紫綠)

Damper cylinder ×4
避震筒身

Spring retainer (red) ×4
避震器調整環 (紅)

Piston rod ×4
避震軸心

Piston ×4
避震活塞

Cylinder cap ×4
避震器上蓋

Damper adjuster ×4
避震器拉桿

Rod guide cap ×4
避震器下蓋

10.8×0.9 O-ring ×4
O環

Damper retainer ×4
避震器彈簧座

12×1 O-ring ×4
O環

Oil seal ×4
避震器氣室


Damper O-ring P3 ×4
避震器O環

E-clip ×8
E形扣

Rod guide ×4
避震器下蓋墊片

M3×4 screw ×4
沉頭螺絲


STEP 1 Damper assembly
避震器組裝

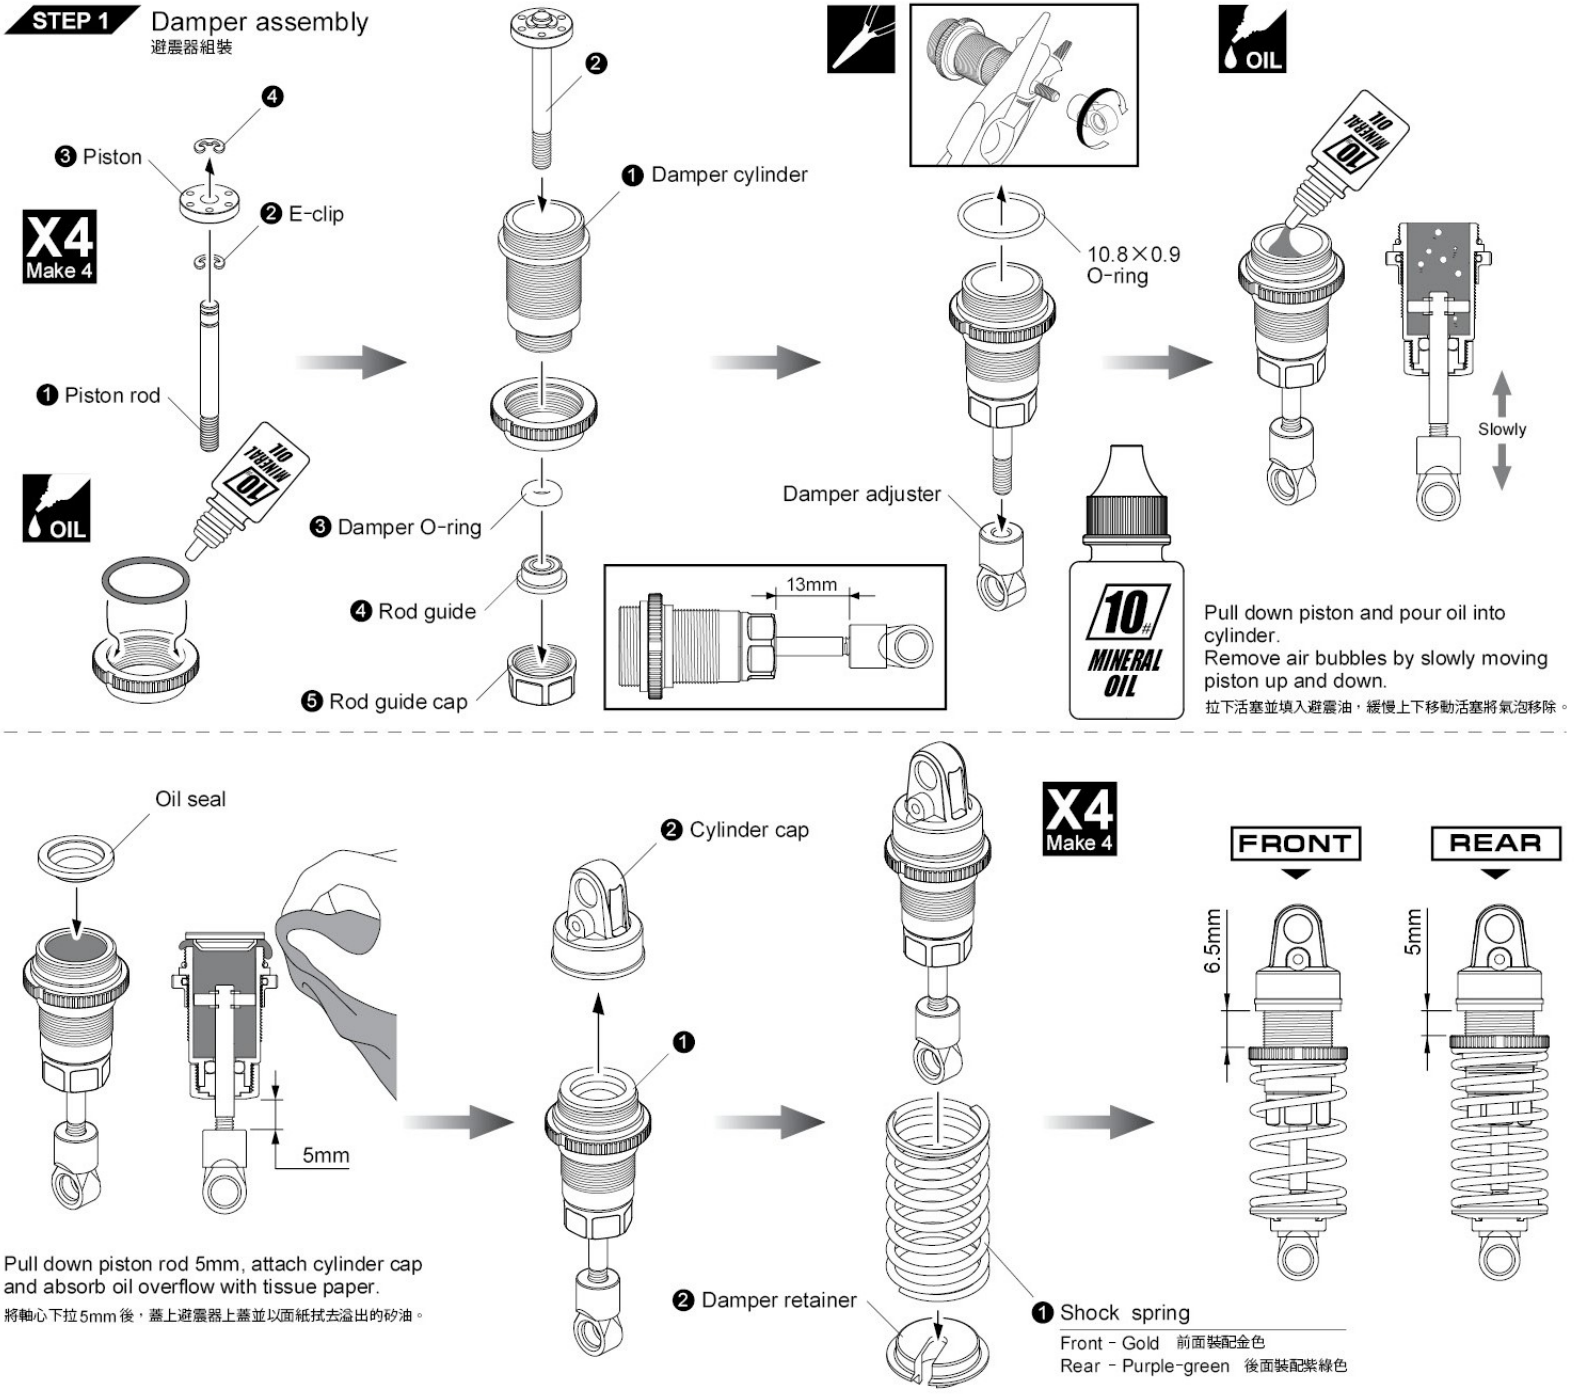


Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

Pull down piston rod 5mm, attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉5mm後，蓋上避震器上蓋並以面紙拭去溢出的矽油。


STEP 2 Attaching front damper
安裝前避震器

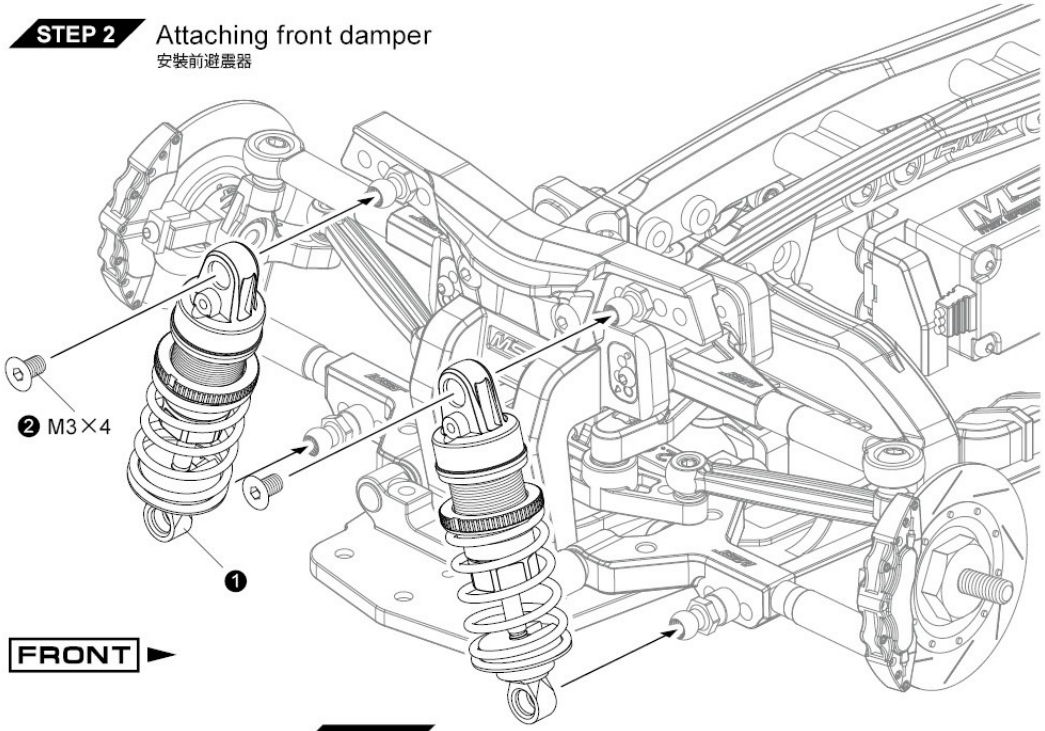



STEP 3 Attaching rear damper
安裝後避震器

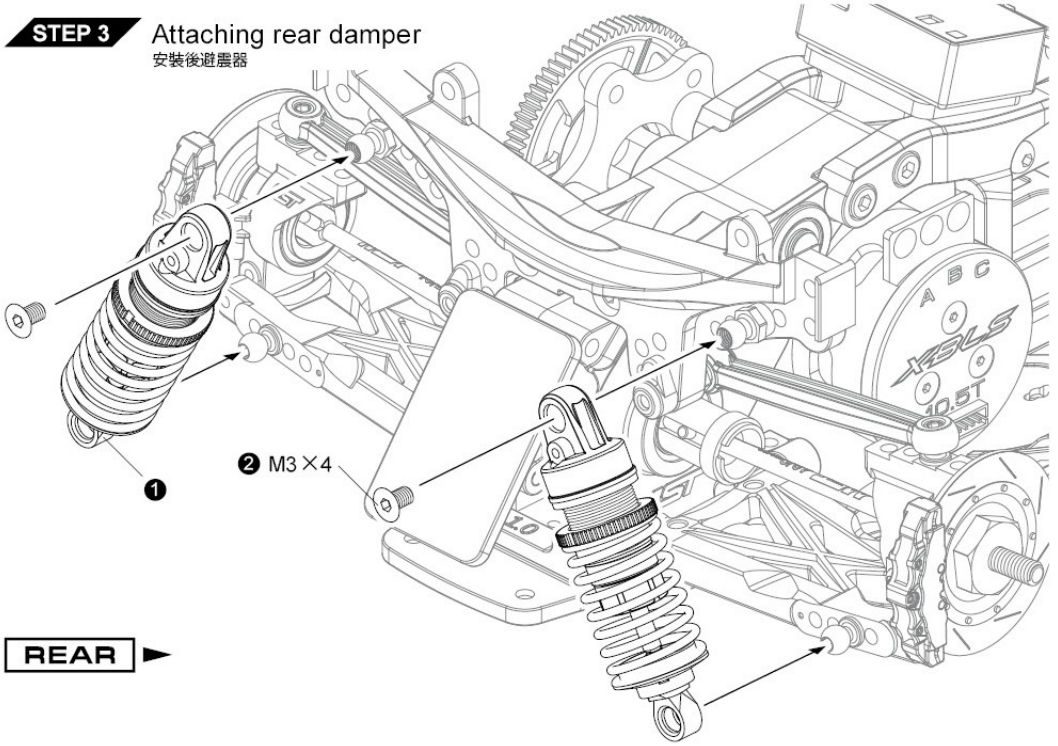

PARTS BAG 9 ◄ BATTERY MOUNT
電池座

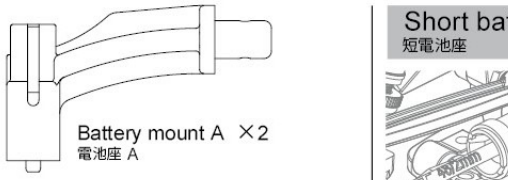
Battery mount A ×2
電池座 A

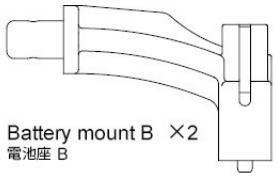
Battery mount B ×2
電池座 B

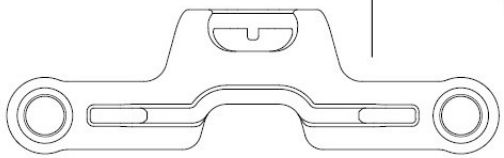

Battery mount C ×2
電池座 C


M3×8 screw ×4
沉頭螺絲



R-clip 5.0 ×4
R銷 5.0

Short battery mount
短電池座


※ The bumps are able to be cutted off to apply the battery measurements.
可依電池尺寸切除凸點。

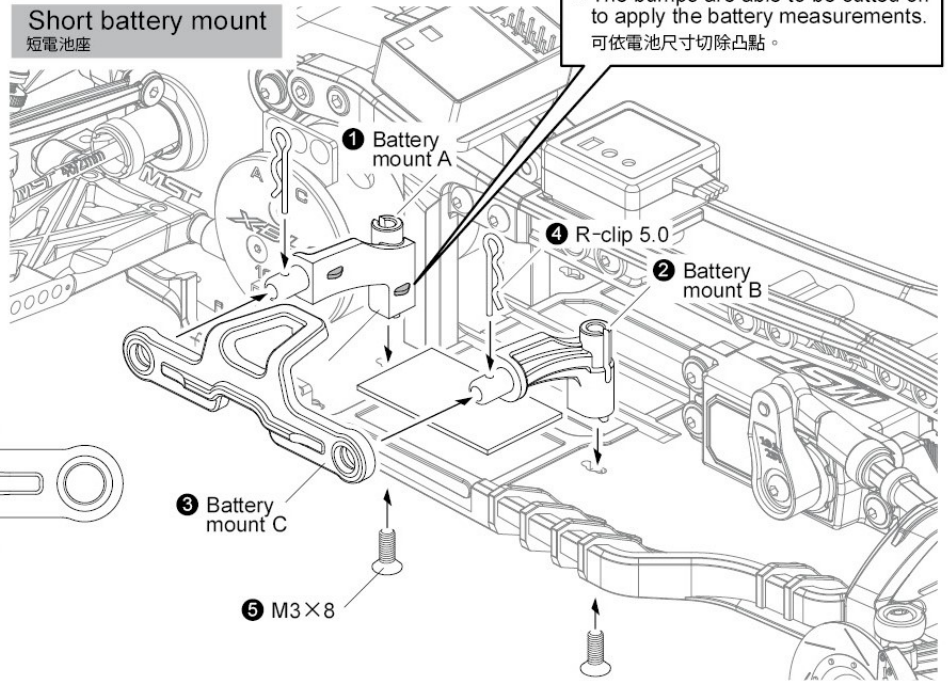


※ Recommended battery measurement
L98×W48×H27mm (not exceed)
建議安裝（長98×寬48×高27mm）尺寸以內的電池！

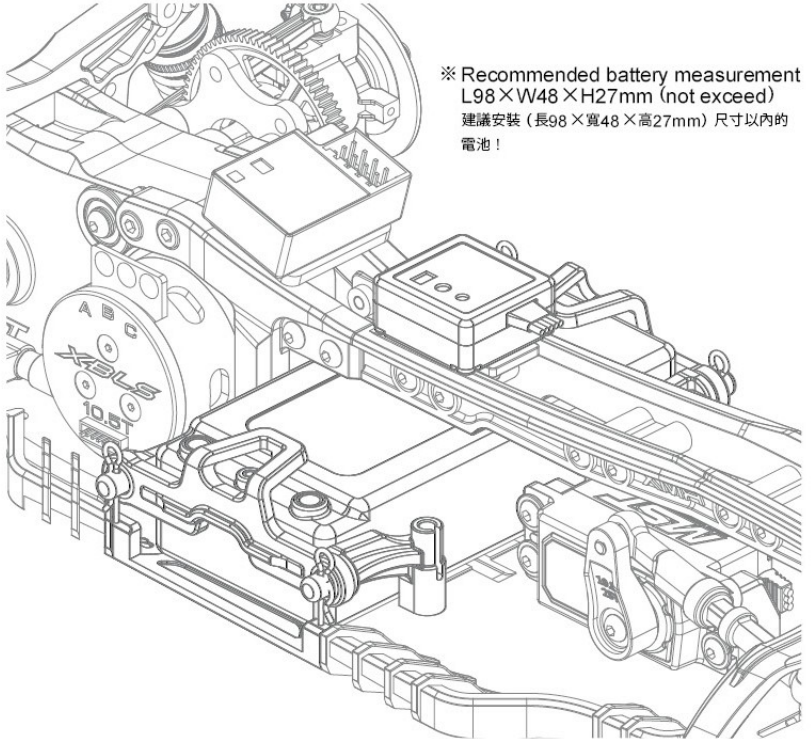


Long battery mount
長電池座

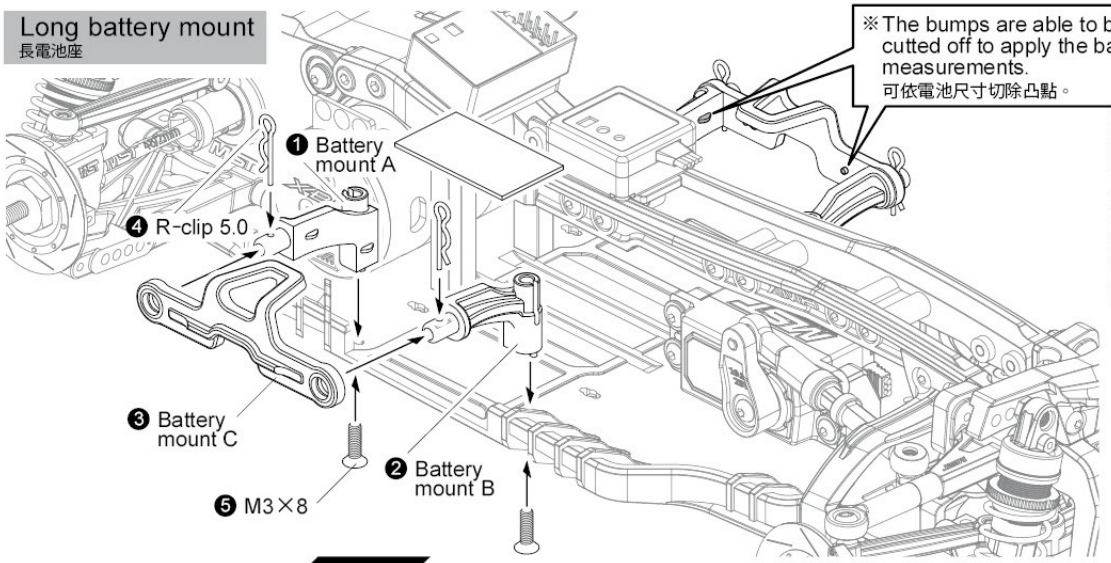

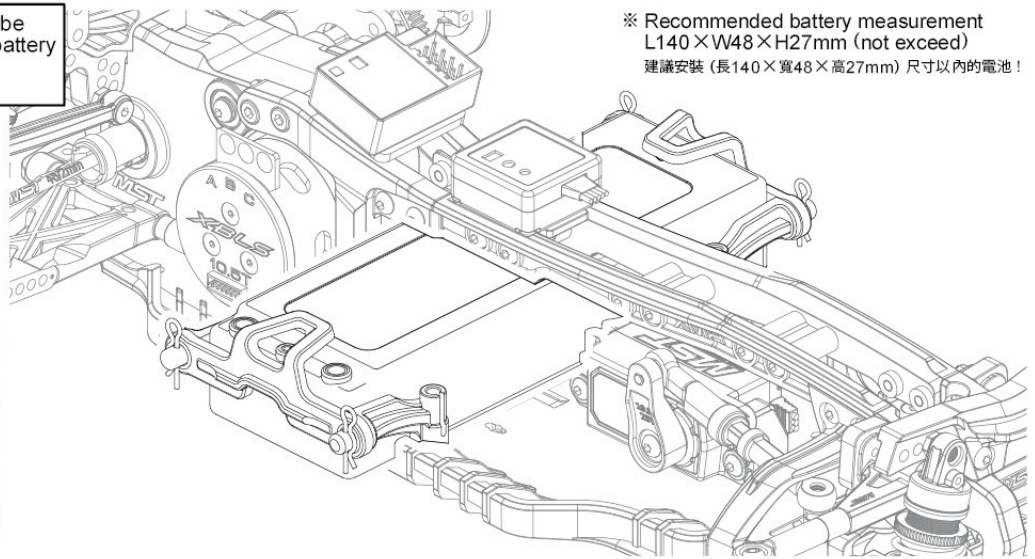

PARTS BAG 9 — WHEELS
輪胎



Wheel hub spacer 1.0 ×2
輪座墊片 1.0
Bag 2




Flange nut M4 ×4
凸緣螺帽M4




Wheel ×4
輪胎


※ NOT including.
Please refer to MST website for the wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]

STEP 1 Attaching wheels
安裝輪胎

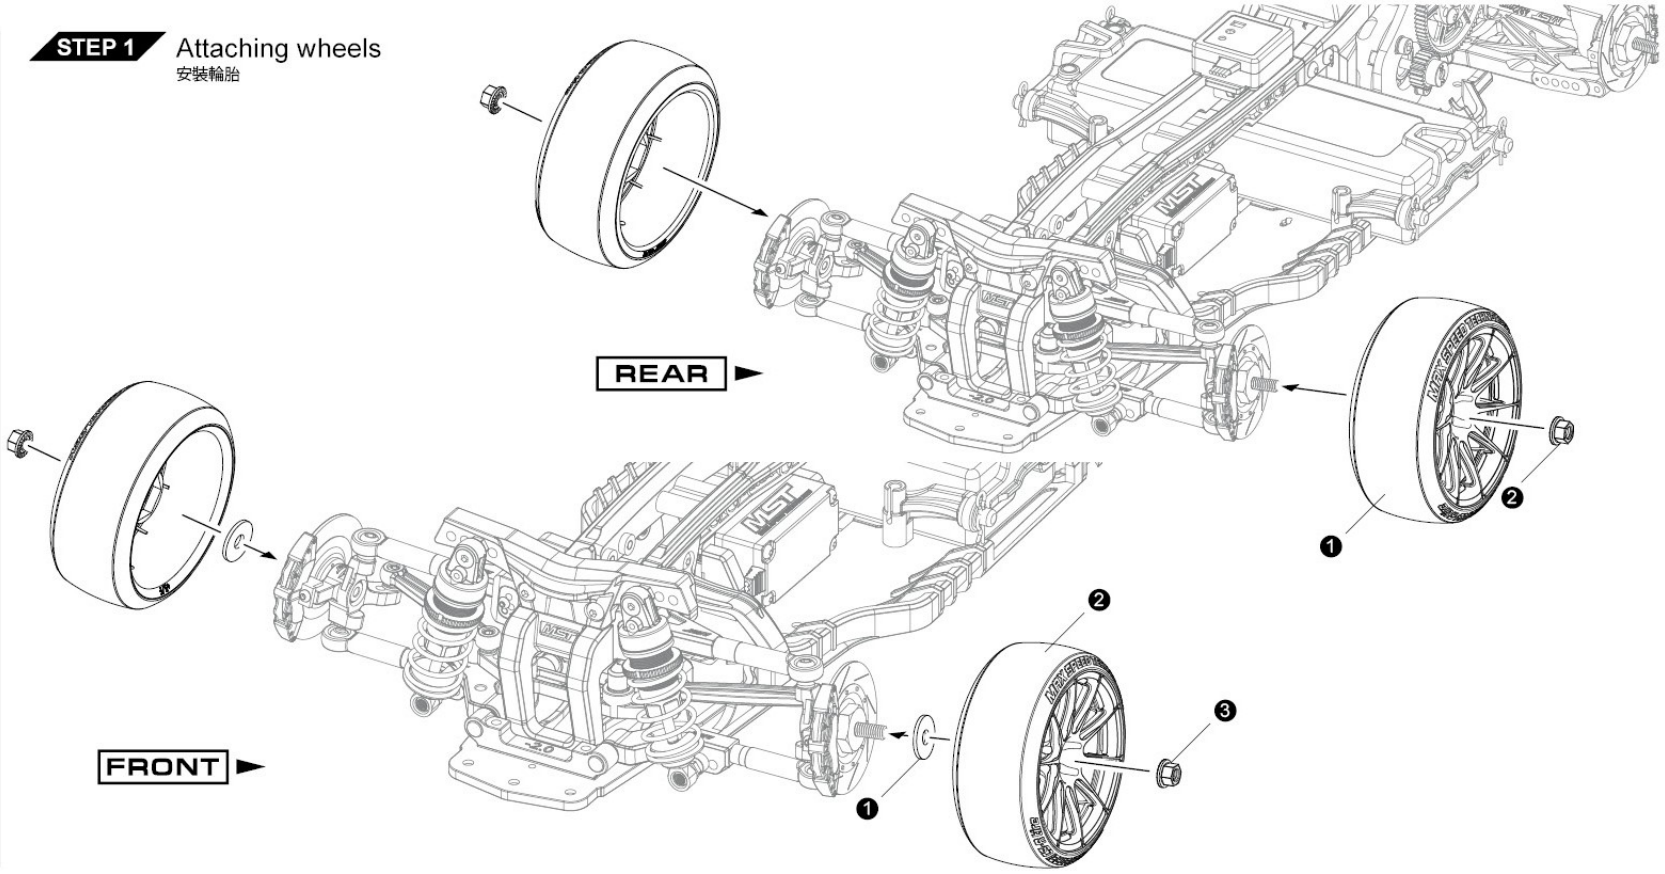

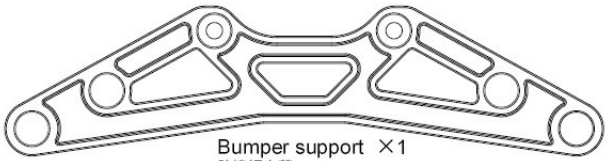


Bumper support ×1
防撞板上蓋

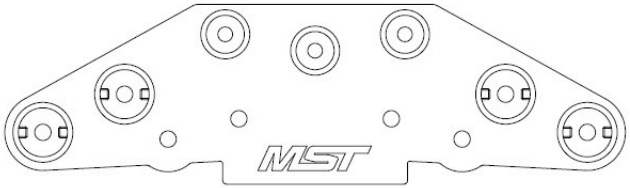


Bumper mount ×1
防撞板下座




Rear bumper ×1
後防護板



Body mount cover M ×2
支柱套 M



Body mount cover L ×2
支柱套 L



Rear body mount ×2
後車殼支柱



Front body mount ×2
前車殼支柱



M3×10 screw ×2
圓頭螺絲



M3×8 screw ×2
圓頭螺絲




M3×8 screw ×7
沉頭螺絲



M2×8 screw ×4
圓頭螺絲

STEP 1 Attaching body mounts
安裝車殼固定座

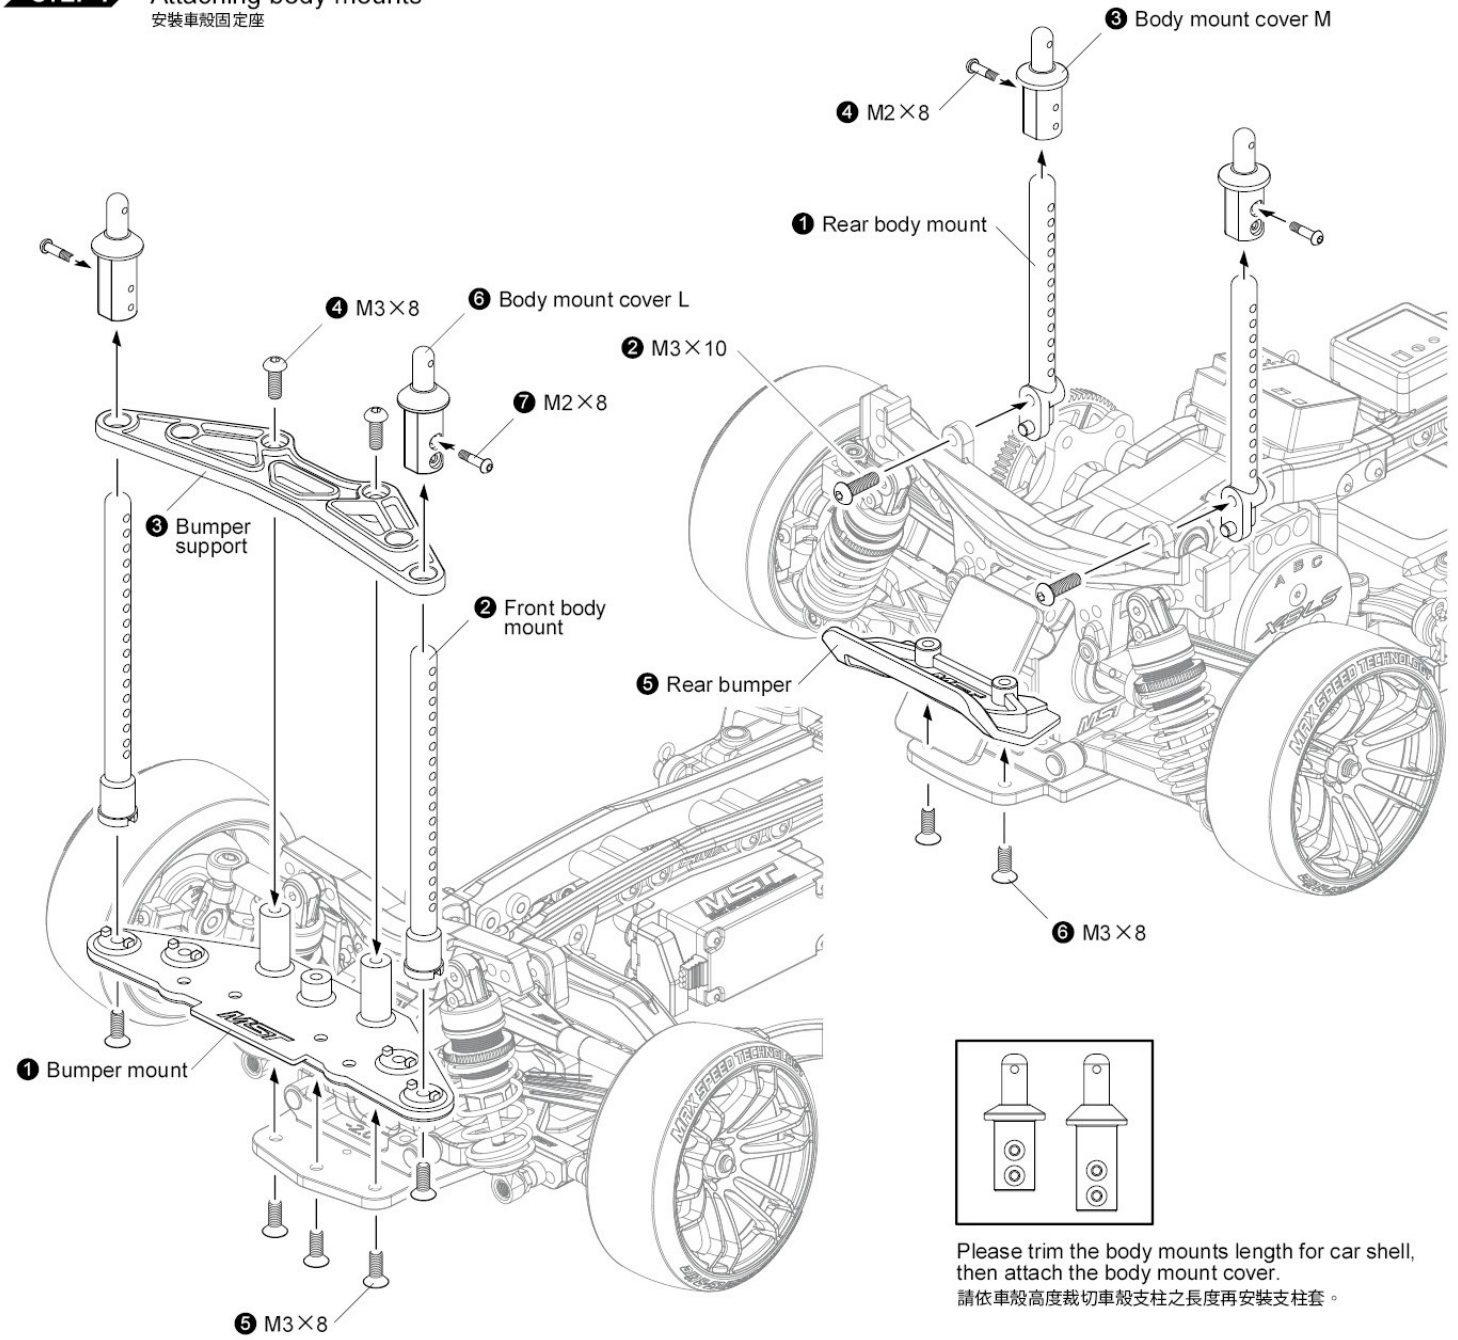

Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。

PARTS



M2×4 Screw ×8
圓頭螺絲
110004



M2×8 Screw ×2
圓頭螺絲
110063



M2×8 Screw ×4
圓頭螺絲(半牙)
110045



M3×6 Screw ×5
圓頭螺絲
110001



M3×8 Screw ×26
圓頭螺絲
110002



M3×10 Screw ×9
圓頭螺絲
110026



M3×12 Screw ×1
圓頭螺絲
110029



M3×14 Screw ×8
圓頭螺絲
110061



M3×16 Screw ×1
圓頭螺絲
110086



M3×20 Screw ×2
圓頭螺絲
110088



2.6×10 Screw ×1
自攻圓頭螺絲
110025



M3×4 screw ×4
沉頭螺絲
110099



M3×8 Screw ×27
沉頭螺絲
110005



M3×10 Screw ×10
沉頭螺絲
110052



M3×12 Screw ×2
沉頭螺絲
110043



M3×20 Screw ×2
沉頭螺絲
110101



3×6×0.5 Spacer ×8
墊片
110047



3×8×0.5 Spacer ×1
墊片
110048



4×6×0.3 Spacer ×4
墊片
820017



5×7×0.1 Spacer ×2
墊片
820018



5×7×0.3 Spacer ×2
墊片
820020



3×6×2.5 Bearing ×4
軸承
120024



5×8 Bearing ×4
軸承
120017



4×8×3 Ball bearing ×2
培林
120013



5×8 Ball bearing ×6
培林
120003



4×10 Ball bearing ×2
培林
120018



10×15 Ball bearing ×4
培林
120001



5×10 Ball bearing ×2
培林
120002



5×11 Ball bearing ×2
培林
120011



4.8 Ball connector ×7
外六角球頭
210161



4.8 Ball connector L ×2
外六角球頭 (長)
210344



4.8×4.5 Ball connector ×8
球頭螺絲
310001



4.8×4.5 S Ball connector ×1
球頭螺絲
210433



5.8×4 Ball connector L ×4
球頭螺絲(長)
210491



M3×6 Screw ×2
有頭螺絲(半牙)
110011



M3×8 Screw ×4
帶墊片螺絲
110120




Flange nut M4 ×4
凸緣螺帽
110015



Cross joint ×2
連接軸
820030



M3×30 Screw ×1
有頭螺絲(半牙)
110100



M3×40 Screw ×3
有頭螺絲(半牙)
110091

2WD Axle ×2
二驅輸軸
820095

Wheel axle ×2
萬向接杯
310006

M3×3 Screw ×3
止付螺絲
110035

M3×4 Screw ×1
止付螺絲
110083

M3×30 Set Screw ×6
六角止付螺絲
110103

2×9.8 Shaft ×7
插銷
110017

2×22 Shaft ×2
插銷
310047

2×28 Shaft ×2
插銷
310103

2.5×46 Arm shaft ×4
擺臂插銷
310048

Suspension mount spacer 0.5mm ×2
擺臂座墊片 0.5mm
820063

R-clip 5.0 ×4
R銷 5.0
820075BK

Wheel hub spacer 1.0 ×2
輪座墊片 1.0
820049

4×21 Steel center shaft ×2
鋼製心軸
310119

Alum. Main shaft 20T ×1
鋁合金主齒軸 20T
310118

Steel CVD universal shaft 48 ×2
鋼製CVD傳動軸 48
820136

Hard coil spring 31mm ×2 (gold)
硬避震彈簧 31mm (金)
820103

Soft coil spring 31mm ×2 (purple-green)
軟避震彈簧 31mm (紫綠)
820104

Damper cylinder ×4
避震筒身
210071

Piston rod ×4
避震軸心
310008

Piston ×4
避震活塞
210235

Cylinder cap ×4
避震器上蓋
210057

Damper adjuster ×4
避震器拉桿
820079

Rod guide cap ×4
避震器下蓋
210057

10.8×0.9 O-ring ×4
O環
130032

Damper retainer ×4
避震器彈簧座
820079

12×1 O-ring ×4
O環
130049

Oil seal ×4
避震器氣室
130004


Spring retainer (red) ×4
避震器調整環 (紅)
310106R

Rod guide ×4
避震器下蓋墊片
210235


E-clip ×10
E形扣
110013

Damper O-ring P3 ×4
避震器O環
130028


M3×4 screw ×4
沉頭螺絲
110099

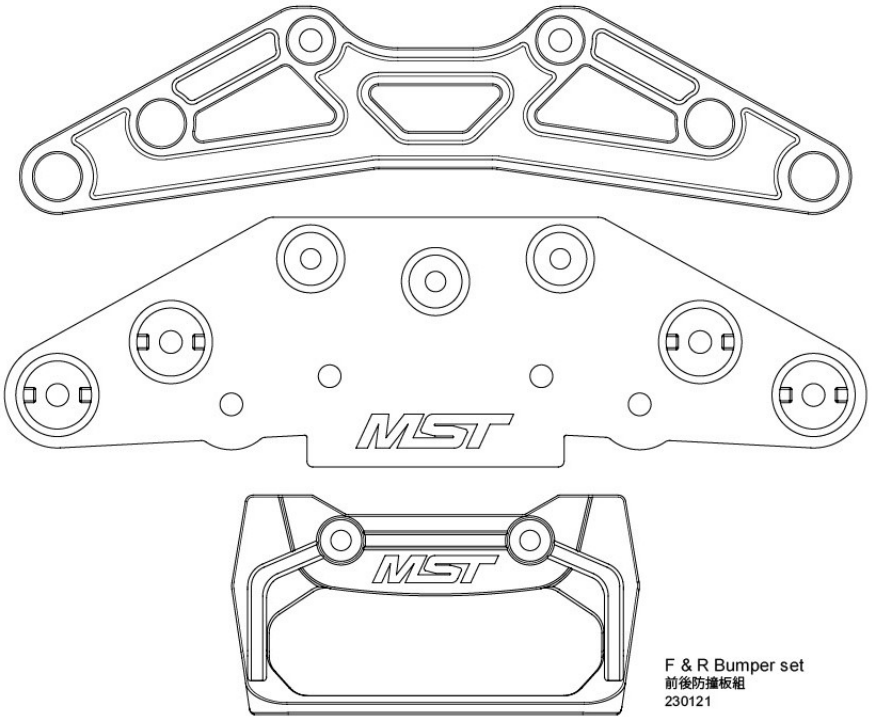


F & R Bumper set
前後防撞板組
230121

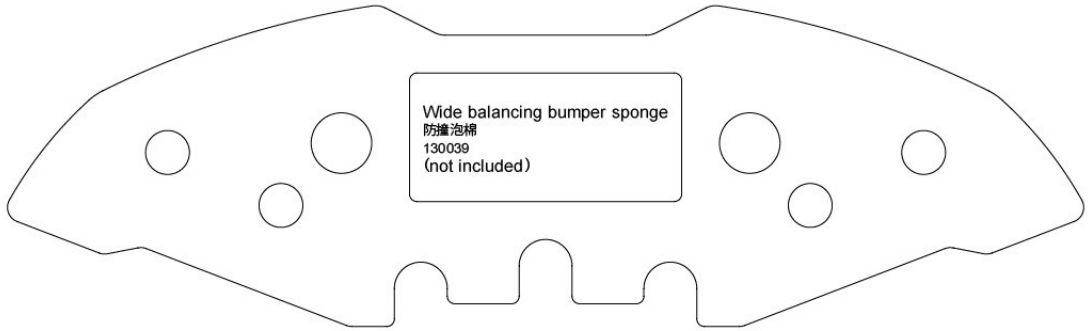


Wide balancing bumper sponge
防撞泡棉
130039
(not included)

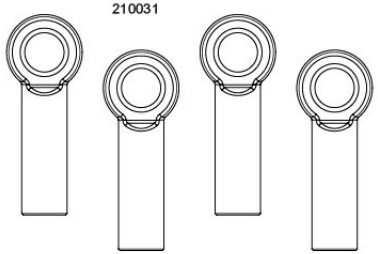


5.8×26 Reinforced adjuster set
強化拉桿頭組
210031

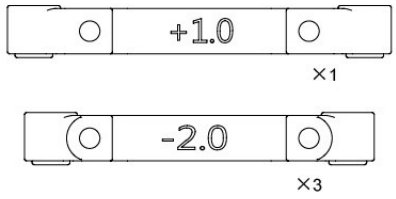


Suspension mount set (+1.0 / -2.0)
下擺臂座組 (+1.0 / -2.0)
230069




Pinion gear ×1
48P-22T
馬達齒
148022P

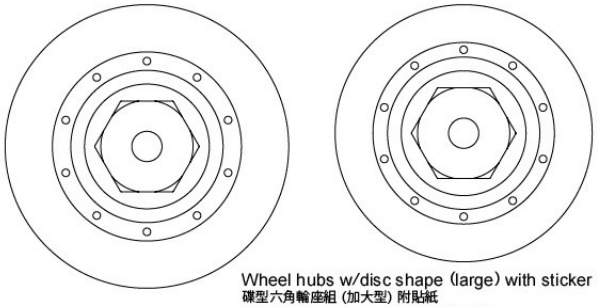


Wheel hubs w/disc shape (large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

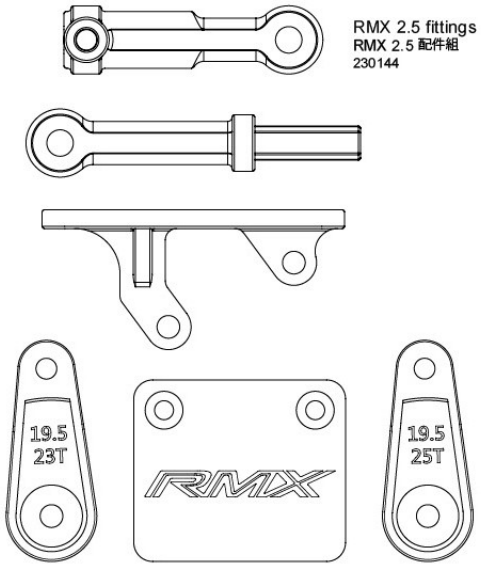


RMX 2.5 fittings
RMX 2.5 配件組
230144

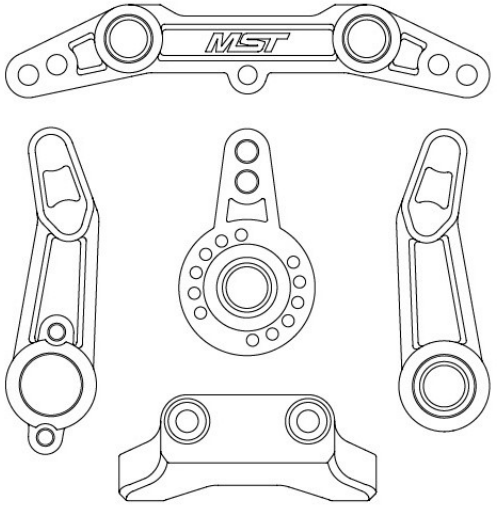


Steering arm set
轉向搖臂組
230058

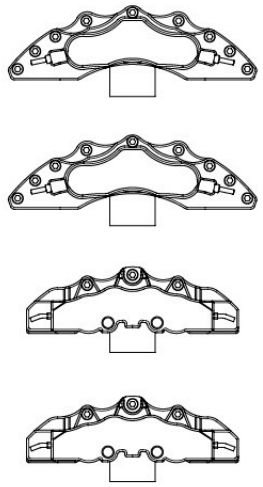


Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

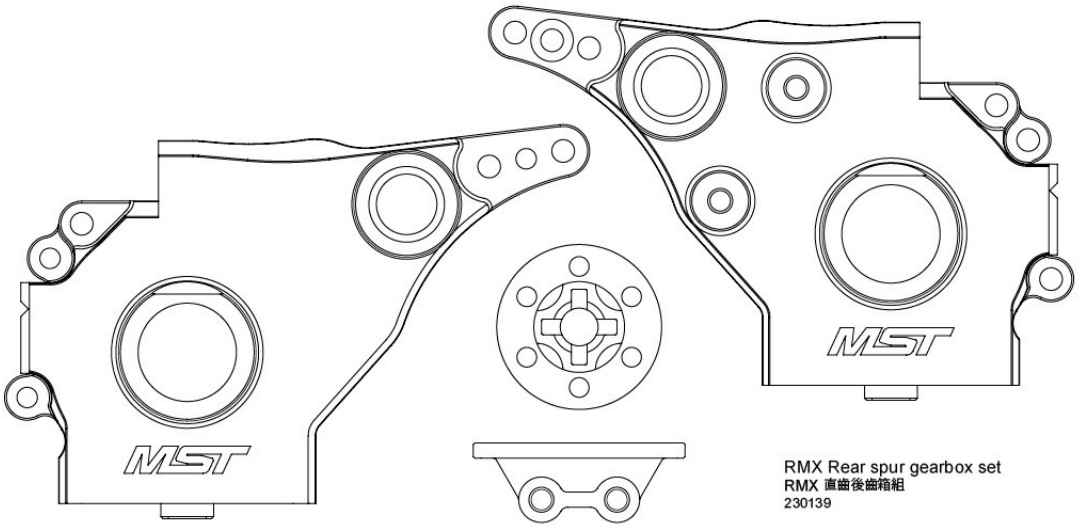


RMX Rear spur gearbox set
RMX 直齒後齒箱組
230139

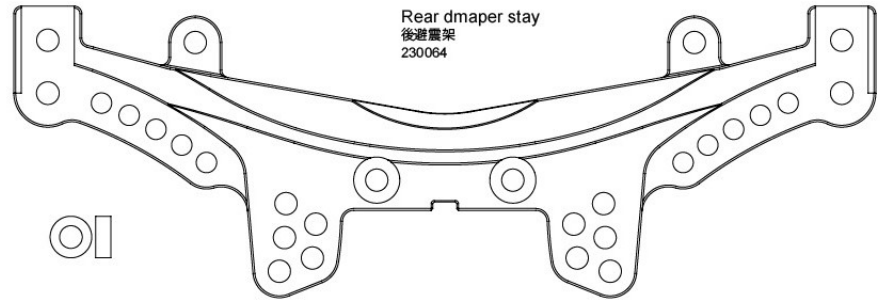

Rear dmaper stay
後避震架
230064

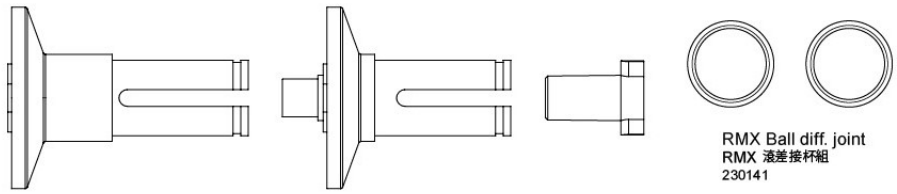


RMX Ball diff. joint
RMX 滾差接杯組
230141

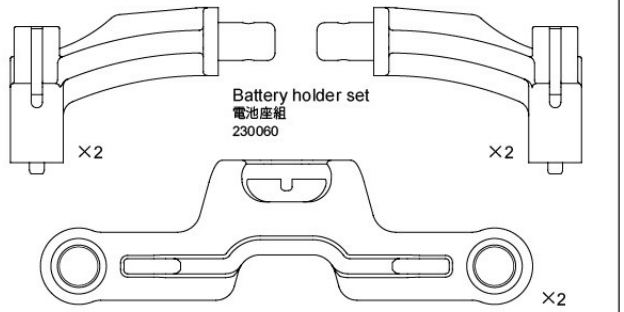


Battery holder set
電池座組
230060


×2 ×2 ×2

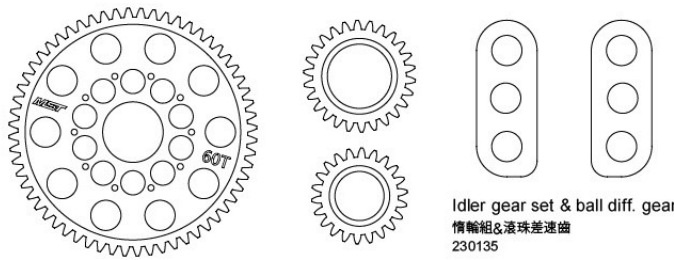

Idler gear set & ball diff. gear
惰輪組&滾珠差速齒
230135

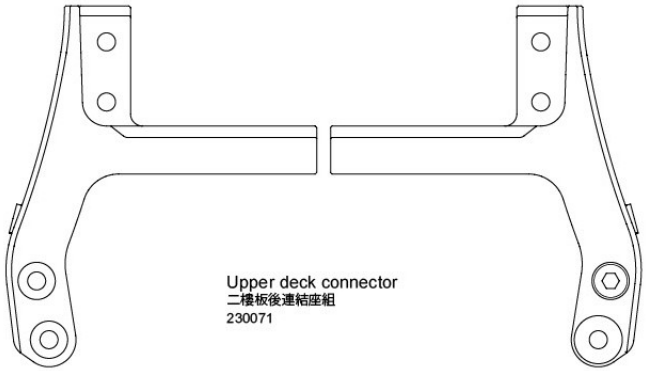


Upper deck connector
二樓板後連結座組
230071

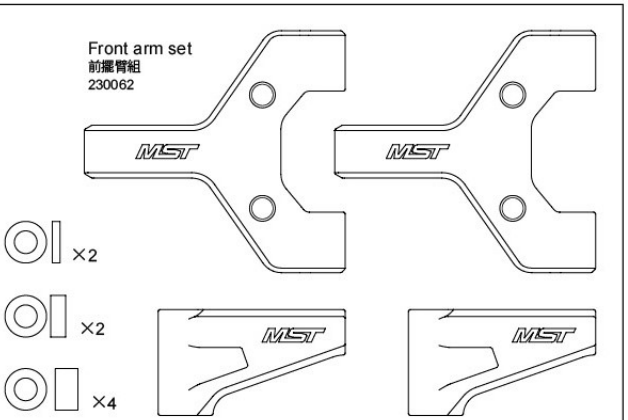


Front arm set
前擺臂組
230062


×2 ×2 ×4

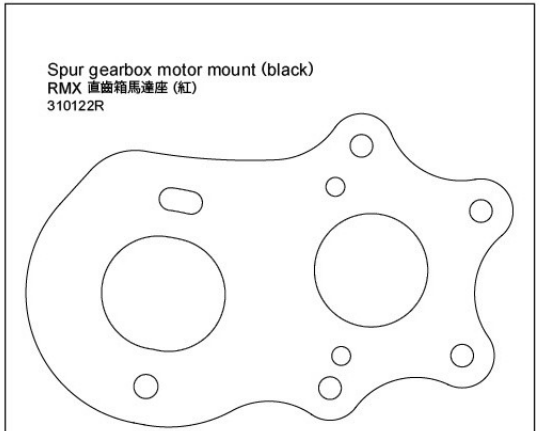

Spur gearbox motor mount (black)
RMX 直齒箱馬達座 (紅)
310122R

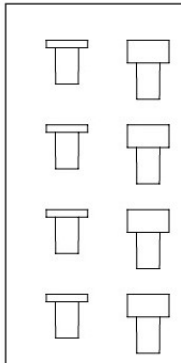


Shaft bush & spacer set (white)
襯套墊片組 (白)
210063(W)

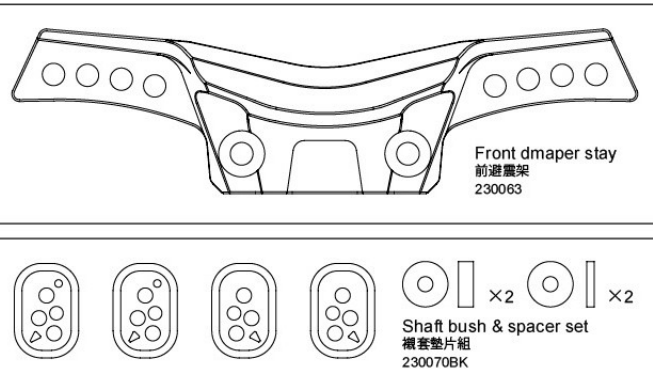


Front dmaper stay
前避震架
230063


×2 ×2
Shaft bush & spacer set
襯套墊片組
230070BK

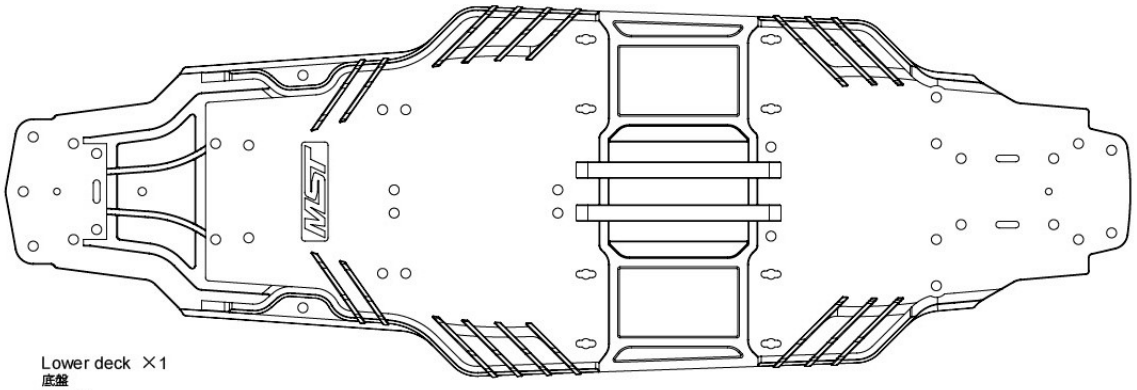


Lower deck ×1
底盤
230072

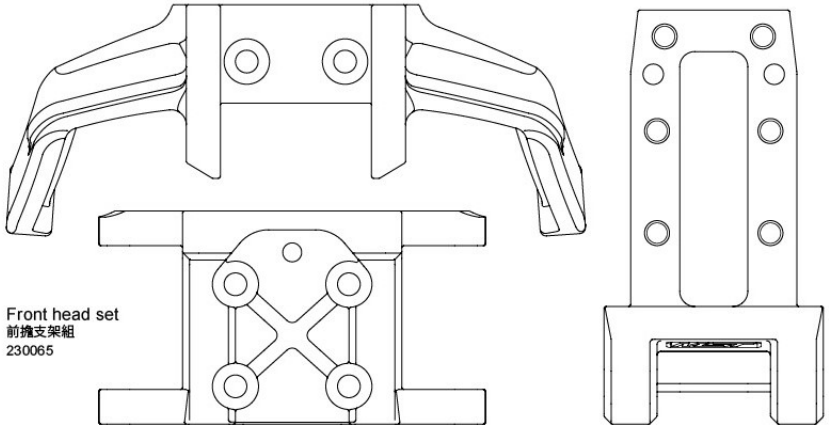


Front head set
前擋支架組
230065

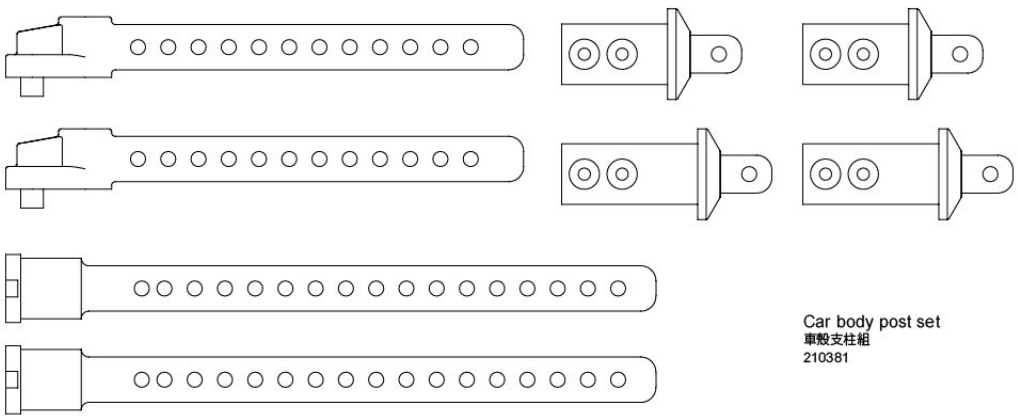


Car body post set
車殼支柱組
210381

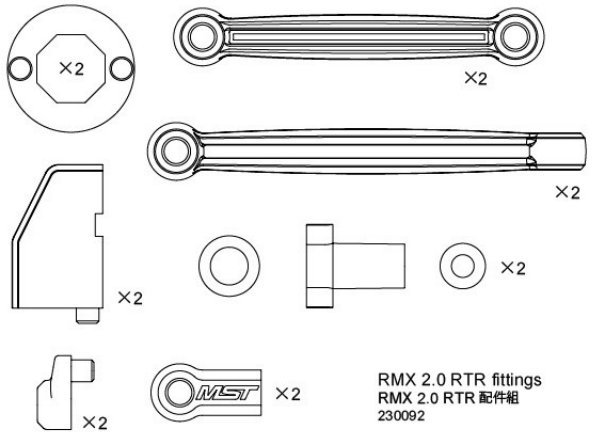


RMX 2.0 RTR fittings
RMX 2.0 RTR 配件組
230092

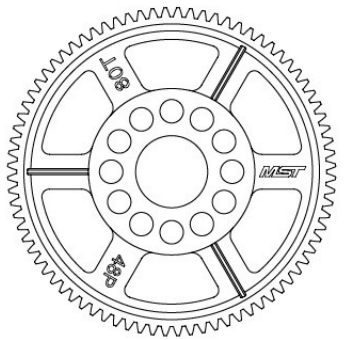


Spur gear 48P 80T
大直齒
230068

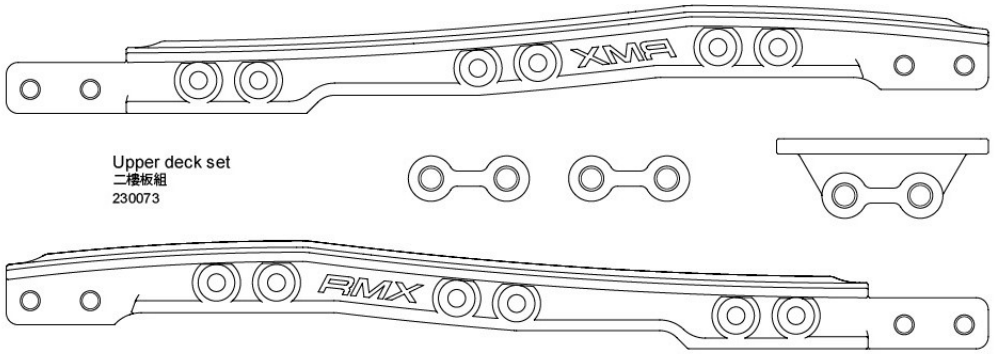

Upper deck set
二樓板組
230073

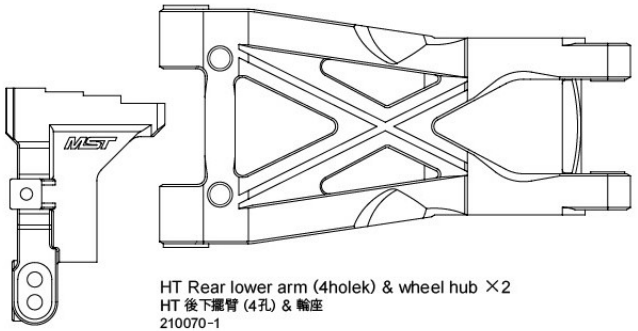

HT Rear lower arm (4holek) & wheel hub ×2
HT 後下擺臂 (4孔) & 輪座
210070-1

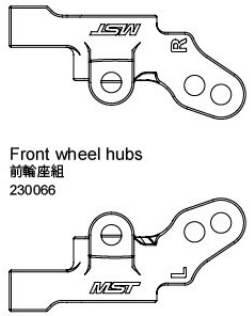

Front wheel hubs
前輪座組
230066

PARTS CODE

110001	Round head screw M3×6 (10)	110100	Cap screw M3×30 (6)	210235	Piston spacer set	230141	RMX ball diff. joint (spur)
110002	Round head screw M3×8 (10)	110101	Countersunk screw M3×20 (6)	210344	Ball connector nut L 4.8 (4)	230144	RMX 2.5 fittings
110004	Round head screw M2×4 (6)	110103	Set screw M3×30 (6)	210381	Car body post set	310001	Ball connector 4.8×4.5 (5)
110005	Countersunk screw M3×8 (10)	110120	Round head screw w/washer M3×8 (6)	210433	Ball connector 4.8×4.5 S (5)	310006	Wheel axle (2)
110011	Cap screw M3×6 (6)	120001	Ball bearing 10×15 (4)	210491	Ball connector L 5.8×4 (4)	310008	Piston rod (4)
110013	E-clip 2.0 (10)	120002	Ball bearing 5×10 (4)	210510CR	Enlarged brake calipers (red) (4)	310047	Arm shaft 2.0×22 (2)
110015	Flange nut M4 (4)	120003	Ball bearing 5×8 (4)	230041	Wheel hubs w/disc shape (large)	310048	Arm shaft 2.5×46 (4)
110017	Shaft 2×9.8 (10)	120011	Ball bearing 5×11 (4)	230058	Steering arm set	310103	Arm shaft 2×28 (2)
110025	Tapping round head screw 2.6×10 (6)	120013	Ball bearing 4×8×3 (2)	230060	Battery mount	310106R	Spring retainer (red) (2)
110026	Round head screw M3×10 (10)	120017	Bearing 5×8 (4)	230062	Front arm set	310118	Alum. main shaft 48P 20T
110029	Round head screw M3×12 (6)	120018	Ball bearing 4×10×4 (2)	230063	Front damper stay	310119	4X21 Steel center shaft (2)
110035	Set screw M3×3 (6)	120024	Bearing 3×6×2.5 (4)	230064	Rear damper stay	310122R	RMX Alum. spur gearbox motor mount (red)
110043	Countersunk screw M3×12 (10)	130004	Oil seal (4)	230065	Front head set	820017	Spacer 4×6×0.3 (8)
110045	Round head screw M2×8 (partial thread) (6)	130032	Damper cap O-ring (10)	230066	ATK Front wheel hubs	820018	Spacer 5×7×0.1 (8)
110047	Spacer 3×6×0.5 (8)	130039	Wide balancing bumper sponge	230068	Spur gear 48P-80T	820020	Spacer 5×7×0.3 (8)
110048	Spacer 3×8×0.5 (8)	130049	O-ring 12×1 (4)	230069	Suspension mount set (+1.0/-2.0)	820030	Cross joint (2)
110052	Countersunk screw M3×10 (10)	130028	Damper O-ring P3 (blue) (10)	230070BK	Shaft bush & spacer set	820063	Suspension mount spacer 0.5mm (4)
110061	Round head screw M3×14 (6)	148022P	MST 48P Pinion 22T	230071	Upper deck connector	820075BK	R-clip 5.0 (black) (10)
110063	Round head screw M2×8 (6)	210031	Reinforced adjuster set 5.8×26	230072	RMX Lower deck	820079	Damper plastic maintenance set (2)
110083	Set screw M3×4 (6)	210057	Damper cap set	230073	RMX Upper deck set	820095	AKM 2WD axle (2)
110086	Round head screw M3×16 (6)	210063W	Shaft bush & spacer set (white)	230092	RMX 2.0 RTR fittings	820103	31mm Hard coil spring set (8)
110088	Round head screw M3×20 (6)	210070-1	HT Rear lower arm (4 holes) & wheel hub	230121	F & R Bumper set	820104	31mm Soft coil spring set (8)
110091	Cap screw M3×40 (6)	210071	Damper cylinder (2)	230135	Idler gear set & ball diff. gear	820136	Steel CVD universal shaft 48 (2)
110099	Countersunk screw M3×4 (10)	210161	Ball connector nut 4.8 (4)	230139	RMX Rear spur gearbox set		

部品編號

110001	六角半圓頭螺絲 M3×6 (10)	110100	六角有頭螺絲 M3×30 (半牙) (6)	210235	避震器活塞墊片組	230141	RMX 滾差接杯組 (直齒用)
110002	六角半圓頭螺絲 M3×8 (10)	110101	六角沉頭螺絲 M3×20 (6)	210344	球頭螺帽L 4.8 (4)	230144	RMX 2.5 配件組
110004	六角半圓頭螺絲 M2×4 (6)	110103	六角止付螺絲 M3×30 (6)	210381	車殼支柱組	310001	內六角公球頭 4.8×4.5 (5)
110005	六角沉頭螺絲 M3×8 (10)	110120	六角半圓頭帶墊片螺絲 M3×8 (6)	210433	內六角公球頭 4.8×4.5 S (5)	310006	萬向接杯 (2)
110011	六角有頭螺絲 M3×6 (半牙) (6)	120001	培林 10×15 (4)	210491	球頭螺絲 L 5.8×4 (4)	310008	避震軸心 (4)
110013	E扣 2.0 (10)	120002	培林 5×10 (4)	210510CR	加大煞車卡鉗 (紅) (4)	310047	擺臂插銷 2.0×22 (2)
110015	凸緣螺帽 M4 (4)	120003	培林 5×8 (4)	230041	碟型六角輪座組 (加大型)	310048	擺臂插銷 2.5×46 (4)
110017	插銷 2×9.8 (10)	120011	培林 5×11 (4)	230058	轉向搖臂組	310103	擺臂插銷 2×28 (2)
110025	自攻六角半圓頭螺絲 2.6×10 (6)	120013	培林 4×8×3 (2)	230060	電池座組	310106R	避震調整環 (紅) (2)
110026	六角半圓頭螺絲 M3×10 (10)	120017	軸承 5×8 (4)	230062	前擺臂組	310118	鋁合金主齒軸 48P 20T
110029	六角半圓頭螺絲 M3×12 (6)	120018	培林 4×10×4 (2)	230063	前避震架	310119	4×21 鋼製心軸 (2)
110035	六角止付螺絲 M3×3 (6)	120024	軸承 3×6×2.5 (4)	230064	後避震架	310122R	RMX 鋁合金直齒箱馬達座 (紅)
110043	六角沉頭螺絲 M3×12 (10)	130004	避震氣室 (4)	230065	前擋支架組	820017	墊片 4×6×0.3 (8)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	130032	避震上蓋O環 (10)	230066	ATK前輪座組	820018	墊片 5×7×0.1 (8)
110047	墊片 3×6×0.5 (8)	130039	寬形配重防撞泡棉	230068	大齒盤 48P-80T	820020	墊片 5×7×0.3 (8)
110048	墊片 3×8×0.5 (8)	130049	O環 12×1 (4)	230069	下擺臂座組 (+1.0/ -2.0)	820030	連接軸 (2)
110052	六角沉頭螺絲 M3×10 (10)	130028	阻尼器O環 P3 (藍) (10)	230070BK	襯套墊片組	820063	擺臂座墊片0.5mm (4)
110061	六角半圓頭螺絲 M3×14 (6)	148022P	MST 48P 馬達齒 22T	230071	二樓板後連結座組	820075BK	R銷 5.0 (黑) (10)
110063	六角半圓頭螺絲 M2×8 (6)	210031	強化拉桿頭組 5.8×26	230072	RMX 底盤	820079	避震膠件包 (2)
110083	六角止付螺絲 M3X4 (6)	210057	避震器上下蓋組	230073	RMX 二樓板組	820095	AKM 二驅輪軸 (2)
110086	六角半圓頭螺絲 M3×16 (6)	210063W	襯套墊片組 (白)	230092	RMX 2.0 RTR 配件組	820103	31mm 硬避震彈簧組 (8)
110088	六角半圓頭螺絲 M3×20 (6)	210070-1	HT 後下擺臂 (4孔) & 輪座	230121	前後防撞板組	820104	31mm 軟避震彈簧組 (8)
110091	六角有頭螺絲 M3×40 (半牙) (6)	210071	避震器筒身 (2)	230135	惰輪組&滾珠差速齒	820136	鋼製CVD傳動軸 48 (2)
110099	六角沉頭螺絲 M3×4 (10)	210161	球頭螺帽 4.8 (4)	230139	RMX 直齒式後齒箱組		

026267