Handset

1. Receiver
2. LCD screen
3. Up (▲) key: Select a function ; Check call records; Turn up the volume of the call
4. Menu Key: Enter the function menu to set the function
5. Line on/speaker phone key: Line on, non-hands-free/hands-free call
6. Down (▼) key: Select a function ; Check the incoming call records; Turn down the call volume
7. Redial key: It can dial last dialed call.
8. Microphone
9. Phone book key: 40 sets of phone numbers can be stored and checked at any time
10. Page key: Call other handsets, and can intercom, telephone transfer, etc.;
Note: This feature is only available for multi-handset models

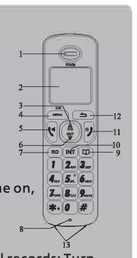

11. End key: Phone hang-up/End current operation
12. Delete key: Return to the upper menu in the setting status; Modify the settings or remove the wrong predialed number;
13. Charging contact piece

2 Installation

After loading two rechargeable batteries, place the handset on the base to charge

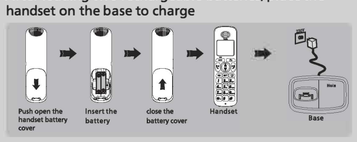

Charging instructions: After installing the battery in the slot, the first charging should take at least 12 hours; When the handset is placed on the base for charging, a beep sound from handset indicates that it is charging, and the symbol is displayed on the screen After being fully charged, the symbol will be displayed on the screen and will no longer flash.

List of boxes

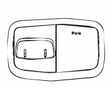

Base

Handset

Power supply
Input: 100-240~50/60Hz 0.2A
Output: DC6.0V,500mA

2 rechargeable batteries
AAA 1.2V
NiMH 550mAh

Quick start guide

User manual

Warning
Using the original adaptor and batteries only

1 Overview

BASE

1. Charging column
2. Power jack
3. Socket
4. Page key

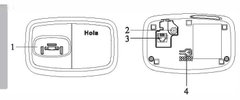

3 Operation

Using a cordless phone to make phone calls
Dial out the number (up to 32 digits) and press Key.
or Press Key occupies the line and dials (up to 32 bits).
Answer phone calls
When the phone rings, pick up the phone and press Key to answer
End Call
To end the call, place the handset back in the charging cradle or press the handset button to end the call,press key on handset to end the call

Adjusting the earpiece volume
During a call, press ▲ or ▼ to adjust the volume (level 1~level 4).

Set a ringtone
On the handset:
In standby mode, Press MENU key to enter the settings ,Select , and press MENU key to enter
Select the ringtone you want (Ringtone 1 to Ringtone 18) and press MENU key to confirm.

Visit phone book
Handset:
Press by standby mode to enter phone book.
Make a call from your phone book .

Handset:
Press by standby mode to enter phone book.
Select the phone number you want to call.Press the button to make a call.

Troubleshooting
To learn more, please refer to the instruction manual

issue	Resolution
• There is no dial tone	• Check the phone line and connect it
• The voice of the handset call is not clear	• Get as close to the base as possible
• The handset suddenly disconnects during a call	• Keep away from other electronic devices to avoid interference
• Incoming call information is not displayed	• Landline power outage (mains power outage)
	• The caller ID service has not been activated
	• The other party's phone has applied for dial-up confidentiality

4 Registration/Unregistration

Tips: The one-to-one configuration of this phone has been registered ex-factory, and can be used directly after charging

New registration, an addition handset also need to be registered, and the handset and base must be registered at the same time, and one base can be registered up to 4 handsets, one handset can be registered with two hosts, please click the following when registering.

1. Register the handset (must be operated in the following order, otherwise the registration may fail)
1) Make sure that the base has been connected to the power supply and the handset is properly equipped with the battery;
2) Press and hold the " " button on the base for over 8 seconds ;
3) On standby mode, press the MENU key , press ▲ or ▼ key to enter registration, screen will display" ," ,press Ok key to confirm, the handset screen will display "CodE", keep pressing" "key until you hear a sound ,it means the handset has been registered successfully ;

Important safety instructions

Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet.
- Ensure that the electrical outlet is always easily accessible.
- Refer to safety information before using the product.
- Use only the power supply listed in the user instructions
- Use only the batteries listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid hearing damage.

2. Unregistration
Note: If you need to re-register a registered handset, you must log out in advance.
On standby mode,press the MENU key, then press ▲or ▼ to enter unregistration,screen will display " " , press Ok key to confirm, the handset screen will display "1",press "1" key,then screen will display "dEL-HS1" and will return back to standby mode automatically.It means the handset has been deregistered successfully.
Note:If there are more than one handset have been registered successfully to the same unit before,it will display "12" or "123" or"1234",press the corresponding number key to deregister the corresponding registered handset.

TC-730

Quick Start Guide

1 Overview
2 Installation
3 Operation
4 Registration/Unregistration