

INSTALLATION INSTRUCTIONS

50176 (1 - 4- 5- 40) EUROGUARD

CHEVY SILVERADO 07



Parts List:		Pre-installed bolts:	
QTY			
(1) Euroguard	(2) M12 x 140 Hex head bolt	(4) 3/8x1 1/4" bottom allen head	
(2) Brushguard (Opcional)	(2) 3/8 x 1 1/4" Hex head bolt	(4) 3/8" Flat washer	
(2) Lower Bracket	(6) 1/2" Lock nut	(4) 3/8" nut	
(2) Upper Bracket	(2) M12 nut	(2) Flat rubber gaskets.	
(2) 1/2" Bolt plate	(2) 3/8" Lock nut		
Hardware kit including:	(8) 1/2" Flat washer		
(4) 1/2 x 1 1/4" Carriage head bolt	(2) 3/8" Flat washer		
	(2) 1/2" Lock washer		



Tools required:					
9/16" Socket	18 mm Wrench	Ratchet	3/4" Socket	Flat screwdriver	5/32" Allen wrench
18 mm Socket	15 mm Socket	Extension ratchet	3/4" Wrench	Long nose pliers	

Instructions: **Approximated installation time: 50 min.**

1. . Before beginning installation, read the instructions thoroughly and completely. If any of the items listed above are missing, please do not proceed with the installation. Call your distributor immediately to obtain the necessary items.

2. All images represents the Driver side of the vehicle.

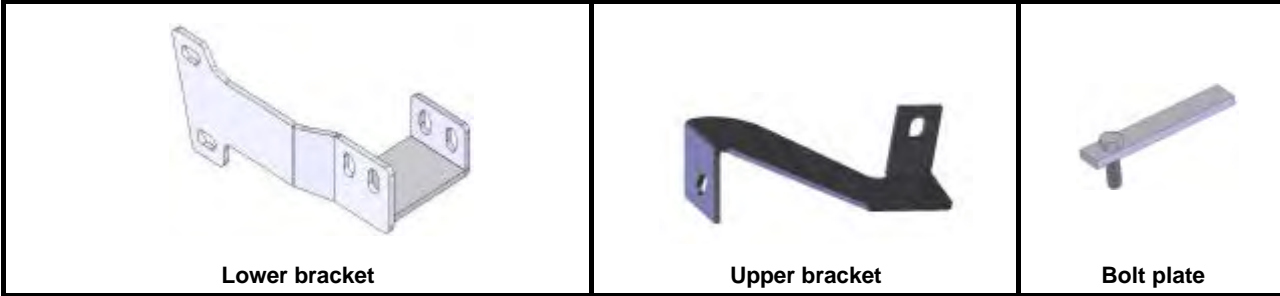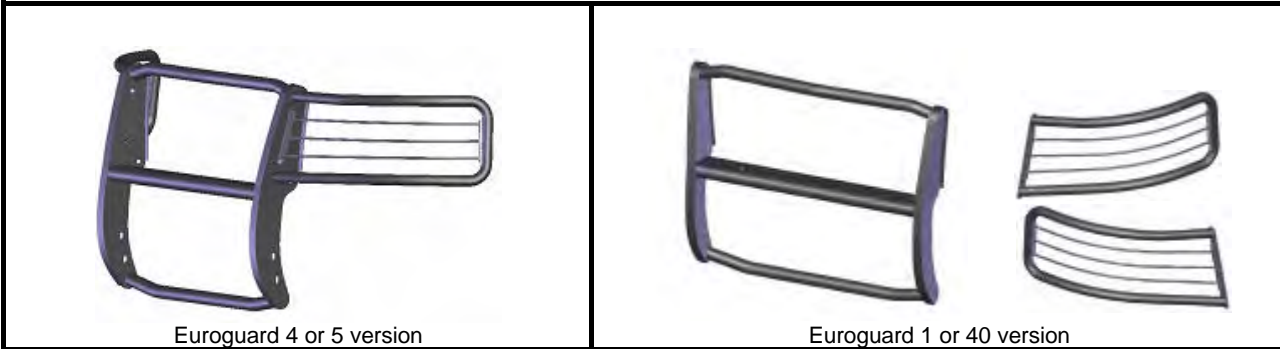
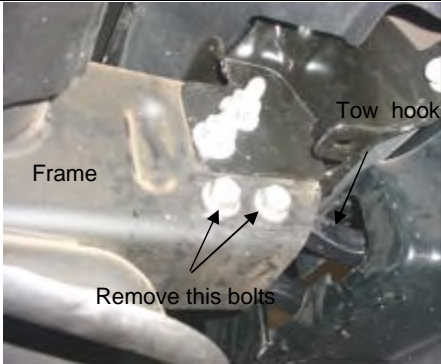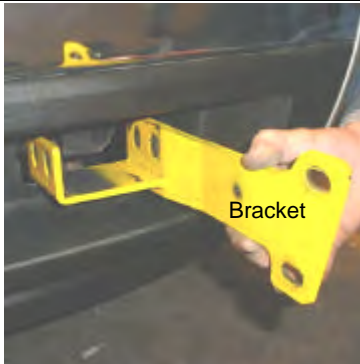
<p>3. Remove the factory tow hooks, if the vehicle don't have tow hooks. See direction number 13. The tow hooks will be re-installed again.</p>	<p>4. Align the lower bracket with the frame and slot the lower bumper balance to pass through the brackets. Insert the bracket in the original tow hook location.</p>
	

Cleaning and care instructions: **Design:** **Quality:**


Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

INSTALLATION INSTRUCTIONS 50176 (1 - 4 - 5 - 40) EUROGUARD CHEVY SILVERADO 07

5. Place the tow hook in his original location



6. Attach the bracket using the factory bolts before removed.

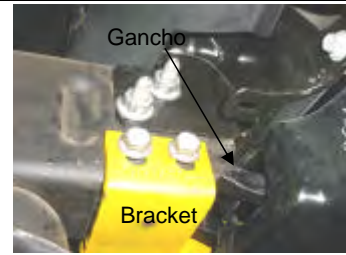


7. Uninstall the plastic cover up the radiator removing the plastic fasteners, use a flat screwdriver




8. With the long nose pliers pop out the push clips and carefully remove the grille




9. Remove the factory bolt that attach the bumper with the upper frame support.

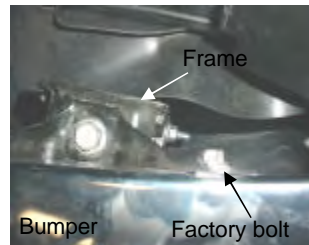

10. Install the upper bracket with the factory bolt before removed.

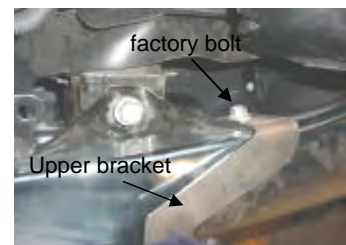


11. Install the Euroguard over the lower brackets with: (2) 1/2" x 1 1/4" carriage head bolts, (2) 1/2" flat washers and (2) 1/2" lock nuts. To each side.

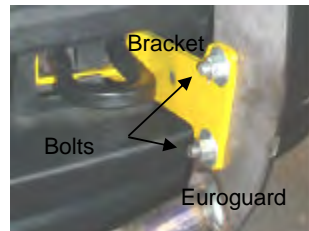


12. Install the Euroguard to the upper brackets attach using: (1) 3/8 x 1 1/4" hex head bolt and (1) 3/8" Flat washer and lock nut, to each side,



13. With the lower bracket located in the frame as shown in step 6 Introduce the bolt plate in the frame and place the bolt in the 2nd hole. see image beside. Also use the longer bolt included in the kit and attach with it's corresponding flat washer, lock washer and nut.

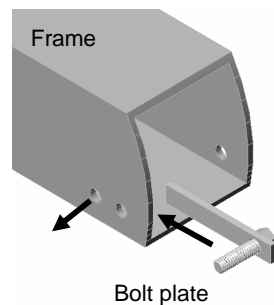

14. On modular version (1) install the brushguards as shown the image, use the pre-installed brushguard bolts.

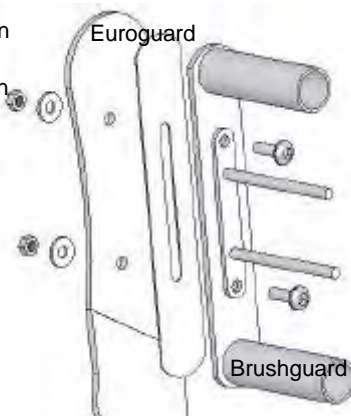

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Design:

Quality:

Revisado 25/01/07

G:\Usuarios\Diseño\Instructivos PDF\50S\50176-I.Pdf

INSTALLATION INSTRUCTIONS
50176 (1 - 4- 5- 40) EUROGUARD
CHEVY SILVERADO 07

15. Re-install the grille and plastic cover.
16. Make any adjustments and tighten all hardware.
17. Periodically check and re-tighten bolts as necessary over the term of use.
18. Fill out included warranty card and place in the vehicle.



Euroguard installed

Cleaning and care instructions:

Design:

Quality:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revisado 25/01/07

G:\Usuarios\Diseño\Instructivos PDF\50S\50176-I.Pdf