DAKAR **523245**
RHINO CHARGER **55635**

INSTALLATION INSTRUCTIONS

DODGE RAM 1500 / 2500 / 3500 / 4000

2006 - 2008

Parts List

Item	Qty.	Code	Description	Max. Torque
1	1 Set	523240AA	Main bracket.	-
	1	**KTE-52289**	**HARDWARE KIT INCLUDES:**	**-**
3	2 Pc	-	1/2 x 2" Hex head bolt.	75 Lb.Ft
4	2 Pc	-	1/2" Flat washers.	-
5	2 Pc	-	1/2" Lock washers.	-

Required Tools (Not included)

Qty.	Description
1	3/4" Socket & Wrench
1	18mm Socket & Wrench
1	Ratchet
1	Extension to ratchet

Product Image

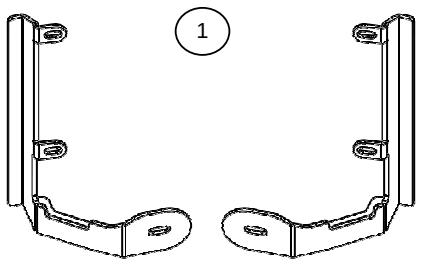

Instructions

1. Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
2. To maintain and care this product, keep it clean and do not use abrasive cleaners or polish waxes. We recommend to use only automotive wax such as pure carnauba to avoid scratches and rust.
3. The approximate installation time is 35 min.

4. Locate and remove the nuts located inside the bumper, at the side of the frame. **See picture 1.** Repeat for the opposite side.
5. Install main mounting bracket and attach it with the nuts previously removed. **See picture 2.** Repeat for the opposite side. Leave loose.

PICTURE 1.

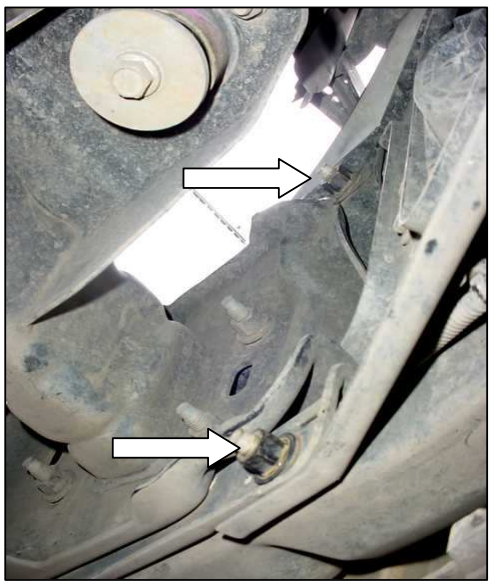

Nuts to remove for the installation of main mounting bracket. Picture passenger side, inner part of the bumper.

PICTURE 2.

Main mounting bracket installed. Picture passenger side, inner part of the bumper.

6. Mount the Dakar / Rhino Charger / Bunker to the main brackets and attach with: 1/2 x 2" hex head bolt, 1/2" flat and lock washers. Leave loose. **See illustration 1.**

7. Make any adjustments to the alignment of the Dakar / Rhino Charger / Bunker and tighten all bolts.
8. Remember to re-tighten the bolts periodically.

ILLUSTRATION 1

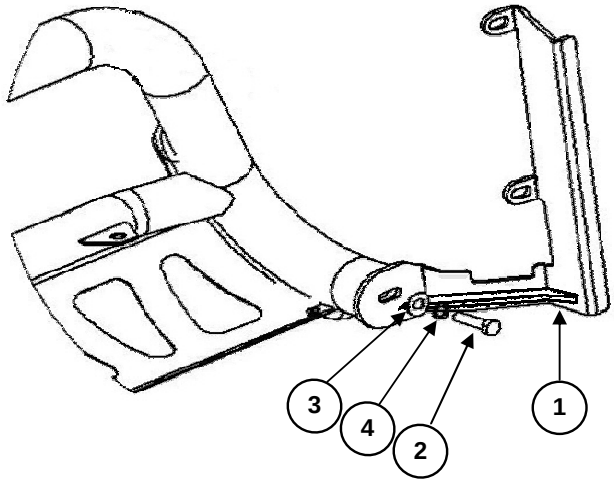

PICTURE 3.

DAKAR / RHINO CHARGER / BUNKER INSTALLED.