CURT™ The FIRST Name in Towing Products™

Scan for helpful installation tips

INSTALLATION INSTRUCTIONS

51451 & 51452 APPLICATIONS

Make	Model
Cadillac	Escalade
Chevrolet	Silverado
Chevrolet	Suburban
Chevrolet	Tahoe
GMC	Sierra
GMC	Yukon

BRAKE CONTROL HARNESS



NOTICE


All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

LOCATION GUIDE

Representative vehicle shown below

BH1 - Under dash, left of steering column, near emergency brake pedal

BH3 - Under dash, in junction box left of steering column

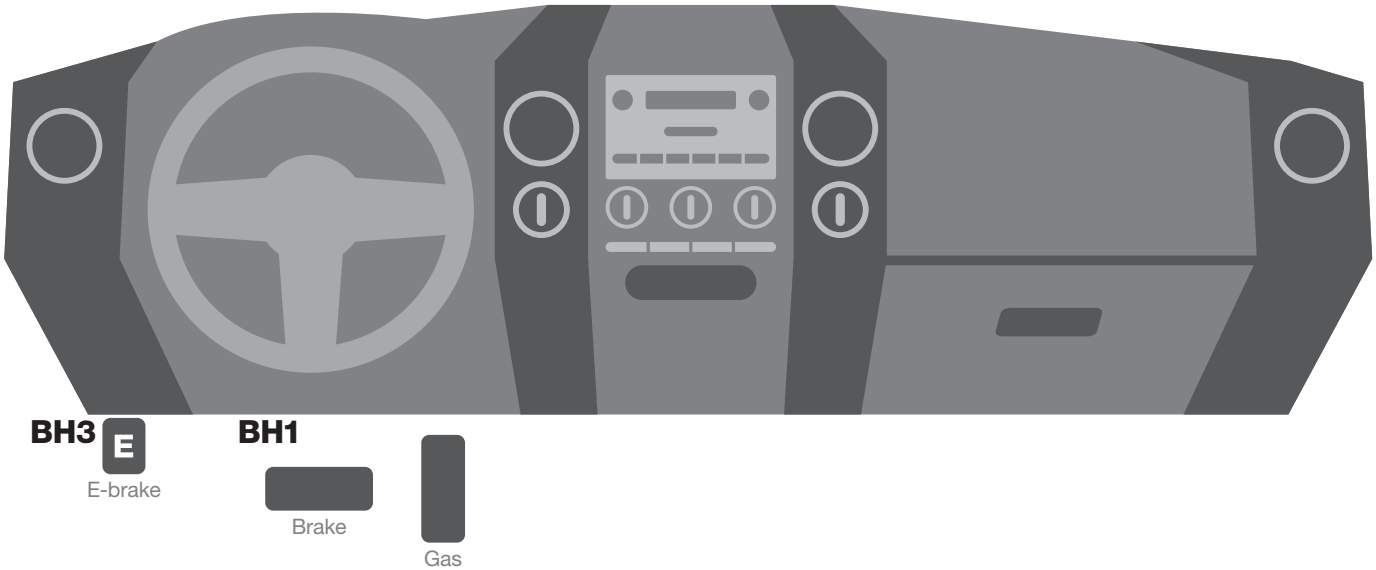

INSTALLATION / SAFETY INSTRUCTIONS

Step 1
Locate the black electrical junction box under the dash, to the left of the steering column. Remove the box cover and locate the empty vehicle connection point (A,B).

Step 2
Insert the connector on the CURT brake control harness into the vehicle connection point. Make sure the connector is fully inserted with locking tabs in place (C).

Step 3
Insert the brake control harness's black connector into the brake control's quick plug connector (D). Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 4
Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.



