




CARE AND USE INSTRUCTIONS – PN:53401

Thank you for selecting an X-act Contour™ 2nd Seat Floor Liner from Winfield Consumer Products. Your new floor liner is custom molded to fit your specific vehicle's floor board. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

FRONT OF VEHICLE

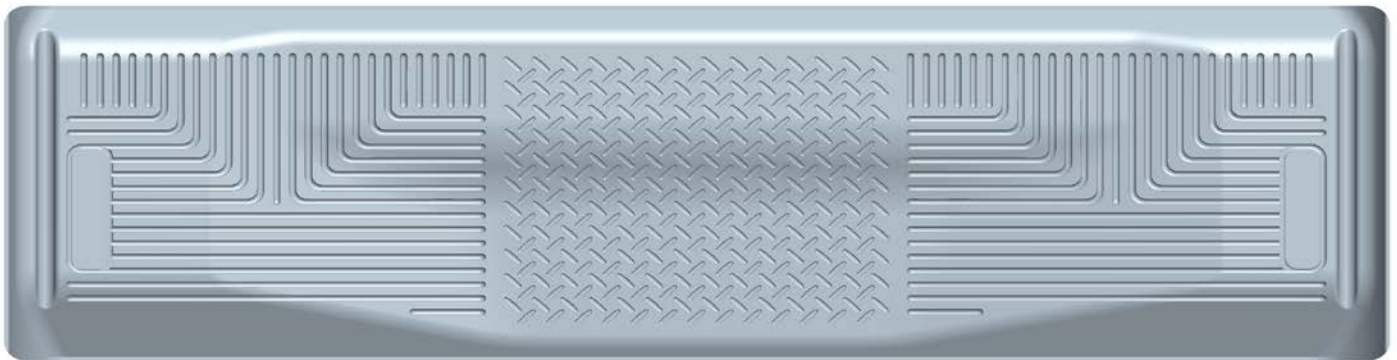

POSITION THE LINER IN YOUR VEHICLE AS SHOWN IN THE ILLUSTRATION ABOVE. NOTE THAT THE VERTICAL RIBS ARE LOCATED ALONG THE FRONT OF THE PART.

