



GMC SIERRA FRONT MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required


- TX 15 Torx Bit / Driver
- Drill
- 1/8" Drill Bit
- Phillips Head Screwdriver

Package Contents

- Driver & passenger side front mud guard
- Instruction sheet
- #10 SEM Screws (Qty 2)

NOTE: Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

1. Remove existing fasteners from location C and D. (Do not remove fastener from location B)
2. Install mudguard at locations B and C using factory screws.(Check alignment before tightening)
3. Drill an 1/8" hole into the fender cladding and thru sheet metal.
4. Install mudguard with a #10 SEM screw at location A.

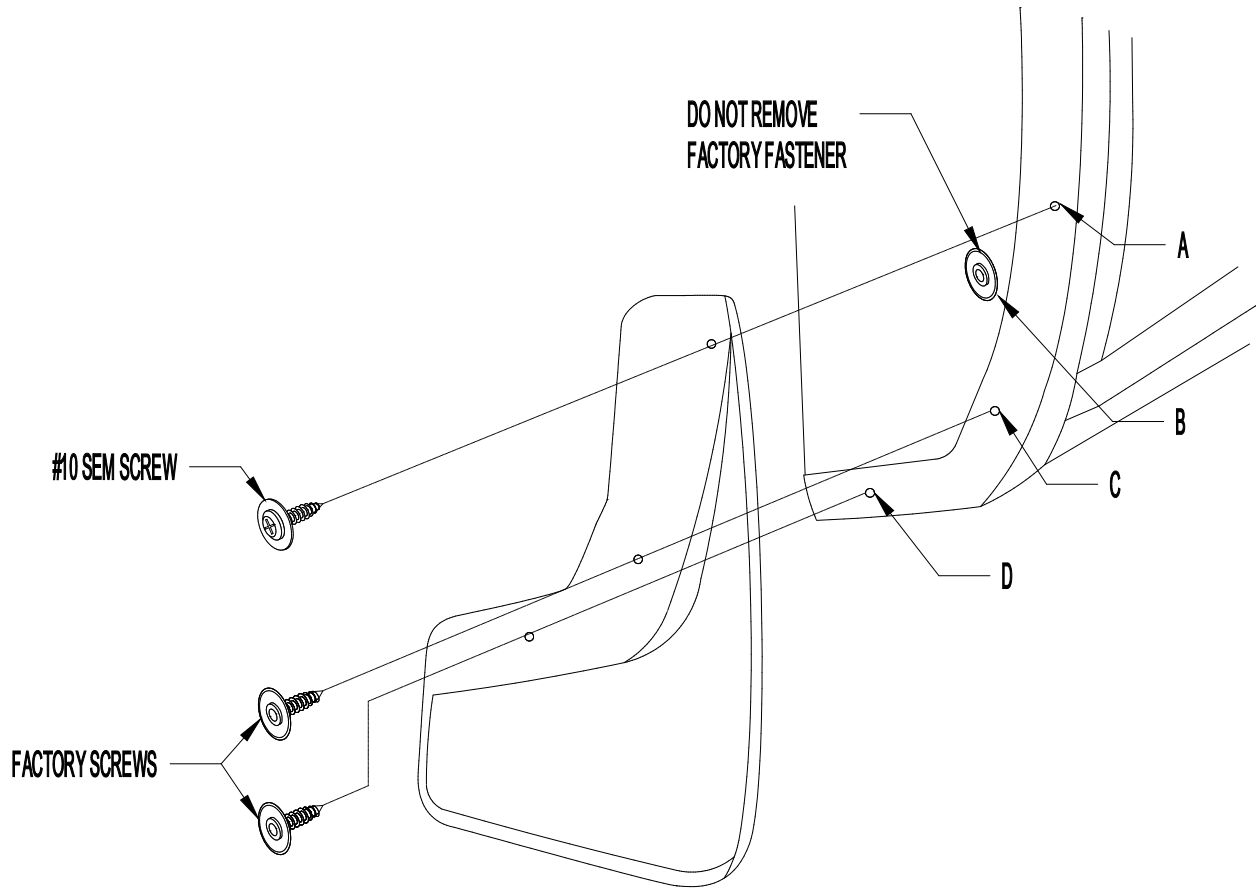

PAINTING INSTRUCTIONS

NOTE: *If painting mud guards, perform a mud guard test fit to ensure correct fit and application prior to painting.*

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.