



INSTALLATION INSTRUCTION FOR 10X14 FLAP

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:

(800-247-3974)

Monday - Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Putco Inc. - 216 West First Street - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION



STEP 1: Attach the rubber extension to the mudflap with SS screw driver head bolts and nylon insert lock nuts. The bolt goes in on the rubber extension side.

STEP 2: Form the flap to conform to the wheel well opening.

STEP 3: Clamp the flap to the wheel well using vise grips. Make sure the flap is level.

STEP 4: Attach flap using three 1/4" self drill and tap screws.

Tools Needed: Vise grip - Power drill - 3/8" Magnetic drive socket - Flat head screw driver - 7/16" wrench or socket

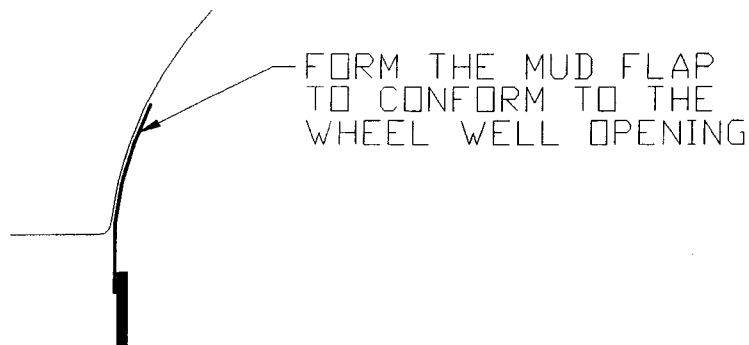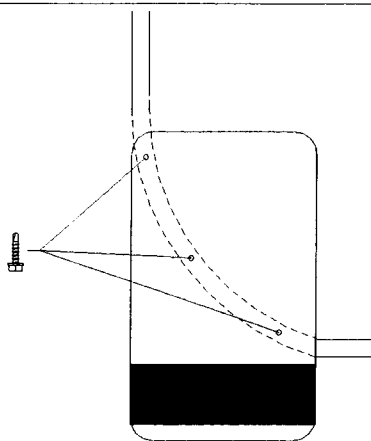

LIMITED WARRANTY

Putco guarantees ALL its products against defects in workmanship or material for the time period of ONE YEAR (90 DAYS on black product). Any defects resulting from faulty material or workmanship will be warranted by Putco with the replacement of defective part.

Damages caused by improper installation, misuse, collision, or neglect will not be warranted by Putco. Putco will be sole judge of all warranties! Proof of purchase necessary for all warranty claims.