



# INSTALLATION INSTRUCTIONS

## REAR WHEEL WELL INNER LINER FORD F-150 (MODELS 2006 - CURRENT)


**List of Contents:**

**Qty:**

- 1 Pc. Rear Wheel Well Inner Liner, Passenger Side
- 1 Pc. Rear Wheel Well Inner Liner, Driver Side



- 1 Pc. Installation Kit
  - \* 2 pc. Plastic Push Pin (Large)
  - \* 4 pc. Plastic Push Pin (Small)
  - \* Installation Instructions.



**Required Tools:**

- \*Ratchet with socket of 10 mm
- \*Utility Knife
- \*Easy Removal Tool



**Preparations:**

- \*Remove the tires for an easy installation
- \*Clean the interior panels of the rear Wheel house

**Technical Support phone line:**

**1-800-433-3604**

**Instructions:**

Installation time estimated: 30 min.

**1. PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.**

**NOTE:** One person can do the installation.


**Starting on the *Driver's Side:***

**2.** Locate the top bracket support and remove the interior bolt using the wrench with 10mm socket (see fig A).

"keep the bolt in a safe place"

**5.** Using an easy removal tool; remove carefully the plastic push pin that holds the gas tanks exhaust hose to the chassis frame. (see fig. E) . Place the exhaust hose behind the shack to avoid interference with the installation.

Note: This Step is only applicable for models 2009 to current with gas exhaust hose.

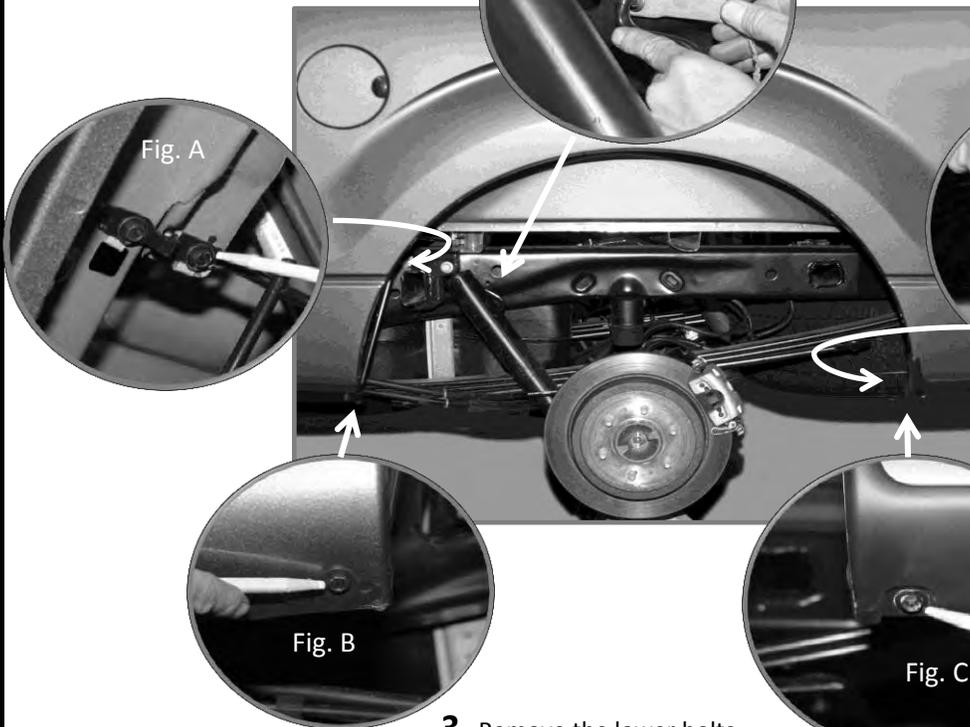

**4.** Trim the excess length of the lower plastic push pin, leaving aprox. 1/8" of the lenght on the inside. (see fig. D).

**3.** Remove the lower bolts, left and right (see fig. B & C). "Keep the bolts in a safe place".

**NOTE: TO INSTALL THE REAR WHEEL WELL INNER LINERS ON F-150 OLDER MODELS PLEASE REFERE TO SPECIFIC ENCLOSED INSTRUCTIONS.**




# INSTALLATION INSTRUCTIONS

## REAR WHEEL WELL INNER LINER FORD F-150 (MODELS 2006 - CURRENT)



6. **a)** Place the Rear Wheel Well Inner Liner marked as "DS" (Driver side) on the inner panel of the wheel house. Make sure to go up & over the shock and shock mounting bracket first. (See Fig. F & G)
- b)** Insert the bottom corners behind the bottom flange of the fender. (see fig. H)
- c)** Insert the upper profile edge of the plastic liner making sure that is mounted behind the flange and around the wheel well house edge (see fig. I & J)


7. Attach the plastic liner to the inner wheel house using the bolts saved in the steps 2 & 3. (see fig. K, L & M)

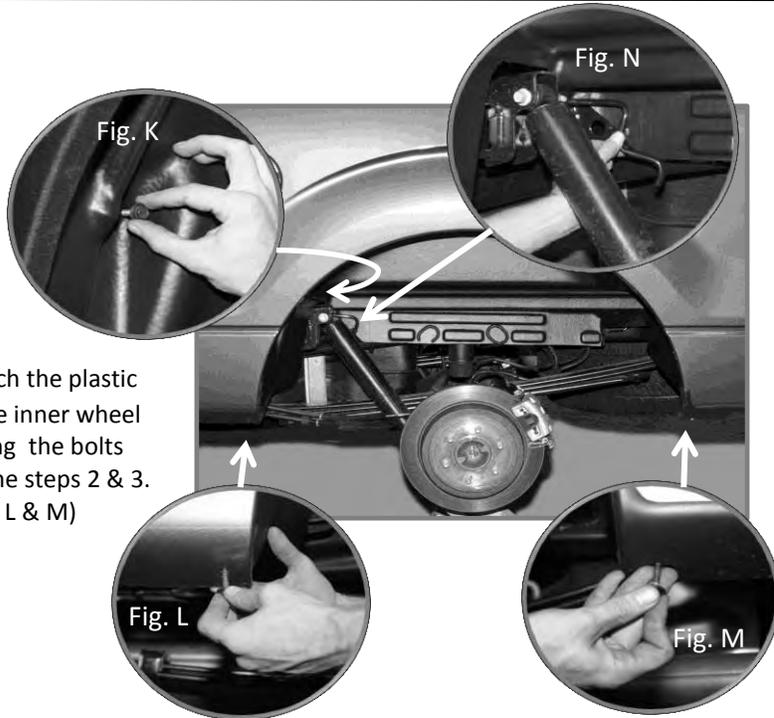

8. Re-install the plastic push pin that holds the gas exhaust hose (removed from step 5). Insert the push pin through the pre-drilled hole on the plastic protector and the hole on the chassis frame. (see fig. N)  
Note: This Step is only applicable for models 2009 to current (E85 Capables).

**8a. For Models without gas exhaust hose.**

Insert one (Large) plastic push pin through the pre-drilled hole on the plastic protector and the hole on the chassis frame. (see fig. O)

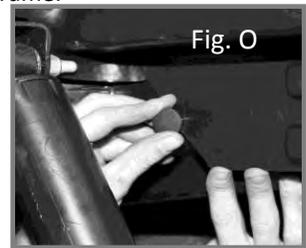

9. To install the Passenger's Side, Repeat the steps 2, 3, 4, 6, 7 & 8a. using the Rear Wheel Well Inner Liner marked as "PS" (Passenger side)

10. Re-install the tires, making sure all the lug nuts are tight.



**Care and Maintenance Recommendations**

To protect the appearance of this product, wash with soap and water



www.ruggedliner.com