

Rugged Liner

Truck Accessories

951 Aiken Road • Owosso, MI 48867
989-725-8354 • Fax 989-725-8409
1-800-433-3604



Installation Kit No.: LIK-17
Contents: 2 - Clips

The following are basic steps to install most of The Colonel's Under Rail Bedliners:

Please refer to diagrams 1-3

- Step 1:** Place the under rail into the truckbed on an angle; be careful not to scratch the outside of the truck.
- Step 2:** The side which is placed in first should be pushed under the truck rail completely.
- Step 3:** Lift the center of the bedliner's floor until the remaining side is able to be pushed under the truck rail.

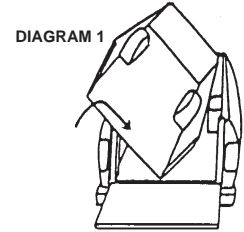


DIAGRAM 1

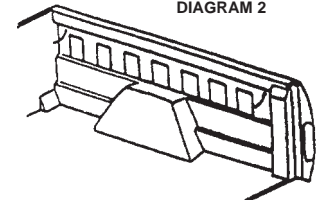


DIAGRAM 2

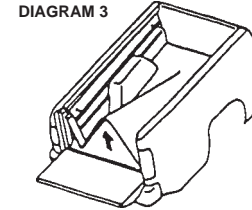



DIAGRAM 3

Installing Clips:

Refer to diagram 4

- Step 1:** Inset Clip into the slot provided at the rear of the bedliner; be sure that the Clip goes into the pre-existing hole in the truck box located directly behind the slot.
- Step 2:** Press Clip into slot tightly until you are sure that it is snapped securely in place.

DIAGRAM 4

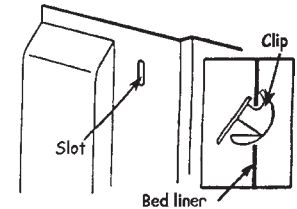

Removing Clip:

Refer to diagram 5

- Step 1:** Pull Clip base away from bedliner.
- Step 2:** Using a small, flat tool, release the Clip from behind

DIAGRAM 5



Trouble Shooting:

Refer to diagram 6

If Clip is unable to snap securely, you may need to trim 1/8" from the tip of the Clip

DIAGRAM 6

