



INSTALLATION INSTRUCTIONS


PART No. FB33007, FB33069

**Jeep® JK Wrangler
Aluminum Inner Fenders**

FB33007 – Black



FB33069 – Uncoated

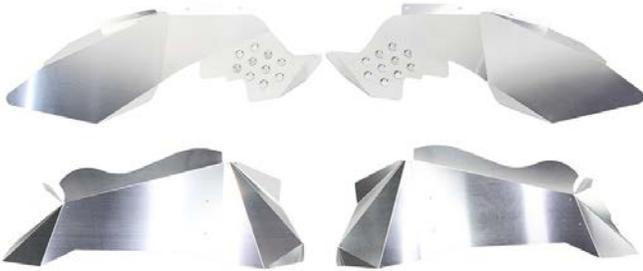

REQUIRED



REQUIRED TOOLS

Drill

FRONT INNER FENDERS:

- 10mm Wrench
- 3mm Allen Wrench
- 1/4" Drill Bit

REAR INNER FENDERS:

- Phillips Screwdriver
- 5/32" Drill Bit

KIT CONTAINS

FRONT INNER FENDERS:

- | | |
|-------------------|----|
| M6 Button Screw | 10 |
| M6 Hex Flange Nut | 2 |
| M6 Flat Washer | 10 |
| Nutsert Tab | 2 |

REAR INNER FENDERS:

- | | |
|-------------------------|----|
| Phillips Pan Head Screw | 10 |
|-------------------------|----|

QTY

3300701

INSTALLATION INSTRUCTIONS

PART No. FB33007, FB33069

**Jeep® JK Wrangler
Aluminum Inner Fenders**

FRONT INNER FENDERS:

1) REMOVE YOUR FRONT OEM INNER FENDER/LINER
Use a 10mm socket and flat head screwdriver to remove the bolts and clips from the inner fender liner. Remove the fender liner.

2) INSTALL YOUR FRONT INNER FENDER SUPPORT ARMS

Passenger side – install the nutsert tab on the back side of the inner fender and facing the rear of the Jeep. Do not tighten at this time

Driver side – install the nutsert tab on the back side of the inner fender and facing the front of the Jeep. Do not tighten at this time.

3) INSTALL YOUR FRONT INNER FENDERS

Place the inner fenders inside the fender well. Using the supplied hardware, secure the inner fender to the Jeep using the OEM fastener locations. Install all screws loosely to allow adjustments. It may take a little pressure to get these to line up with the OE holes.

On the forward most holes, you will need to drill a 1/4" hole using the inner fender as your template. Install screw and washer and tighten the nut.

Working from the front of the vehicle to the rear, tighten all bolts with a 3mm Allen wrench. When the rearmost screw is tightened, it will turn the nutsert tab against your Jeep and lock it into place.

REAR INNER FENDERS:

1) REMOVE YOUR REAR OEM INNER FENDER/LINER
If necessary, jack up your vehicle to give you more room to work. Ensure the vehicle is safely supported. Release the inner fender/liner by removing the push rivets from the Jeep fender well.

2) INSTALL YOUR REAR INNER FENDERS

The below image shows which side to install the rear inner fenders on.



Flex and manipulate your new inner fender to work it into the fender well and around your tire. Work the inner fender until you have snapped it into place around all the Jeep fender edges and frame.

Pre-drill five (5) holes using a 5/32" drill bit. **USE CAUTION WHEN DRILLING TO NOT HIT FUEL LINES OR HARNESES.** Using the supplied screws, secure the rear inner fenders in place.

TIP! – Hold the inner fender in the highest possible point before drilling holes.

3) ENJOY YOUR FISHBONE OFFROAD INNER FENDERS!