

# **INSTALLATION INSTRUCTIONS**

**3," 4" and 4-1/2" CRADLE MOUNT SIDEBAR**


**06-10 HUMMER H3**

**PART NUMBER 1-0682 1-5682**

3," 4" and 4-1/2" CRADLE MOUNT SIDEBAR  
06-10 HUMMER H3

**PARTS LIST:**

|   |  |   |                                      |
|---|--|---|--------------------------------------|
| 1 | Driver/Left Sidebar                    | 8 | 10-1.5mm x 30mm Hex Head Bolts       |
| 1 | Passenger/Right Sidebar                | 8 | 10mm Lock Washers                    |
| 1 | Driver/Left front Mounting Bracket     | 8 | 10mm ID x 27mm OD x 3mm Flat Washers |
| 1 | Passenger/Right front Mounting Bracket | 8 | 8-1.25mm x 25mm Hex Bolts            |
| 1 | Driver/Left rear Mounting Bracket      | 8 | 8mm Lock Washers                     |
| 1 | Passenger/Right rear Mounting Bracket  | 8 | 8mm ID x 24mm OD x 2mm Flat Washers  |

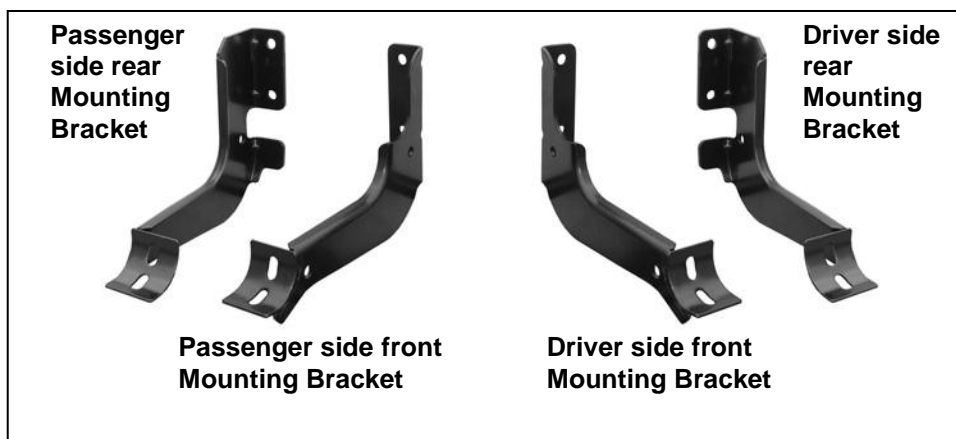

**PROCEDURE:**

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Starting on the driver side of the vehicle, locate the two threaded holes toward the front of the frame. Select the driver side Front Mounting Bracket and bolt it to the threaded holes with (2) 10-1.5mm x 30mm Hex Bolts, (2) 10mm Flat Washers and (2) 10mm Lock Washers, **(Figure 1)**. Snug but do not tighten hardware at this time. Repeat this step for the rear Mounting Bracket installation, **(Figure 2)**.
3. Carefully place the passenger Sidebar up to the Mounting Brackets and use the included (4) 8mm x 25mm Hex Bolts, (4) 8mm Flat Washers and (4) 8mm Lock Washers, **(Figure 1)**. Do not tighten at this time.
4. Level and adjust Sidebar properly and then tighten all hardware.
5. Repeat steps 2 – 4 for passenger Sidebar installation.
6. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

**For gloss black finishes:** Mild soap may be used to clean the Sidebar.

3," 4" and 4-1/2" CRADLE MOUNT SIDEBAR  
06-10 HUMMER H3


*Driver Side Installation Pictured*

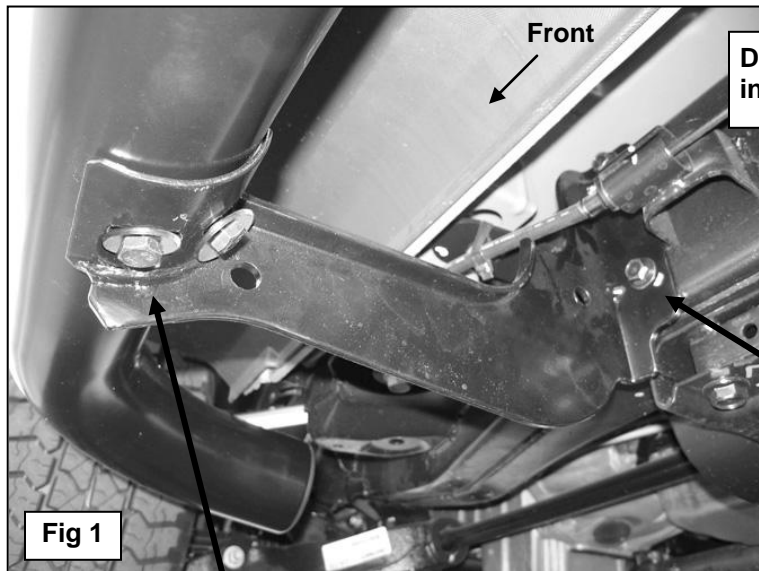

Driver side front  
installation pictured

10-1.5mm x 30mm Hex Bolts  
10mm Flat Washers  
10mm Lock Washers

8-1.25mm x 25mm Hex Bolts  
8mm Flat Washers  
8mm Lock Washers

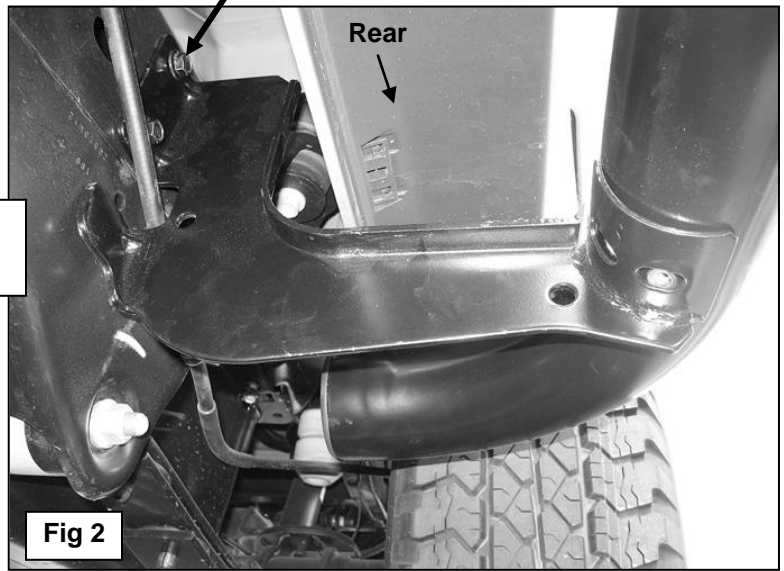

Driver side rear  
installation pictured



Complete installation