


PERFORATED PARTITIONS




**40640 (Updated)**  
Low Roof Vans



**40651**  
Transit Mid/High Roof, Sprinter Standard Roof, ProMaster Low/High Roof Vans

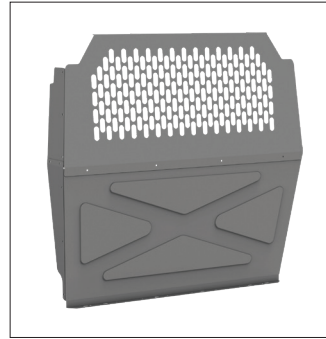


**40670**  
Compact Vans

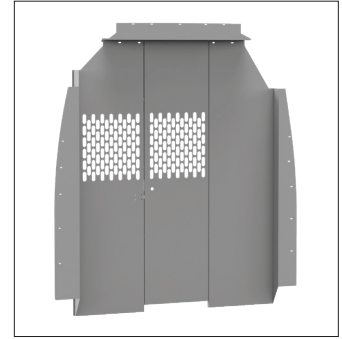

**4061S**  
Sprinter High Roof Vans (Includes Wing Kit)

SOLID PARTITIONS

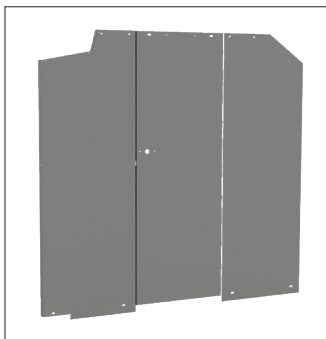

**40641**  
Low Roof Vans




**40652**  
Transit Mid/High Roof, Sprinter Standard Roof, ProMaster Low/High Roof Vans

WIRE PARTITION



**40680**  
Compact Vans

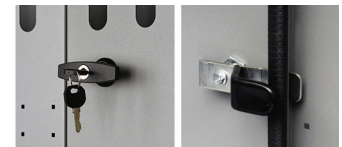

**40620**  
**CENTER PANEL LATCH & DOOR LOCK KIT**  
For all vans with pass-through partitions


**PARTITIONS AVAILABLE IN BULK**  
(See Specifications in Table to the Left)

- 40640-32-BP 32 Units
- 406GM-60-BP 60 Units
- 40651-32-BP 32 Units
- 406TL-100-BP 100 Units
- 406TM-60-BP 60 Units

VAN TYPE OR BRAND	DESCRIPTION	PERFORATED PARTITION PART #	SOLID PARTITION PART #	WING KIT PART #
<b>COMPACT CARGO VANS</b>				
	Perforated Partition	40670	N/A	N/A
	Wire Partition	40680	N/A	N/A
<b>FORD</b>				
	Transit Low Roof	40640	40641	406TL
	Transit Low Roof Fleet Partition	406TFL-P	406TFL-S	406TL
	*No Pass Through Door			
	Transit Mid Roof	40651	40652	406TM
	Transit High Roof	40651	40652	406TH
<b>GM</b>				
	GMC Savana & Chevy Express	40640	40641	406GM
<b>METRIS</b>				
	Metris	40640	40641	406M
<b>NISSAN</b>				
	NV Low Roof	40640	40641	406NL
	NV High Roof	40651	40652	406NH
<b>PROMASTER</b>				
	Low/High Roof	40651	40652	4064P
<b>SPRINTER</b>				
	Standard Roof	40651	40652	406SL
	High Roof	4061S	N/A	N/A



**40644 & 40654**  
Polycarbonate See-Through Panels help keep your cab cool or warm (Use with 40640 or 40651 Partitions)

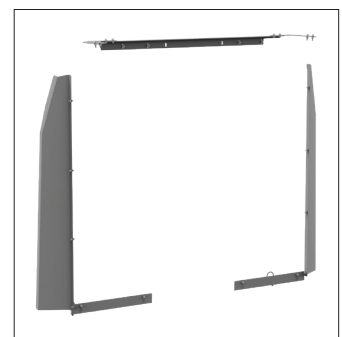

**WING KIT**  
Unless otherwise indicated, all partitions require a wing kit

v3.02 051719