

2015+ Subaru WRX Spoiler

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS: 90297BP	
Description	Qty.
WRX Spoiler	1
Alcohol Prep Pad	1
Adhesion Promoter Packet	1

Supplies Needed:

- Masking tape

Spoiler Installation

1. Remove the spoiler from packaging. Check to see if all parts from above kit contents table are included.
2. Insure that the surface which the trim is to be applied is clean, dry, and free of all oil, grease, and wax.
3. The vehicle surface temperature must be a minimum of 18°C (65°F).
4. Wipe the second tier of the spoiler shown in figure 1.1 with the included alcohol prep pad.
5. Prep the area with the included adhesion promoter packet
6. Cut out the included template along the dotted lines.

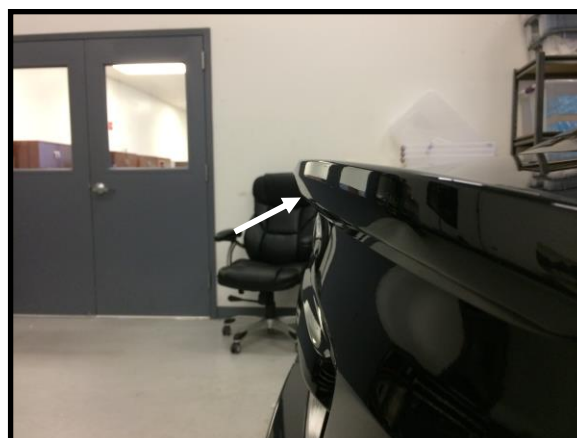


Figure 1.1



Figure 1.2

LIMITED 90 DAY WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

7. Use masking tape to attach the template to the car using the rear emblem for placement. Use figure 1.3 as an example
8. Remove the 3M tape backing from the part.
9. Use the template placed on the car to position the part. Use the vertical line on the template and align it with the notch in the bottom edge of the part. Figure 1.3 shows an example with the bottom edge of the spoiler highlighted

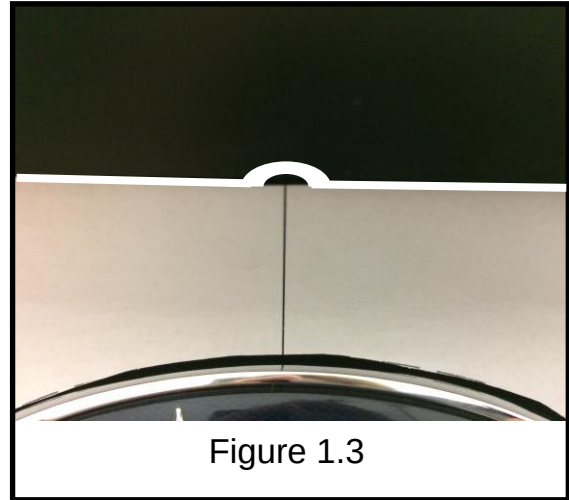


Figure 1.3

10. Remove the template from the car and visually inspect placement of the part on the vehicle. Press firmly and evenly on the part for 30 seconds.

Note: Full cure time for the 3M tape is 24 hours. Do not wash or drive the vehicle during this time

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

