

PART NUMBER  
**SSA50**



**BEFORE YOU BEGIN**

**PRIMARY APPLICATIONS**


- > Ford F-350 Super Duty 4 X 2 (2019 - present)
- > Ford F-350 Super Duty 4 X 4 (2019 - present)

**TOOLS REQUIRED**

- > Floor Jack
- > Safety Jack Stands
- > Wheel Chocks
- > 1-1/16" Wrench/Socket
- > 1-1/8" Wrench/Socket
- > 9/16" Wrench/Socket
- > Heavy Duty Clamps or SuperSprings Installation Tool

**PARTS LIST**

Item	Part #	Description	QTY
A	102032	SSA50 Leaf Spring	2
B	PSP-11	Polyurethane Spring Pad	2
C	112183	Lock Down U-Bolt	2
D	112185	Lock Down Clamp	2
E	512302	3/8 Locking Flange Nut	4
F	112160	Polyurethane Bushing	8
G	112142	Steel Sleeve	4
H	112159	Steel Roller	4
I	122416	Shackle Leg 4 Holes	4
J	122406	Shackle Leg 3 Holes	4
K	112146	3/4" Nylon Flat Washer	8
L	112145	3/4-10 Nylock Nut Grade 8	8
M	112143	3/4-10 x 5" Hex Bolt Grade 8	6
N	112150	3/4-10 x 5" Hex Bolt Grade 8 with Head Cut to 1/4" Tall	2

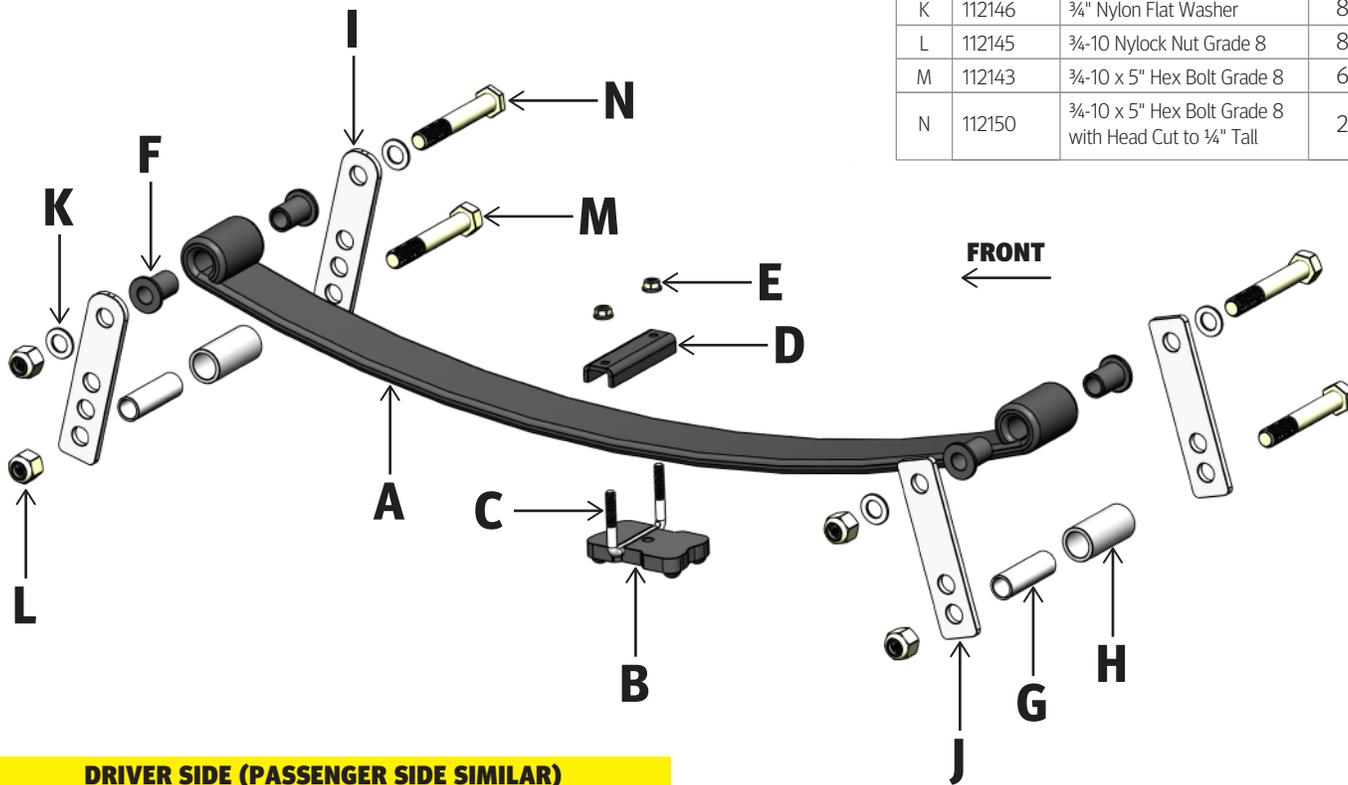

**Part Number: SSA50**

**Product Line: SUPERSPRINGS**

**Page 1**

Questions or Concerns?

Scan here:



or visit:  
[superspringsinternational.com](http://superspringsinternational.com)

**SAFETY NOTICE:** We recommend installation be done by a professional or persons with sound mechanical knowledge.

**WARNING:** These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

**BEFORE INSTALLATION:** Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

**DURING AND/OR AFTER INSTALLATION:** Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

PART NUMBER  
**SSA50**



**INSTALLATION**

1. Positioning the vehicle – Vehicle must be on level solid surface. Ensure emergency brake is ON and Ignition is OFF. Chock both front and rear of the front tires to prevent the vehicle from moving.
2. Jack up vehicle – elevate and support the frame securing with jack stands so that the axle is hanging with tires slightly off the ground. Wheel removal is suggested ONLY were bodies are mounted.
3. The SSA50 has a dedicated front and rear. The 4 Hole Shackle Leg [ITEM I] should be toward the front of the truck, and the threaded ends of the spring eye bolts should be pointing outboard, away from the frame.
4. Remove Shackle Roller Assemblies – Using 1 1/16" and 1 1/8" tools, wrenches / sockets / ratchet, remove and set aside the bolts [ITEM M] and nuts [ITEM L] retaining the Rollers [ITEM H] and Sleeves [ITEM G] from the front and rear of the shackles. Rotate the Shackles [ITEM I & J] toward the center and parallel to the spring.
5. PSP Install - Place PSP-11 [ITEM B], on top of the factory spring-plate, centered between the u-bolts with the smooth side facing up and cross-slot to the front.
6. Per the diagram, place the Lock Down U-Bolt [ITEM C] around the SuperSpring so the threads are facing up. Install the Lock Down Clamp [ITEM D] onto the u-bolt with the open side down and center on spring blade as shown. Using 9/16" wrenches / sockets / ratchet, install the 3/8 Flange Nuts [ITEM E] onto the Lock Down U-Bolt [ITEM C]. Only partially tighten the nuts so that the clamp assembly can still be moved freely on the spring blade.
7. Place the SuperSpring on top of the PSP-11 [ITEM B] above the OE leaf pack. Position the lockdown assembly so that the base of the u-bolt is located in the groove of the PSP-11 mounting pad. Ensure the spring is orientated properly based on the "Driver/Passenger Front" stickers and that the 4 Hole Shackle [ITEM I] is to the front and the threads of the bolts are facing outboard, away from the frame.
8. Shackle Attachment - Note: The top/spring eye shackle bolts are factory pre-torqued; no adjustment or further tightening is needed. If any are loosened by the installer then retorque to 30 ft. lbs.

**Shackle Attachment Front** - Using a SuperSprings Installation Tool or other high capacity clamp(s), compress the front of the SuperSprings until the spring eye is below the overload perch. Using a dead blow mallet, tap on the rear of the SuperSprings to maneuver it forward and position the front shackle as seen in Fig. 1. The SuperSprings eye bolt should be centered between the sway bar end link and the gusset of the overload perch. Once in position, compress the SuperSprings further. Rotate the front shackles legs down on both sides of the leaf spring. Place the Sleeve [ITEM G] and the Roller [ITEM H] between the Shackles and align with the lower holes. Secure with 3/4-10 x 5" Hex Bolt [ITEM M] and 3/4-10 Lock Nut [ITEM L]. Torque to 35 ft. lbs. Ensure there is clearance on all sides of the shackle.

**Part Number: SSA50**

**Product Line: SUPERSPRINGS**

**Page 2**

Questions or Concerns?

Scan here:



or visit:  
[superspringsinternational.com](http://superspringsinternational.com)

**SAFETY NOTICE:** We recommend installation be done by a professional or persons with sound mechanical knowledge.

**WARNING:** These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

**Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.**

**BEFORE INSTALLATION:** Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

**DURING AND/OR AFTER INSTALLATION:** Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.01 | OCT 2023

PART NUMBER  
**SSA50**



**INSTALLATION**

**Shackle Attachment Rear** – Rotate the rear shackles legs down on both sides of the leaf spring. Using a SuperSprings Installation Tool or other high capacity clamp(s), compress the SuperSprings and factory leaf pack together. Place the Sleeve [ITEM G] and the Roller [ITEM H] between the Shackles and align with desired preload holes. Secure with  $\frac{3}{4}$ -10 x 5" Hex bolt [ITEM M] and  $\frac{3}{4}$ -10 Lock Nut [ITEM L] as seen in Fig. 2. Torque to 35 ft. lbs.

9. Secure Lock-down Hardware – Tighten 3/8 Locking Flange Nuts [ITEM E] evenly and securely. Do not over tighten or distort plate shape to excess.

10. Repeat steps 3 through 9 on the other side.

11. Lower the vehicle – elevate chassis, remove the jack stands, lower to the ground. Remove wheel chocks from front wheels.

12. Final Check – Check the position of the SuperSprings ensuring for correct hardware application and orientation. Observe all hardware ensuring for static and dynamic interference clearances. Recheck all hardware to ensure it is securely tightened.

**NOTE:** After 200-500 miles of driving, recheck all hardware again for tightness.

13. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

**FIGURE 1**



**FIGURE 2**



**Part Number: SSA50**

**Product Line: SUPERSPRINGS**

**Page 3**

Questions or Concerns?

Scan here:



or visit:  
[superspringsinternational.com](http://superspringsinternational.com)

**SAFETY NOTICE:** We recommend installation be done by a professional or persons with sound mechanical knowledge.

**WARNING:** These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

**Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.**

**BEFORE INSTALLATION:** Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

**DURING AND/OR AFTER INSTALLATION:** Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.01 | OCT 2023