




# Installation Instructions: N-Fab Podium Nerf-Steps

HPF1790CC-TX / HPF1790CC-SS

2017


F-250/350 CREW CAB

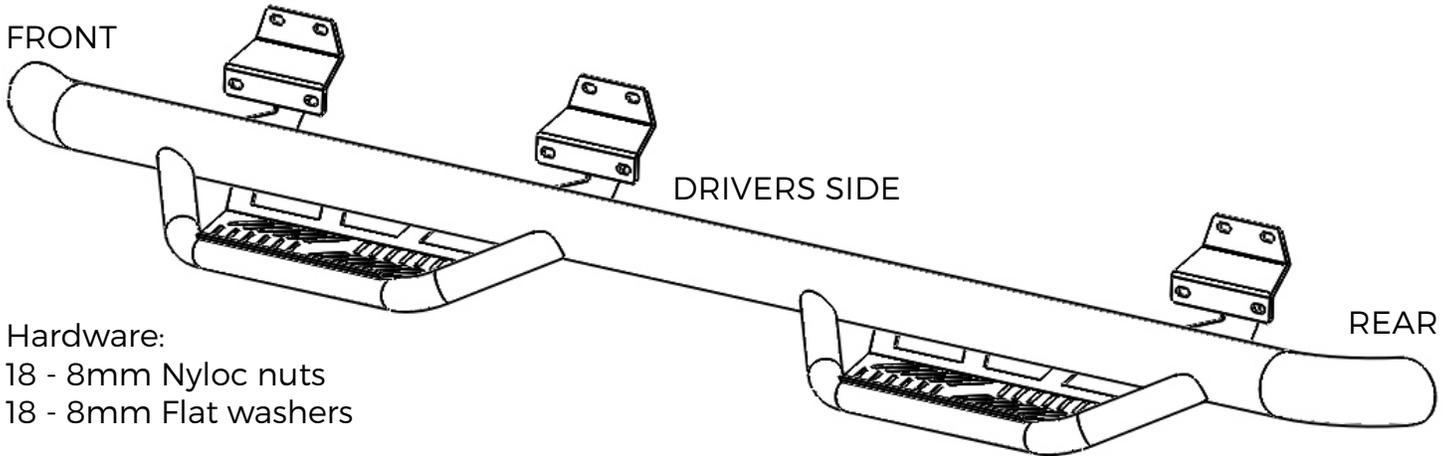

Hardware:  
18 - 8mm Nyloc nuts  
18 - 8mm Flat washers

**STEP 1:**

Identify the driver and passenger bars. The center bracket is closer to the front of the truck.

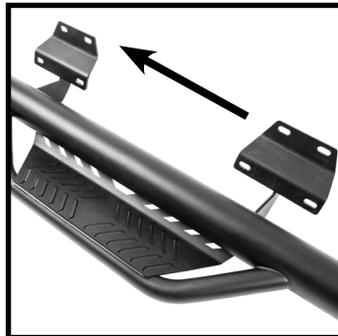

**STEP 2:**

Each mounting bracket consist of 4 mounting holes, you will use 3 of the holes to mount each bracket to the truck. You will notice the top stud is to the right on some and to the left on others.



**STEP 3:**

Remove OE boards if equipped then locate mounting studs. Clean any dirt and debris from mounting studs and location.



**STEP 4:**

Carefully place step onto the studs. Add washers and begin hand tightening nuts. Best to have a assistant to lift and hold board in place.



**STEP 5:**

Begin tightening nuts in a alternating pattern. **Avoid using power or air tools.** Over tightening could stripe or break the OE studs.



**STEP 6:**

Tighten to 20ft lbs torque to secure the board to the truck. Repeat the same procedure to the other side.



N-FAB Inc.

281-880-6322 | 866-806-6322 (Toll Free) info@n-fab.com