

TEMPLATE T-594


Effective date: May 15, 2026
Supercedes: All Previous

NOT TO SCALE

ROCKWOOD®
ASSA ABLOY

Experience a safer
and more open world

ROCKWOOD 594 ROLLER LATCH

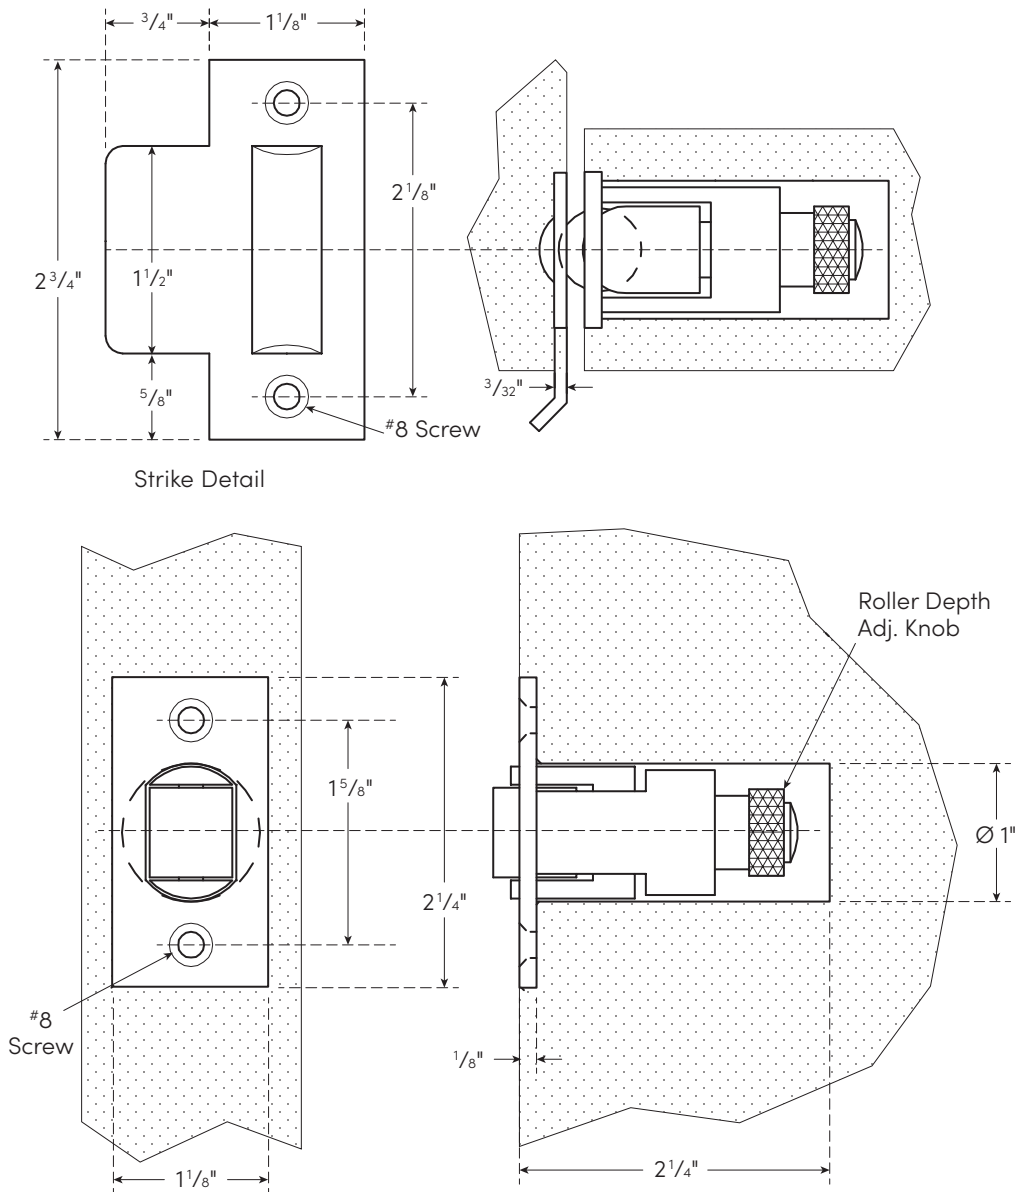

The roller latch can be mounted into the door and the strike into the frame or the strike can be mounted into the door and the roller latch into the frame depending on individual choice. Side jamb or header mounted.

Drill $\varnothing 1"$ hole x dp. $2\frac{1}{4}"$ for roller latch and mortise W $1\frac{1}{8}"$ x H $2\frac{1}{4}"$ x dp. $\frac{1}{8}"$ for face plate.

Mortise strike W $1\frac{1}{8}"$ x H $2\frac{3}{4}"$ x dp. $\frac{3}{32}"$ mortise W $\frac{1}{2}"$ x H $1\frac{3}{4}"$ x dp. $\frac{7}{32}"$ center section for roller groove.