
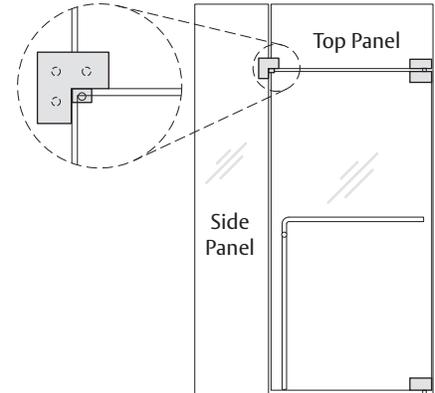


PFT-60 SideLite Transom Patch w/Stop Installation Instructions


For Installation Assistance, Call 855.594.6989 • www.assaabloyglass.us

Tools Needed:
Torque Wrench and Bit
5mm Hex Wrench

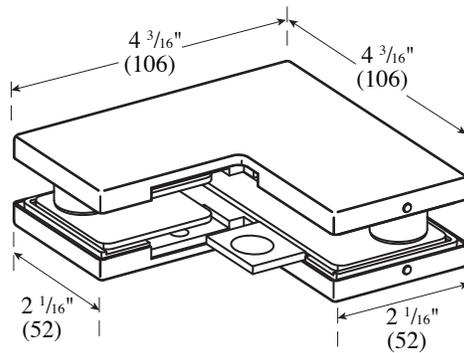

NOT TO SCALE

Parts Included

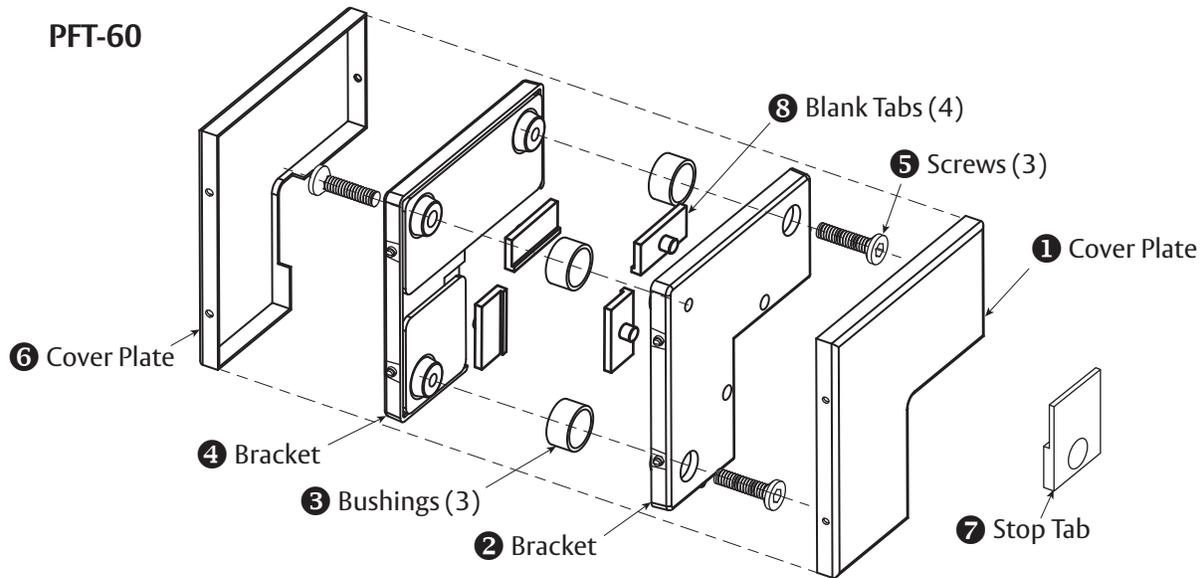


PFT-60 Parts List

1	Cover Plate
2	Bracket
3	Bushings (3)
4	Bracket
5	1 1/16" - M6 x 27 Screws (3)
6	Cover Plate
7	Stop Tab — PF-INS002
8	Blank Tabs (4)

3. Fasten Support Brackets


Make sure the surface is thoroughly cleaned and remove all screws.

- Insert the three Bushings **3** into prepped $\frac{13}{16}$ " (20 mm) diameter holes.
- Place Bracket **2** into prepped area of glass, join Bracket **4** from the other side. Insert Screw **5** into Bracket **4** and tighten with 5 mm hex wrench to hold Brackets together. Do not tighten completely to allow for adjustments throughout installation.
- Insert two Screws **5** into Bracket **2**, align fitting to desired position. Torque both Screws to 12 nm. Then tighten Bracket **4** Screw to 12 nm.

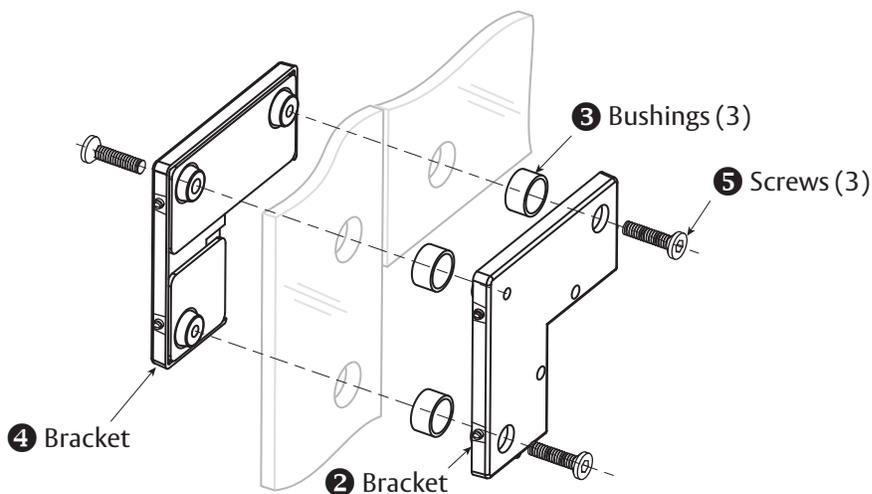

4. Adhere Cover Plates

- Remove adhesive strip paper on both Brackets **2** & **4** to adhere Cover Plates **1** & **6**.
- Hook Cover Plates **1** & **6** over hinge side locking pins.
- Push in spring loaded locking pin on opposite side of Bracket.
- Snap on Cover Plates.

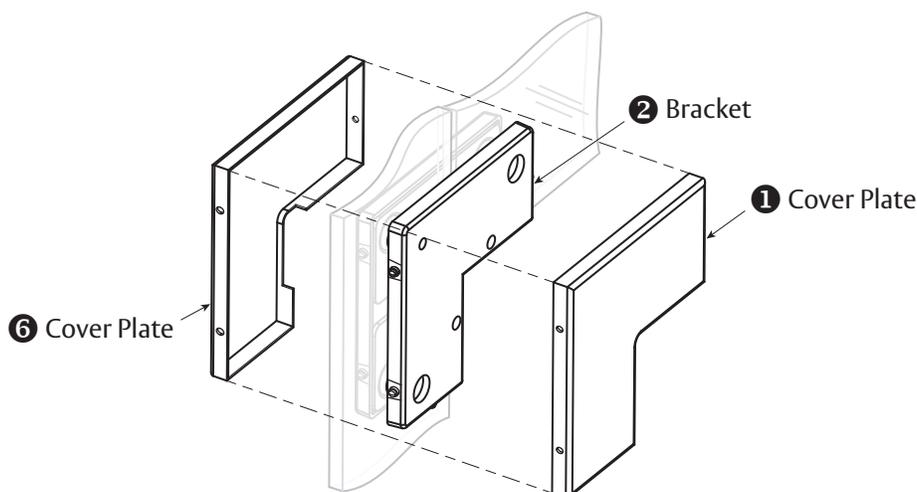

ASSA ABLOY

The global leader in
door opening solutions

Copyright © 2017, ASSA ABLOY Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Inc. is prohibited.

PFT-60 - 06/17

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience

ASSA ABLOY

www.assaabloyglass.us

USA:
ASSA ABLOY Glass Solutions
Rockwood, PA 15557
Phone: 855.594.6989